

DXIONCF

08/54647/0 Issue 3

As with all portable heating appliances: This product is suitable only for well insulated spaces or occasional use.



This product complies with all the required European and UK Product Safety, Electromagnetic Compatibility and Environmental Standards. They are fully compliant with the LVD, EMC, RoHS and Eco Design Directives and Regulations.

Important Safety Advice

IMPORTANT : THESE INSTRUCTIONS SHOULD BE READ CAREFULLY AND RETAINED FOR FUTURE REFERENCE

DO NOT COVER or obstruct the air inlet and outlet openings in any way.

IMPORTANT: If the mains lead of this appliance is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

IMPORTANT: To reduce the risk of electric shock, the plug is intended to fit in a standard polarized 13Amp socket outlet, only plug the appliance directly into a proper electrical outlet.

IMPORTANT Children cannot recognize the hazards associated with the usage of electrical appliances. For this reason, always supervise children when they are near the unit. These appliances can be used by children aged from 3 and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

IMPORTANT: Children aged from 3 years and less than 8 years shall only switch on/off the appliance if it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

WARNING: To avoid danger of suffocation please remove all packaging materials particularly plastic and EPS and keep these away from vulnerable people, children and babies.

WARNING: To avoid the risk of accidental strangulation from the supply cord all children and vulnerable people must be supervised when in the vicinity of the product whether it is working or not.

The socket-outlet must be accessible at all times to enable the mains plug to be disconnected as quickly as possible.

This instruction leaflet belongs to the appliance and must be kept in a safe place. If changing owners, the leaflet must be surrendered to the new owner.

The socket outlet must be accesible at all times to enable the mains plug to be disconnected as quickly as possible.

ALWAYS unplug the tower fan before moving it or cleaning it. Be sure to pull by the plug and not the cord when un-plugging the appliance.

NEVER drop or insert any object into any openings.

DO NOT use this appliance until the base is properly assembled and it is standing upright supported on and by its base only. Do not use lying down or lying at an angle against anything.

DO NOT immerse in water/other liquids or use near water to protect against electrical hazards.

WARNING: Keep the cord out of heavy traffic areas to avoid fire hazard.

NEVER put the cord near heat sources such as radiators, stoves or heaters.

DO NOT cover cord with carpeting, throw rugs, runners, or similar coverings and **DO NOT** route cord under furniture or appliances.

IMPORTANT: Use the appliance only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock or injury to persons.

DO NOT operate any appliance with a damaged cord or plug, if motor fan fails to rotate, after the appliance malfunctions, or if it has been dropped or damaged in any manner. Contact Customer Service for assistance

DO NOT use outdoors.

DO NOT place anything on top of unit.

DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.

WARNING: To reduce risk of fire or electric shock, do not use this fan with any solid-state speed control device.

WARNING: Keep batteries out of reach of children, dispose of used button batteries immediately and safely.

WARNING: The remote control for this unit contains a small battery. To avoid risk of choking, keep this remote away from children and do not swallow the battery. If the battery is swallowed seek medical advice at once.

 
DO NOT pull, carry or move the appliance using the power cable.

This instruction leaflet belongs to the appliance and must be kept in a safe place. If changing owners, the leaflet must be surrendered to the new owner.

How to assemble the base

The base of the tower fan comes in two parts, each part joins together and fits around the oscillation base of the tower. The two parts have interlocking holes and bosses which easily slide/fit into each other when aligned. The back half has cable hooks and a cut-out on the edge to allow the power supply cord to exit flush with the bottom of the base.

1. First attach the back half of the base, aligning the holes in the base with the screw holes in the back side of the oscillation base of the tower, feed the power cord under the two hooks and through the hole at the edge.
2. Then align the bosses on the front half of the base with the holes on the back half and slide them together against the bottom of the tower.
3. Secure the base to the bottom of the tower with the four wing head screws supplied, two through the front half and two through the back half.

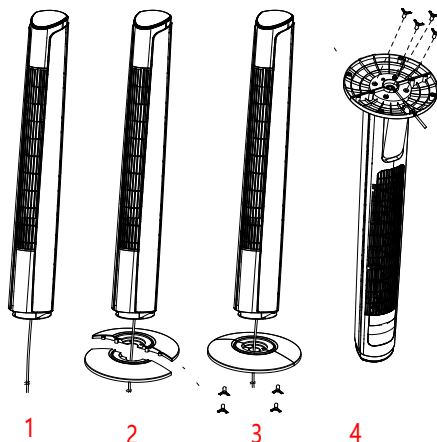


(Figure 1)

4. The product can now be stood upright on its secured base with the cable passing out the rim at the back flush with the standing surface.

Remote Control

 The remote control for the appliance comes complete with a CR2025 3V battery fitted. Before using the remote, please pull out the plastic insulation tab to connect the battery to the remotes circuit. To replace the battery simply unclip and remove the battery cover on the back and replace the battery, then carefully refit the cover and snap it into place.




(Figure 2)

Technical Specification


DXIONCF	Symbol	Value	Unit
Maximum Fan Flow Rate	F	22.45	m ³ /min
Fan Power Input	P	36.52	W
Service Value	SV	0.67	(m ³ /min)/W
Standby Power Consumption	PSB	0.584	W
Fan Sound Power Level	LWA	59	dB(A)
Maximum Air Velocity	c	2.646	m/s
Rated Voltage	V	220 - 240	V
Rated Frequency	Hz	50	Hz
Measurement Standard for Service Value	IEC 60879:1986		

Operating Instructions

 This TOWER FAN can be operated using the manual controls located on the top of the TOWER FAN (as shown in Fig. 3 below) or by using the remote control (shown in Fig. 2 previously) supplied with the product.

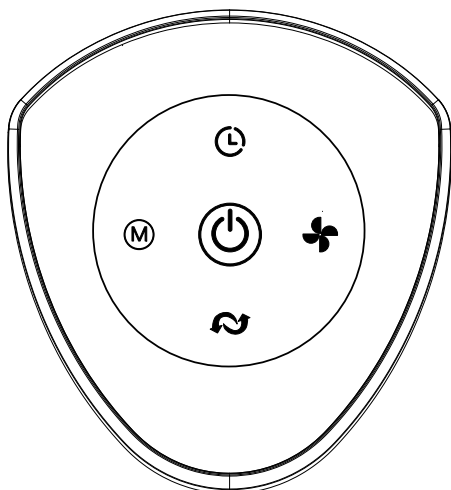


(Figure 3)

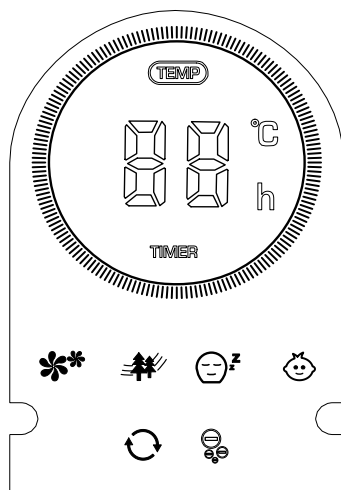 


(Figure 4)

Place the fan on a stable flat surface. Plug the cord set into a 220-240V~A.C. electrical outlet. When the fan is plugged in the current room temperature will be displayed on the display panel.


STANDBY

Pressing the 'STANDBY'  button turns the fan on; Pressing the button again will turn the fan off.


SPEED


The fan speed can be adjusted to the desired level: low (I), medium (II), or high (III) by pressing the 'SPEED'  button repeatedly until the speed required is displayed on the LED panel (shown in Fig. 4).


MODE

Pressing the 'MODE'  button will change the operation of the fan between NORMAL, NATURAL, SLEEP and CHILD mode, the symbol for the mode selected will appear on the LED display panel as indicated in the following description:


In NORMAL Mode , the fan will run continuously at whatever fan speed selected.

In NATURAL Mode , the fan will run at high speed for 15s, then change down automatically to middle speed for 15s and finally change down to low speed automatically for 15s before cycling back up to high speed. The fan will then start the same automatic speed changing cycle of operation again and continuing to run this described way until manually switched off.


If SLEEP Mode  is selected at high speed, the fan will work at high speed for 30 mins, then automatically change down to medium speed for 30 mins and finally change down to run at low speed and it will continue to run that way until manually switched off. If sleep mode is selected at medium speed it runs for 30 mins at medium speed then switches down to low speed and continues to run. If selected at low speed it just continues to run at low speed until switched off. **Note: that display always turns off after 30s.**

If EASY Mode , is selected the fan will start oscillating, the ioniser will switch on and the runback timer will auto-set to 3 hours, the fan will initially run at high speed for 15 minutes, then change down automatically to middle speed for 15 minutes and then automatically change down to low speed, it will continue to run at low speed until manually switched off. The oscillation can be switched off in this mode by pressing the OSC button once.


TIMER





The fan is equipped with a runback timer  that allows you to set its length of operation from 1 hour to 12 hours.

OSCILLATION


Pressing the 'OSC' button  once will start the oscillation function, the symbol is displayed on the LED panel when it is selected/on, to stop press the OSC button again.

IONISER

The Ioniser function is only selectable by pressing the 'ION'  button on the remote control, the "ION" symbol is displayed on the LED panel when it is selected/on, to stop the Ioniser function press the 'ION' button again on the remote. The ioniser discharges negative ions in the air that help to combat airborne impurities and help create fresher cleaner air.

 
NB - If the fan speed varies randomly automatically you have selected NATURAL  mode which simulates natural breeze conditions. THIS IS NOT A FAULT. To de-select this operation please press MODE button  until NORMAL mode  is lit and only use the SPEED selection button  to change and select the fan speed you require (Low / Med / High).

Display LED

Can be switched off temporarily by pressing the DIM button on the remote or by pressing and holding the SPEED  button on the control panel for more than 3 seconds, the display will light up again once any control button is activated.

Adjusting the Angle of Air Output.

The Tower Fan can be manually adjusted to change the direction of the air flow, with the Tower vertical the air comes out horizontally, simply apply pressure backwards at the top of the Tower and the angle will change until it reaches its limit at an angle of approximately 7° to the vertical with the air flow now directed upwards from the horizontal. Applying pressure forward to the top of the Tower will readjust it back to its vertical position again. (See FIGURE 5).

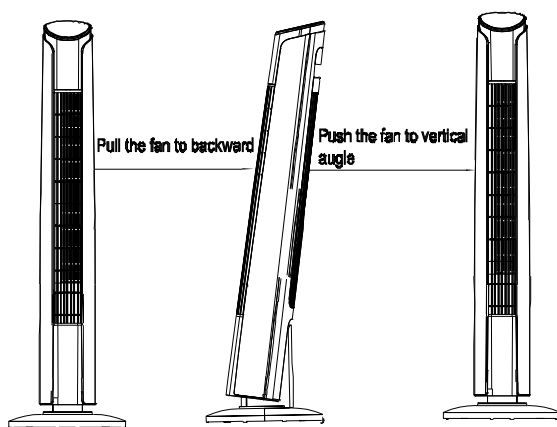


(Figure 5)

Cleaning and Recycling

WARNING ALWAYS DISCONNECT FROM THE POWER SUPPLY BEFORE CLEANING THE APPLIANCE

 The fan should be cleaned at least once every two months as dust may accumulate on the rear grill cover and wind wheel, which would affect performance. Do not use detergents, abrasive cleaning products or polish of any kind on the appliance. Wipe with a dry cloth to remove dust and a damp cloth (not wet) to clean off stains. Be careful not to allow moisture into the appliance. Use a vacuum cleaner to remove any fluff which does accumulate.

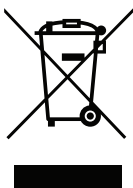

For electrical products sold within the European Community. At the end of the electrical products useful life it should not be disposed of within household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country. If you don't intend to keep the packaging of this product for later use or storage, please dispose of it in an eco-friendly way, please dispose of it in your recycling bin or nearest recycling facility, thank you.

Guarantee

What does a Dimplex Guarantee cover?

Dimplex products deliver reliable service for normal, household use in domestic settings. All Dimplex products are individually tested before leaving the factory.

If you are a consumer and you experience a problem with your Dimplex product, which is found to be defective due to faulty materials or workmanship within the Guarantee Period, this Dimplex Guarantee will cover repair or - at the discretion of Dimplex – replacement with a functionally equivalent Dimplex product.

Your product is under guarantee for 1 year from the date of purchase or the date of delivery of the product, if later. The 1 year guarantee is extended for an additional 2 years when you register the product with Dimplex, within 28 days of purchase. If you do not register the product with Dimplex within 28 days, your product will remain guaranteed for 1 year only. To validate your extended guarantee register with us online at: <http://register.dimplex.co.uk>. N.B. Each qualifying product needs to be registered with Dimplex individually. Please note that the extended guarantee is only available in the UK and Ireland.

The Dimplex Guarantee is conditional upon you providing the original purchase receipt as proof of purchase. Please therefore retain your receipt as proof of purchase.

If you do experience a problem with your Dimplex product please call the Helpline on +44 [0]344 879 3588 or visit <https://www.dimplex.co.uk/support>. For ROI please email serviceireland@glendimplex.com or call +353(0)1 842 4833. We will need details of your Dimplex product and a description of the fault which has occurred. Once we receive your information and proof of purchase we will contact you to make the necessary arrangements. If your Dimplex product is not covered by this Dimplex Guarantee there may be a charge to repair your product. However, we will contact you for agreement to any charges before any chargeable service is carried out.

What is not covered by a Dimplex Guarantee?

The Dimplex Guarantee does not cover any of the following:

Any fault or damage to your Dimplex product due to faulty materials or workmanship occurring outside the Guarantee Period. Normal wear and tear including parts that might wear out over time or consumables, such as filters.

Any fault or damage occurring to any pre-owned Dimplex product or to any other equipment or property.

Accidental damage to your Dimplex product or damage to your Dimplex product from external sources (for example, transit, weather, electrical outages or power surges).

Fault or damage to your Dimplex product which is:

- Not due to faulty materials or workmanship or which is due to circumstances outside Dimplex's control.
- Caused by use of your Dimplex product for anything other than normal domestic household purposes in the country where it was purchased.
- Caused by any misuse, abuse or negligent use of the Dimplex product, including but not limited to any failure to use it in accordance with the Operating Instructions supplied with the product.
- Caused by any failure to assemble, install clean and maintain your Dimplex product in accordance with the Operating Instructions supplied with the product unless this was carried out by Dimplex or its authorised dealers.
- Caused by repairs or alterations to your Dimplex product not carried out by Dimplex service personnel or its authorised dealer(s).
- Caused by use of any consumables or spare parts for your Dimplex product which are not Dimplex - specified.

Terms and Conditions

The Dimplex Guarantee is valid for 1 calendar year, plus 2 if registered, from the date of purchase of your Dimplex product from a recognised retailer in the country of purchase and use, or the date of delivery of the product if later, always provided the original receipt has been retained and is produced as proof of purchase.

You must provide to Dimplex or its authorised agents on request the original receipt as proof of purchase and - if required by Dimplex - proof of delivery. If you are unable to provide this documentation, you will be required to pay for any repair work required. Any repair work under the Dimplex Guarantee will be carried out by Dimplex or its authorised dealer(s) and any parts that are replaced will become the property of Dimplex. Any repairs performed under the Dimplex Guarantee will not extend the Guarantee Period.

The Dimplex Guarantee does not entitle you to recovery of any indirect or consequential loss or damage including but not limited to loss or damage to any other property.

The Dimplex Guarantee is in addition to your statutory rights as a consumer and your statutory rights are not affected by this Dimplex Guarantee.

Contact Dimplex

A brand of Glen Dimplex UK Limited, trading as Dimplex Dimplex Heating & Ventilation

If you have any questions about what the Dimplex Guarantee covers and does not cover or how to claim under the Dimplex Guarantee, please contact us:

Glen Dimplex Heating & Ventilation, Grange Drive, Hedge End, Southampton SO30 2DF

Telephone: 0344 879 3588

Visit: www.dimplex.co.uk