





Reporting Screen Guide - Series G


13545-2

Front Screen

-  This text line indicates the Quantum heater software revision.
-  Desired Room Temperature Set Point (set by rotating the Selector Dial clockwise / anticlockwise to increase / decrease the temperature set point respectively. The temperature range is from 14 to 26°C).



-  The counter of available Off-Peak Supply to the heater, value in minutes. NOT the heater charge time.
-  Timer Mode. e.g. 'Home all Day', or 'Out all Day', (set by the customer from within the Timer Mode menu).

-  Comfort On = Fan Enabled / Comfort Off = Fan disabled. This text line only indicates if the heater is within the Programmed time period (Comfort period), or outside it. Controlled by the programmed On/Off (Comfort On / Off) times (In Timer settings) Fan is only enabled during the 'Comfort On' times, and only when the room temperature is below the 'Set Point' temperature set on the display.

Report Screen

Line A: Engineering function only (ignore)

LINE B : Run (Charge) Time Calculated, minutes. The time Quantum charged the current day.

Line C: Current Room sensor temperature / Room sensor temperature at midnight.

Line D: Programmed Heating Hours (Comfort hours), hours. Total number of heating hours per day.

Line E: Current U.I. temperature set point/ U.I. temperature set point at midnight.

Line F: Engineering function only (ignore)

Line G: Engineering function only (ignore)

Line H: Run (Charge) time history (yesterday's value) / Run (Charge) time history (day before yesterday value).

