


Xpelair Smooth Fan Range 93346AA - XS100S Xpelair Smooth Standard 4" Fan 93347AA - XS100T Xpelair Smooth Timer 4" Fan Installation and Maintenance Instructions

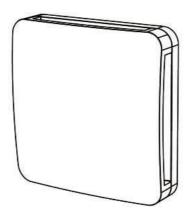

- Do read the entire instruction leaflet before commencing installation.
- Do install each fan with a means for disconnection in all poles in the fixed wiring.
- Do make sure the mains supply is switched off before attempting to make electrical connections or carry out any maintenance or cleaning.

Please leave this leaflet with the fan for the benefit of the user.

UK customers:

If you have any queries before or after installing this product call the Xpelair Technical Hotline +44 (0) 844 372 7766. Our engineers are there to help you during normal office hours. Or you can fax at all other times on +44 (0) 844 372 7767.

Customers outside the UK should contact your local Xpelair distributor.

This appliance is intended for connection to fixed wiring.

Check that the electrical rating shown on each fan matches the mains supply. **THE APPLIANCE IS DOUBLE INSULATED AND DOES NOT REQUIRE AN EARTH CONNECTION.**


All installations must be supervised by a qualified electrician. Installations and wiring must conform to current IEE Regulations (UK), local or appropriate regulations (other countries).

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

Cleaning and maintenance of the appliance shall not be made by children.


Where to locate the fan.


- Locate it as high as possible.
- At least 110mm from the edges of the mounting surface to the centre of the hole.
- As far away as possible from and opposite to the main source of air replacement to ensure airflow across the room (e.g. opposite the internal doorway).
- Near the source of steam or odours
- Not where ambient temperatures are likely to exceed 50°C.
- If installed in a kitchen fans must not be mounted immediately above a cooker hob, or eye level grill.
- If installing in a room containing a fuel burning device which has a nonbalanced flue, it is the installer's responsibility to ensure that there is enough replacement air to prevent fumes being drawn down the flue when the fan is operating up to maximum extract. Refer to Building Regulations for specific requirements.
- Exhaust air must not be discharged into a flue used for exhausting of fumes from appliances supplied with energy other than electric. Requirements of all authorities concerned must be observed for exhaust air discharge and intake flow rates.
- Not suitable for use in possible chemical corrosive atmospheres.

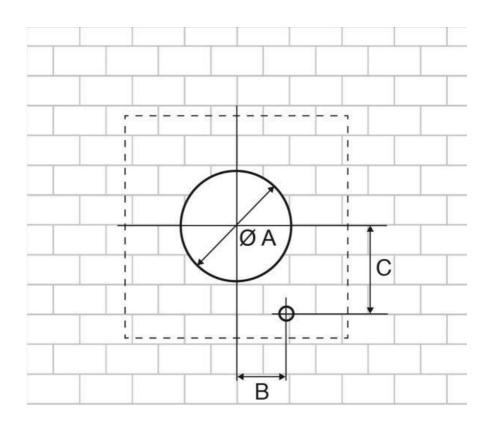


	ØA	В	С
10/4"	100,0	37,20	64,50



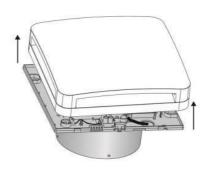


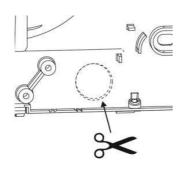

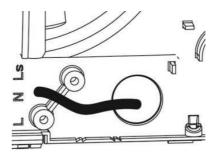


A means for disconnection in all poles must be incorporated in the fixed wiring in accordance with wiring regulations

 
XS100S



XS100T

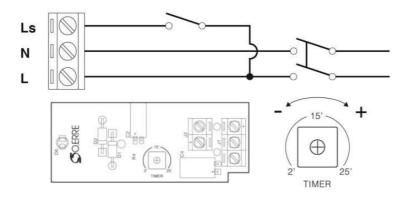

For fixed wiring circuits the protective fuse for the appliance must not exceed 5A

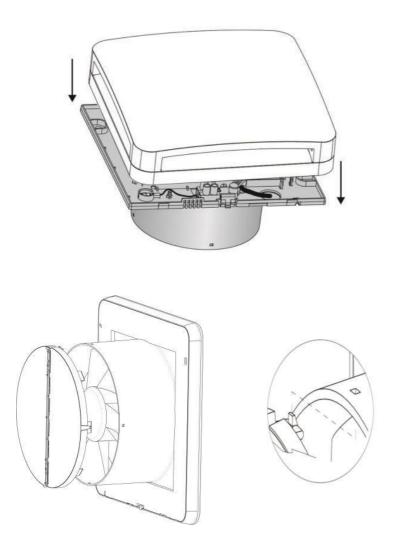

Guarantee.

UK only:

We, Redring Xpelair Group Limited, provide a guarantee against faulty parts and manufacture for a period of 2 years from the date of purchase. In the unlikely event of a product breakdown during the guarantee period the product should be returned to the place of purchase or to Redring Xpelair Group Limited.

Exclusions:

- This guarantee does not cover compensation for the loss of the product or consequential loss of any kind.
- Damage or defects to the product arising from incorrect installation or lack of maintenance.
- Transportation costs.

This guarantee does not affect your statutory rights

Technical advice and service

United Kingdom

Xpelair have a comprehensive range of services including:

- Free technical advice helpdesk from Engineers on all aspects of ventilation.
- Free design service, quotations and site surveys.
- Service and maintenance contracts to suit all requirements.

International.

- Guarantee: Contact your local distributor or Xpelair direct for details.
- Technical Advice and Service: Contact your local Xpelair distributor.

NOTE:

Please be prepared to tell us the exact device type and serial number S/N, for your ventilation unit so that we can process your enquiry, customer service order or complaint correctly. You can find this information on the rating plate located next to the display and control panel on the main cover of the ventilation unit.

Environment and Disposal

Be conscious about the environment and help to protect it.

Disposal of packaging

The ventilation unit has been packaged carefully to protect it from damage during transport. The transport packaging consists of recyclable raw materials.

Please ensure to dispose of it in an environmentally responsible way.

Disposal of the device

Devices marked with this symbol must not be disposed of as normal residual waste. The device must be collected separately including accessories, empty batteries and rechargeable batteries. The disposal must be correct and in accordance with the applicable laws and regulations.

Contact Details Glen Dimplex Ltd,

Millbrook House, Grange Drive, Hedge End, Southampton,

SO30 2DF

Telephone: +44 (0) 344 879 3588

Email: customer.services@glendimplex.com

Web: www.xpelair.co.uk

Glen Dimplex Europe Limited,

Airport Road, Cloghran, Co. Dublin, K67 VE08

Telephone: +353 (0)1 8523400

Email: serviceireland@glendimplex.com

© Glen Dimplex Glen Dimplex reserves the right to alter product specification or appearance without notice).





