

# Changing a Transducer



Scan here to watch our video  
"How to change a transducer" online



1. Switch the fire off on the unit and at the mains.
2. Remove the fuel bed, water bottle and the nozzle assembly by twisting the red twist clips either side (left hand clockwise & right hand anticlockwise) or push release clips on the front of the nozzle assembly. **IMAGE 1.**
3. Unplug the old transducer. **IMAGE 2.**
4. Place the new transducer into the sump, ensuring that the transducer is correctly placed - the tab on the transducer should be lined up with the moulded recess in the sump and the unit should be sitting flat. **IMAGE 3.**
5. Join the cable to the connector on the sump on the right hand side. **IMAGE 4.**
6. Ensure that the cable is not placed above the disc on the transducer unit. **IMAGE 5.**
7. To prevent the cable becoming pinched between the nozzle and the sump, place the cable in the provided slot in the right hand side wall of the sump. **IMAGE 5.**
8. Replace the sump nozzle and secure it by turning the two red/black tabs by 90 degrees (left hand anti clockwise and right hand clockwise, or clicked back into place if your fire has the push fit clips). **IMAGE 6.**
9. Once everything has been put back together, please wait for 5 minutes before turning the fire back on at the mains and at the fire. This will allow the fire to reset and allow the fire to function correctly.

1



2



3



4



5



6

