



A Class Air Source Heat Pump

A8M / A12M / A16M Installation Manual



IMPORTANT – THESE ORIGINAL INSTRUCTIONS MUST BE LEFT WITH THE USER AFTER INSTALLATION, INCLUDING THE HAND-OVER FORM AT THE BACK, WHERE THE INSTALLER SHOULD RECORD KEY INFORMATION DURING COMMISSIONING. UNAUTHORISED REPRODUCTION OF THIS DOCUMENT IS PROHIBITED.

8/60472/0
Issue 1.05

Table of Contents

Overview - Air to Water Heat Pump	1
1 Introduction	5
1.1 Scope of Delivery	5
1.2 Safety Warnings	6
1.2.1 Handling and Transport	6
1.2.2 General	6
1.2.3 Safety	6
1.2.4 Maintenance	7
1.2.5 Electrical Warnings	7
1.2.6 Intended Use	7
1.2.7 Legal	8
1.2.8 Connection to the Grid - Notifying the DNO (Distribution Network Operator)	8
1.2.9 Heat Pump Sizing	8
2 Preparation	9
2.1 Site Selection	9
2.1.1 Location of Heat Pump	9
2.1.2 Location of Indoor Components	9
2.1.3 Heat Pump Placement and Fixing	10
3 Installation	12
3.1 Plumbing Information	12
3.1.1 Pipe Sizing Information	12
3.1.2 Buffer Tank	13
3.1.3 Metering for the Domestic Renewable Heat Incentive	13
3.2 Plumbing - Installation	14
3.3 Electrical Information	14
3.3.1 Access to Electrical Connections - Opening the Heat Pump	17
3.3.2 Electrical Connections - Power and Communication Cable Heat Pump Connections	18
3.3.3 Modbus Cable Information	20
3.3.4 Opening and Installing the User Interface	20
4 Heat Pump Controller / Commissioning	21
4.1 Set to Work	21
4.1.1 Starting the Heat Pump in Cold Weather	21
4.1.2 Bivalent Mode (Alternative Back-Up Heat Sources)	22
4.1.3 Operating Modes	22
4.2 Commissioning	23
4.2.1 Waterside Check	24

Table of Contents

4.2.2	Temperature Check	24
4.2.3	Electrical Connections (SH)	25
4.2.4	Water Flow Check	25
4.2.5	DHW Setup	26
4.2.6	Electrical Connections (DHW)	26
4.2.7	DHW Test	27
4.2.8	Disinfection (Thermal)	29
4.2.9	Weather Compensation	29
4.2.10	Heating Curves	29
4.2.11	Comfort Level	30
4.3	Additional Installer Menu Options	31
4.3.1	Message Log	31
4.3.2	Output Tests	31
4.3.3	Defrost	32
4.3.4	Operating Data	32
4.3.5	History	32
4.3.6	Service Menu	32
5	System Health Check / Maintenance	33
	APPENDICES	34
A	Technical Specifications	35
B	Refrigeration Cycle diagram	36
C	Schematic Zone Diagrams - Legend	37
D	Schematics 1, 2, 3 & 4 : Space Heating Only	38
E	Schematics 5, 6, 7 & 8 : Zone Space Heating & Domestic Hot Water	39
F	Schematics 9, 10, 11 & 12 : Bivalent Space Heating	40
G	Schematics 13, 14, 15 & 16 : Bivalent Zone Space Heating & Domestic Hot Water	41
H	Wiring Centre Electrical Connections - with A-Class Cylinder	42
I	Jumper Information for Alternative Wiring Configuration	43
J	Controller Cable Connection`s	44
K	Installer Menu Flow Chart	45
	Installer Hand-Over Form	46
	Certificate of Conformity	47

Overview - Air to Water Heat Pump


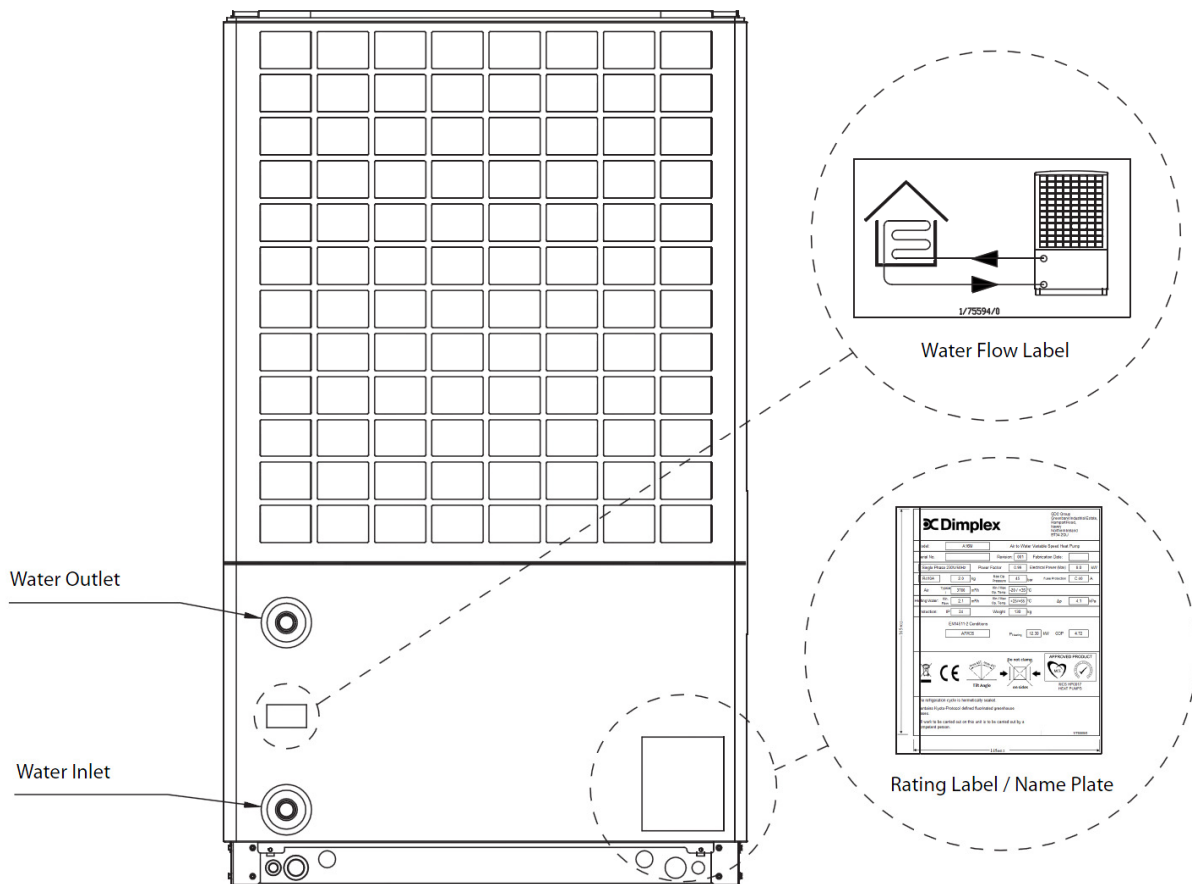


Figure 1(a): Connection and label locations and details

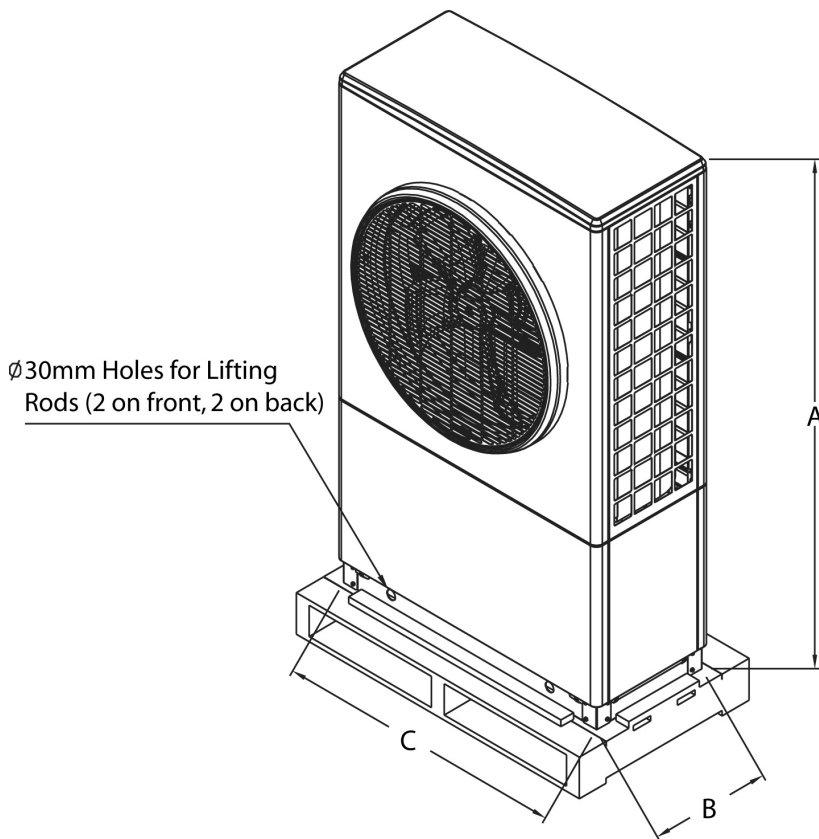















Model	A	B	C
A8M	1260mm	400mm	930mm
A12M / A16M	1571mm	400mm	930mm






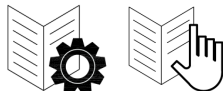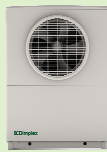


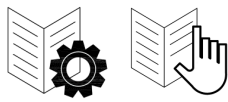



Volume of 8kW Heat Pump = 0.47m³

Volume of 12/16kW Heat Pump = 0.59m³

Figure 1(b): Lifting rod hole positions and heat pump external dimensions

Pack 1 - Space Heating and Dimplex A-Class Cylinder

A Class Heat pump		A8M / A12M / A16M
Hydraulics Kit A which includes:		ACCHYPK
User interface (UI)		1754600
Pump - UPM GEO 25-85 180 (1500mm cable)		1755740
2 x Circulation Pump Gate Valve 1 ^{1/2} "swivel to 28mm comp 2 x Washer 30.1x21x2mm		1756090
ERES straight Spring loaded by-pass valve (22mm comp fitting)		1755780
3 port diverting valve (28mm comp. fittings)		1755750
Isolation valves (1" swivel BSP to 28mm comp) (1) Flow (2) Return with strainer		Flow 1755760 Return 1755770
4 x Blanking plugs for lifting holes		4592624105
Installation and User manuals/instructions		Installation: 8/60472/0 User: 8/60476/0
Dimplex A Class DHW Cylinder Kit which includes:		
A Class Cylinder with integrated buffer		
Air vent		
Drain		
Safety group DHW side; expansion vessel, hose and bracket, inlet group, tundish		
3 x Copper pipes – Pump to buffer/cylinder		
Pipe connections to coil, pipe, drain and vent, Pipe connections to pump		

Pack 2 - Space Heating and Dimplex A-Class Cylinder		
A Class Heat pump		A8M / A12M / A16M
Hydraulics Kit A which includes:		ACCHYPK
User interface (UI)		1754600
Pump - UPM GEO 25-85 180 (1500mm cable)		1755740
2 x Circulation Pump Gate Valve 1 ^{1/2} "swivel to 28mm comp 2 x Washer 30.1x21x2mm		1756090
ERES straight Spring loaded by-pass valve (22mm comp fitting)		1755780
3 port diverting valve (28mm comp. fittings)		1755750
Isolation valves (1" swivel BSP to 28mm comp) (1) Flow (2) Return with strainer		Flow 1755760 Return 1755770
4 x Blanking plugs for lifting holes		4592624105
Installation and User manuals/instructions		Installation: 8/60472/0 User: 8/60476/0
Wiring centre kit which includes:		
Wiring centre module		049162
(including 1 x Temperature probe (NTC10) for DHW)		
Dimplex Standard Cylinder		

NOTE: CYLINDER REQUIRED FOR PACK 2 INSTALLATION, PLEASE SEE DIMPLEX EC-EAU CYLINDER MANUAL FOR RANGE OF NON A-CLASS CYLINDERS AVAILABLE.

Pack 3 - Space Heating Only		
A Class Heat pump		A8M / A12M / A16M
Hydraulics Kit B which includes:		ACCHYPK
User interface (UI)		1754600
Pump - UPM GEO 25-85 180 (1500mm cable)		1755740
2 x Circulation Pump Gate Valve 1 1/2 "swivel to 28mm comp 2 x Washer 30.1x21x2mm		1756090
3 port diverting valve (28mm comp. fittings)		1755750
Isolation valves (1" swivel BSP to 28mm comp) (1) Flow (2) Return with strainer		Flow 1755760 Return 1755770
4 x Blanking plugs for lifting holes		4592624105
Installation and User manuals/instructions		Installation: 8/60472/0 User: 8/60476/0
Wiring centre kit which includes:		
Wiring centre module		049162
(including 1 x Temperature probe (NTC10) for DHW)		
Accessories		
100L/200L/300L Buffer tank (depending on installation)		025586
2kW buffer immersion element		363610

1 Introduction

Thank you for choosing a Dimplex Heat Pump. The Dimplex A-Class heat pump provides outstanding performance to maximise year-round efficiency, regardless of the weather conditions. It can deliver high output and high temperatures even at low outside air temperatures of -7°C. The sophisticated controller makes the system easy to use and there are many more technological innovations including a scroll compressor that uses enhanced vapour injection.

1.1 Scope of Delivery

Please ensure you check the scope of delivery before signing any delivery documentation. Below is a guideline checklist for what should be contained in each pack. Claims for missing or damaged parts after signing for the delivery will not be accepted.

There are 3 options to select from when installing a Dimplex Heat Pump:

Pack 1 - Space heating and Dimplex A-Class Cylinder

- This pack should contain four boxes;
 - ◆ Heat Pump
 - ◆ ACCHYPK Hydraulics Kit A (contains all of the necessary hydraulic components)
 - ◆ Cylinder
 - ◆ Cylinder Accessories
- A separate wiring centre is not required as the wiring centre is built into the cylinder.

Pack 2 - Space heating and Dimplex Standard Heat Pump Cylinder

- This pack should contain five boxes;
 - ◆ Heat Pump
 - ◆ ACCHYPK Hydraulics Kit A (contains all of the necessary hydraulic components)
 - ◆ Cylinder
 - ◆ Cylinder Accessories
 - ◆ Wiring Centre
- A separate wiring centre is required as the wiring centre is not built into the standard cylinder.

Pack 3 – Space heating only

- This pack should contain three boxes;
 - ◆ Heat Pump
 - ◆ ACCHYPK Hydraulics Kit B (contains all of the necessary hydraulic components)
 - ◆ Wiring Centre
 - ◆ Accessories
- A separate wiring centre is required to wire the circulation pumps and controls.

Details of all packs/components provided are shown on pages 2-4 of this manual.



1.2 Safety Warnings

1.2.1 HANDLING AND TRANSPORT

- When transporting, moving and installing the heat pump, ensure that it is not tilted by more than 45° (in any direction), for any prolonged period of time (see figure 2).

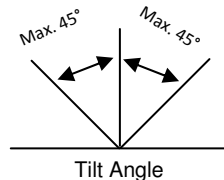


Figure 2: Allowable tilt angle during handling

- Do not attempt to lift the heat pump manually, as it weighs 110-130kg and should only be lifted using the appropriate lifting devices.
- Ensure that there is a clear pathway for a truck to deliver the heat pump as close to the selected location as possible.
- The installer must use a suitable lifting method, in accordance with health and safety regulations.
- Straps must also be used with lifting rods to prevent the heat pump from toppling.

1.2.2 GENERAL

- Installation and any service work on the heat pump may only be performed by an authorised and qualified installer and after-sales service technicians.
- Additional heating may be required if the heat pump is intended to dry out a new or renovated building, as the initial heat load may be higher than the design load.
- Products not installed with the Dimplex hydraulics packs will not be supported by Dimplex. This includes but is not limited to thermal stores.
- All information and instructions regarding how the device is fixed to its supporting plinth can be found in section 2.1.3 of this installation manual.

1.2.3 SAFETY

- The heat pump contains refrigerant at high pressure. Safety measures are in place to avoid system pressure build up.
 - Stage 1: Pressure transducer stops compressor.
 - Stage 2: Pressure switch switches heat pump off. All safety devices reset automatically.
- The heat pump has a multi-layered, software generated alarm management system, which prevents it from running outside its operating limits. If an alarm / message occurs, the heat pump will attempt to take remedial action before causing the system to stop completely if the problem persists. However, the overriding safety feature is the high pressure switch, which de-energises the main contactor supplying power, in accordance with EN378.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

1.2.4 MAINTENANCE

- If the heat pump may be disconnected from the power supply for prolonged periods of time, or where power supplies are susceptible to failure, antifreeze must be added to the system (e.g. mono ethylene glycol at 25% volume to protect down to -14°C).
- Never use cleaning agents containing sand, soda, acid or chloride as these can damage surfaces/components.
- We recommend the installation of a suitable filtration protection system and the use of a corrosion additive for the heating system to prevent the formation of deposits (e.g. oxide and solids) in the condenser of the heat pump. The return isolation valve provided in the hydraulics pack has a built in strainer to help prevent debris entering the condenser and must be fitted.



1.2.5 ELECTRICAL WARNINGS

- Before removing the cover of the heat pump, cylinder or wiring centre, ensure that all electrical circuits are isolated.
- Means for disconnection from the supply mains must be incorporated into the fixed wiring in accordance with the national wiring regulations.
- This device must be installed in accordance with national wiring regulations.
- This device is suitable for mains connection only (230V, 1P&N, 50Hz) and is not suitable for operation with an electrical generator or power modulator, due to possible effects on the quality of the electrical supply. Any attempt to do so will void warranty.
- The local wiring regulations should always be followed paying particular attention to the mixing of low voltage and extra low voltage cabling.
- Ensure the incoming power supply and the distribution board are suitably rated.
- Ensure that the regulations specified by the local electricity supplier have been adhered to.
- All fuse rating and protective overload device information is provided in the wiring label located on the inside of the front bottom panel of the heat pump. For instruction on how to remove this panel please see section 3.3.1.
- The correct earthing (grounding) of the heat pump is of the utmost importance and must be reinforced by
 - Using an earth (ground) wire of at least 10mm², OR;
 - Using two separate earth (ground) wires, both complying with the dimensioning rules as set out by local and national regulations.



NOTE: THE INSTALLATION OF A HEAT PUMP DESIGNATED RESIDUAL CURRENT DEVICE (TYPE B RCD) HAVING A RATED RESIDUAL OPERATING CURRENT NOT EXCEEDING 30mA IS RECOMMENDED, IN ACCORDANCE WITH LOCAL REGULATIONS (BS7671 FOR UK INSTALLATIONS).



NOTE: TWO SEPARATE, DESIGNATED RCD DEVICES SHOULD BE FITTED - ONE FOR THE HEAT PUMP AND ONE FOR THE CYLINDER. THE HEAT PUMP SYSTEM MUST NOT SHARE AN ALREADY EXISTING DOMESTIC RCD DEVICE.



NOTE: THE HEAT PUMP HAS A HIGH LEAKAGE CURRENT AND MUST BE PROPERLY GROUNDED FOR SAFETY IN ACCORDANCE WITH LOCAL AND NATIONAL REGULATIONS REGARDING EQUIPMENT WITH A LEAKAGE CURRENT EXCEEDING 3.5mA.

1.2.6 INTENDED USE

This product is designed to extract heat from outside air to provide energy for a water-based heating system, and is intended for domestic and light commercial use. Any other use beyond that intended by the manufacturer is prohibited. This requires the user to abide by the manufacturer's product information. Please refrain from tampering with or altering the device.

1.2.7 LEGAL

The construction and design of the heat pump complies with all relevant EU directives (see CE declaration of conformity in appendix section).

When connecting the heat pump to the power supply, the relevant EN and IEC standards must be adhered to. Any further connection requirements stipulated by the network operation must also be observed.

When connecting to the heating system all applicable regulations must also be adhered to.



1.2.8 CONNECTION TO THE GRID - NOTIFYING THE DNO (DISTRIBUTION NETWORK OPERATOR)

Before you connect a heat pump to the grid, the necessary permissions must be granted by the distribution network operator. Not obtaining the necessary permissions may result in an unexpected network upgrade charge, and may compromise the integrity of the local supply if a 'disturbing load' is connected to the network.

The required forms are supplied by Dimplex and must be filled in by the heat pump installer alongside the client. We recommend notifying the DNO as early as possible in the planning stage to discuss the project and any additional information. Further information can be found on the Energy Networks website (www.energynetworks.org) or from your local DNO.

1.2.9 HEAT PUMP SIZING

- Ensure that the correct size heat pump has been selected in accordance with the latest version of MIS3005 (for UK installations).
- If a non A-Class heat pump cylinder is being used, ensure that it has been accurately sized with the appropriate coil surface area of the cylinder to match the heat pump's output and flow rate requirements, and that all necessary hydraulic connections have been considered in connecting it to the heat pump system.
- Ensure that suitable heat emitters have been sized in accordance with the Heat Emitter Guide (for UK installation) and selected ensuring a low flow temperature design. To maximise system efficiency it is important to design the system with the lowest flow temperature possible.

2 Preparation

2.1 Site Selection

2.1.1 LOCATION OF HEAT PUMP

- The heat pump must be installed outdoors with adequate clearances for ventilation and maintenance. It is recommended that the heat pump is installed along the property wall, as shown in figure 3.
- There must be a minimum distance of 1m in front of the fan to prevent air re-circulation.
- Positioning the heat pump in a confined space, frost hollow or well will result in reduced heat pump efficiency, as the cold air which is expelled by the fan cannot disperse and may be drawn back into the system. This means that the heat pump may be operating using a lower inlet temperature than what is actually available from the surrounding ambient air, and will therefore run less efficiently.
- The fan should preferably not face prevailing winds to ensure correct air flow through the evaporator.
- Although the heat pump is within noise and vibration regulations outlined in MCS007, it is recommended to avoid positioning it close to bedroom windows, as the fan and compressor may be operational at night.

2.1.2 LOCATION OF INDOOR COMPONENTS

The controller/user interface that is supplied with the Dimplex A-Class heat pump is used as a heat pump controller as well as a heating and domestic hot water (DHW) controller. It is also the preferred option for use as a room temperature control device. The user interface and room thermostats should be installed indoors in a location that is out of reach of children, but where the LCD display can be easily seen (usually 1.2m – 1.7m from the floor).

While only one user interface is currently available per system, there are additional options of either temperature probes or mechanical thermostats, which can be used to control the temperature in up to four zones. Mechanical thermostats provide less control over the heating system, while the temperature probe option allows the heat pump to sense changes in demand and adjust accordingly. The temperature probe option is generally recommended over the mechanical thermostat option.

A zone is defined as the physical area of the home in which temperatures are controlled by each individual device. For example, there might be a user interface installed in the living area, in which case this may be referred to as zone 1. There may also be a temperature probe installed upstairs in the sleeping/bedroom area, which would then be designated as zone 2, and so on. Extra zones are an additional, optional feature of the heating system. The standard package comes with one User Interface and the possibility of four separate zones.

The controller and thermostats should be installed on internal walls in living area to reflect the correct temperature, and away from direct sunlight, drafts (windows and doors) and heat emitters.

LOCATION OF WIRING CENTRE

If a Dimplex A-Class cylinder is used, the wiring centre is built in and pre-wired. If a non A-Class cylinder is used, the wiring centre module must be installed. The wiring centre module is designed to be wall mounted, and it is recommended that it is installed in close proximity to the cylinder to allow for installation of components which require a control cable (modbus) connection, i.e. pump, DHW probe, 3-port valve and heat pump connections.

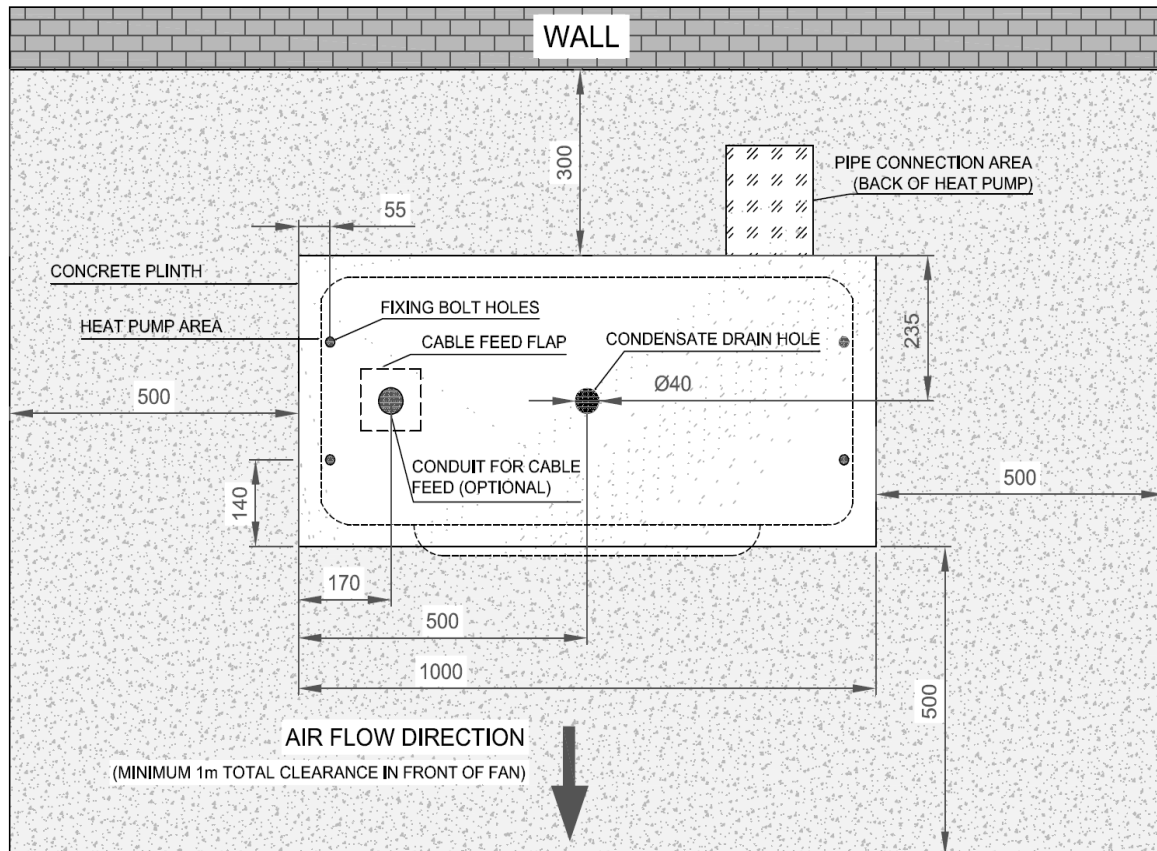


Figure 3: Suggested heat pump layout and minimum access and air flow clearance dimensions (in mm)

2.1.3 HEAT PUMP PLACEMENT AND FIXING

- Approximately 2 litres of condensate water are drained from the system every time a defrost cycle occurs (approximately once every hour in cold and humid weather). Therefore, it is essential that the condensate pipe is fed into a drain or soak away to allow for safe disposal of the excess water, away from footpaths or patios.
- The condensate drain pipe is coiled up inside the heat pump for protection during transportation. In order to access this for installation, the panels will need to be removed (see section 3.3.1).
- The removal of condensate must be secured and the condensate pipe must be kept free from debris and frost. The pipe should be prevented from exposure to the elements, as this may contribute to freezing issues. Freezing of this pipe due to incorrect installation can result in irreparable damage and void warranty.
- The condensate pipe should not run into sewer pipe unless a suitable trap is installed, as fumes may travel into the heat pump and cause corrosion to the evaporator coil.
- The heat pump must be fixed onto a level, stable base that is capable of withstanding the unit's weight of 110-130kg (depending on model), with a minimum distance of 50mm around all sides of the heat pump. It can be secured on the inside of the heat pump with M10 anchor bolts, by removing the outer panels and using the fixing holes shown in figure 3.

- The positions of the fixing holes can be located by placing the heat pump on the plinth with the condensate pipe aligned, and marking the holes. Move or slide the heat pump to drill holes.
- Ideally the heat pump should be located close to the property. Positioning of the heat pump away from the property will result in the need for extra insulated pipe, which will lead to extra cost, and result in additional heat losses.
- In figure 3, there are four fixing holes Ø16mm (centre 140mm from long edge, 55mm from short edge and 190mm from centre to centre for each pair) and one centre hole for the condensate pipe. The minimum recommended plinth dimensions are 1000mm x 470mm x 100mm.
- The minimum clearance distances around the heat pump are shown in figure 3; 300mm at the rear for air flow, 500mm each side for service and at least 1000mm in front of the fan to avoid air recirculation.

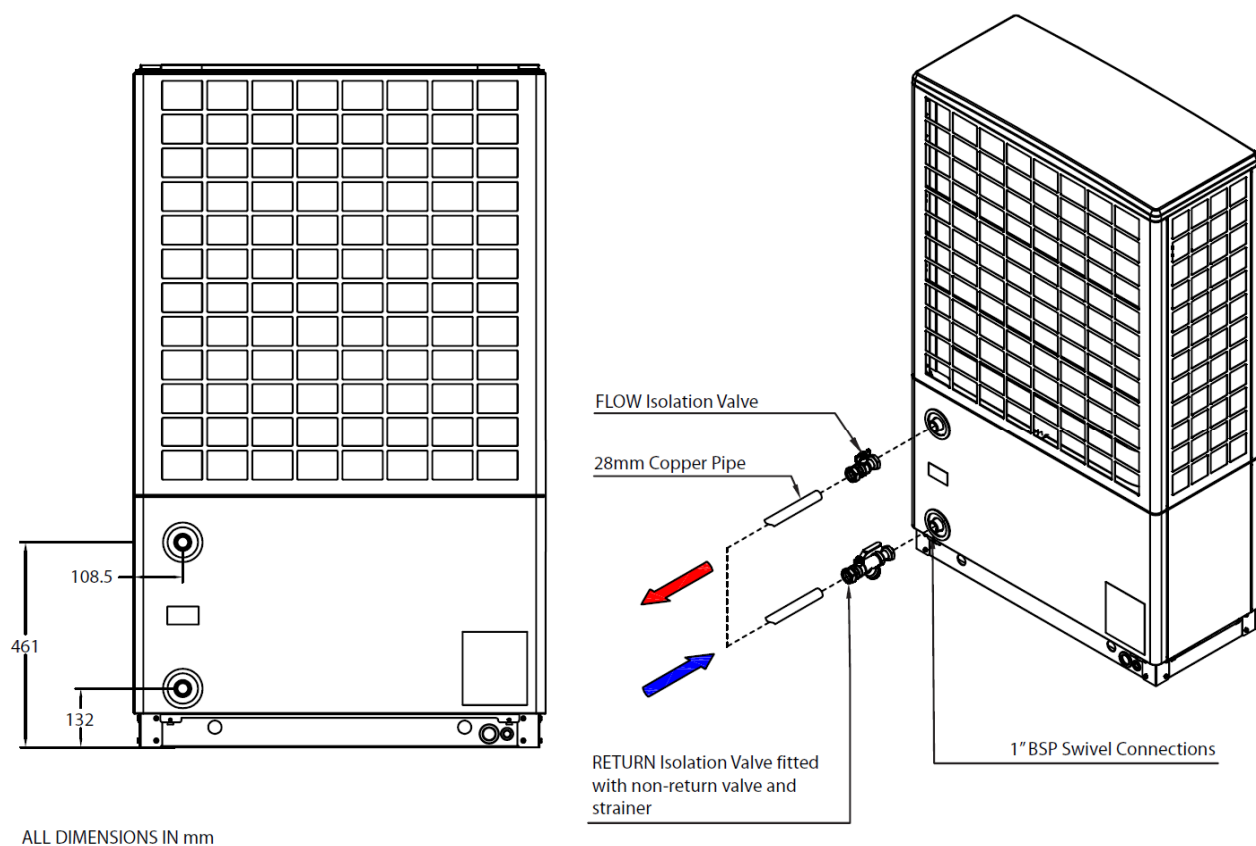


Figure 4: Details of flow and return isolation valves

3 Installation

3.1 Plumbing Information

3.1.1 PIPE SIZING INFORMATION

When selecting piping to install with the heat pump please ensure that:

- The pipe sizes are adequate to allow the correct nominal water flow rate through the heat pump.
- The safety group and expansion vessel (space heating side) are accurately sized by the installer based on the system volume (these are not supplied by Dimplex).
- External pipework and valves should be adequately insulated with vapour resistant insulation and protected against damage to prevent excessive heat losses. All joints should be suitably sealed and exposed pipework must be avoided.
- Existing hot water systems should be flushed prior to connection to the heat pump to remove all contaminants and impurities, in accordance with the latest version of MIS3005. Ensure the water out and water in pipes are positioned correctly for connection to the heat pump as shown on the label in figure 1(a) and on the back of the heat pump in figure 4.
- Isolation valves (non-return valve and ball valve with strainer), supplied in the Dimplex heat pump hydraulics pack, allow the strainer to be removed and cleaned without having to drain the system. Installation of these valves is discussed in greater detail in section 3.2.
- If multiple heat emitter circuits are installed, operating at different flow and return temperatures (such as under floor heating and standard radiators), a mixing valve must be used on low temperature circuits to prevent high temperature water from entering the under floor heating manifold.

Table 1 shows guidelines for the maximum length of pipe allowed to achieve nominal flow rates, depending on pipe diameter. This table is only valid when using the pump supplied in the Dimplex hydraulic kit (see pages 2-4).



NOTE: THE HYDRAULIC INSTALLATION INFORMATION PROVIDED IN THIS MANUAL APPLIES ONLY TO THE COMPONENTS PROVIDED IN THE GLEN DIMPLEX HYDRAULICS PACK (SEE PAGES 2-4 FOR PACK INFORMATION).

		A8M	A12M / A16M	
		Space Heating Only	Space Heating Only	DHW with A-Class Cylinder
	Water Flow Rate	@ 1100 l/h (nominal)	@ 2100 l/h (nominal)	@ 1800 l/h (typical)
	Associated Head Available	60kPa	14 kPa	18kPa
Pipe Diameter (mm)	Internal Diameter (mm)	Maximum Equivalent Length (m) [~]		
15*	12.0	8	N/A	N/A
22*	19.8	90	7	11
28^	25.6	300	23	38
32^	29.6	600	46	77

Table 1: Maximum Equivalent Length for Copper Pipe - Water ONLY

*Only suitable for special conditions ^Recommended pipe diameter for A12M/A16M

[~] Assuming straight length with no incidents
(e.g. elbows, tees)



NOTE: NOT ALL TYPES OF PIPE WILL HAVE THE SAME INTERNAL DIAMETER, E.G. MULTI-LAYERED/PLASTIC PIPES WILL HAVE A THICKER WALL SO THE GUIDELINES SET OUT IN TABLE 1 WILL NOT APPLY. MICROBORE (8mm) AND 15mm PIPE IS NOT SUITABLE.

AS A RULE OF THUMB, THE EQUIVALENT STRAIGHT LENGTH (L [mm]) OF EACH ELBOW IS FOUND BY MULTIPLYING THE OUTER DIAMETER OF THE PIPE (D [mm]) BY 30, E.G. 4 ELBOWS OF DIAMETER 22mm PIPE IS EQUIVALENT TO 2.5m OF 22mm PIPE.



NOTE: TABLE 1 ABOVE IS PROVIDED AS A GUIDELINE WHEN USING WATER ONLY. ANY PERCENTAGE OF ANTI-FREEZE ADDED WILL AFFECT THE PRESSURE DROP OF THE SYSTEM GREATLY AND WILL RENDER THIS TABLE INVALID.

3.1.2 BUFFER TANK

The heat pump uses a reverse cycle defrost in order to defrost the evaporator by taking heat from the heating system. It is therefore necessary to connect a buffer tank in series with the heat pump, as shown in the hydraulic schematic diagrams (Appendix D - G). The Dimplex A-Class cylinder range come with an integrated buffer tank, which;

- Provides some energy storage for the unit to carry out successful defrost.
- Increases compressor life due to reduction in the number of starts.

It is recommended that a buffer with a heating element/immersion is used as it may be required if initial start-up and commissioning are carried out in very cold weather.

Buffer Tank Sizing

For installations using Smartrads/radiators, the minimum total system water volume should be no less than 100l, although 200l is preferred. For installations with a poor water flow rate, a larger buffer would be beneficial.

For a system with underfloor heating (UFH), the 40l buffer built into the A Class cylinder should be sufficient as the UFH will provide enough thermal mass to limit the drop in temperature over defrost duration (provided that one zone is always open).

3.1.3 METERING FOR THE DOMESTIC RENEWABLE HEAT INCENTIVE - UK

Please take note of the following requirements if the installation is to be fitted with a meter;

1. Leave sufficient space for appropriate meters to be fitted in defined locations.
 - For Dimplex installations using 22mm pipe, please leave 440mm of straight pipework on the meter inlet pipe and 175mm of straight pipework on the outlet pipe;
 - For installations using 28mm pipe, please leave 560mm of straight pipework on the meter inlet pipe and 175mm of straight pipework on the outlet pipe.
2. Install low pressure-drop isolation valves to avoid the need to drain systems when fitting heat meters. See the schematics (Appendix D-G) for more information on valve locations.
3. Leave sufficient pipework accessible, i.e. not boxed in or under floor boards, to enable meters to be fitted.

Guidelines for fitting an MCS approved meter can be found in the *Domestic Renewable Heat Incentive essential guide to metering*, available on the Ofgem website: www.ofgem.gov.uk

3.2 Plumbing - Installation

- The system must be filled and flushed with clean fresh water to ensure the removal of all the air from the installation. Air bleed points must be installed at the highest point in the system; in particular, the installer must remember to install an air bleed on the heat pump pipe if it is a local high point since there is no air bleed point on the heat pump itself. Dimplex recommend the use of a power flush and purge cart to facilitate this process.
- Flow and return isolation valves and piping must be fitted to each of the heat pump water connections on the back of the heat pump, as shown in figure 4.
- The isolation valve on the return is also fitted with a non-return valve and a strainer (included in the Dimplex heat pump hydraulics pack). This means that in order to clean the strainer, the system does not have to be drained. Instead, it is possible just to close the isolation valves on the return and remove the strainer. This way, the only water that will be lost from the system is that between the non-return valve and strainer.
- The strainer must be fitted in order to prevent contamination of the condenser heat exchanger. If an alternative strainer is used, it must be at least 7 microns in size.
- System should be pressurised and the system pressure must be checked once valves are re-opened.
- Direct condensate drain pipe to soak away or drain.
- All piping must be properly insulated and external length kept to a minimum.

Adjusting the By-Pass Valve

The bypass valve is used to maintain a minimum flow rate and prevents faulty operation of the heat pump, as well as allowing it to run efficiently. The bypass valve **must** be adjusted correctly after commissioning the heat pump.

Please ensure that the following steps are taken when adjusting the bypass valve;

1. Ensure that the bypass valve is open fully and begin running the heat pump.
2. Close all of the heating circuits that may be closed during the operation of the heating system so that the least favourable flow rate can be achieved. This should cause all of the flow to go through the bypass valve. To check that all of the water flow is going through the bypass valve, feel the pipe after the valve to check its temperature (it should be getting heat from the heat pump).
3. Slowly close the valve until the water is no longer flowing through it, then turn the valve back slightly (approx. 0.5 to 1 turn) to allow some flow and prevent the heat pump from tripping.
4. Open the zone valves while the heat pump is still running, and again check the flow through the bypass valve by feeling the pipe after the valve and checking its temperature (it should not be as hot as flow temperature). The bypass setting should allow hot water to flow through the bypass valve when some of the heating circuits are closed.

3.3 Electrical Information

The heat pump system consists of the heat pump, wiring centre and user interface. If a Dimplex A-Class cylinder is also used, the wiring centre is built into the cylinder.

The user interface acts as a thermostat and is sufficient if one heating zone is present. Optional, additional temperature probes or room thermostats are required for additional heating zones.

Figures 5 & 6 show the different possible wiring configurations for systems with and without a Dimplex A-Class cylinder.

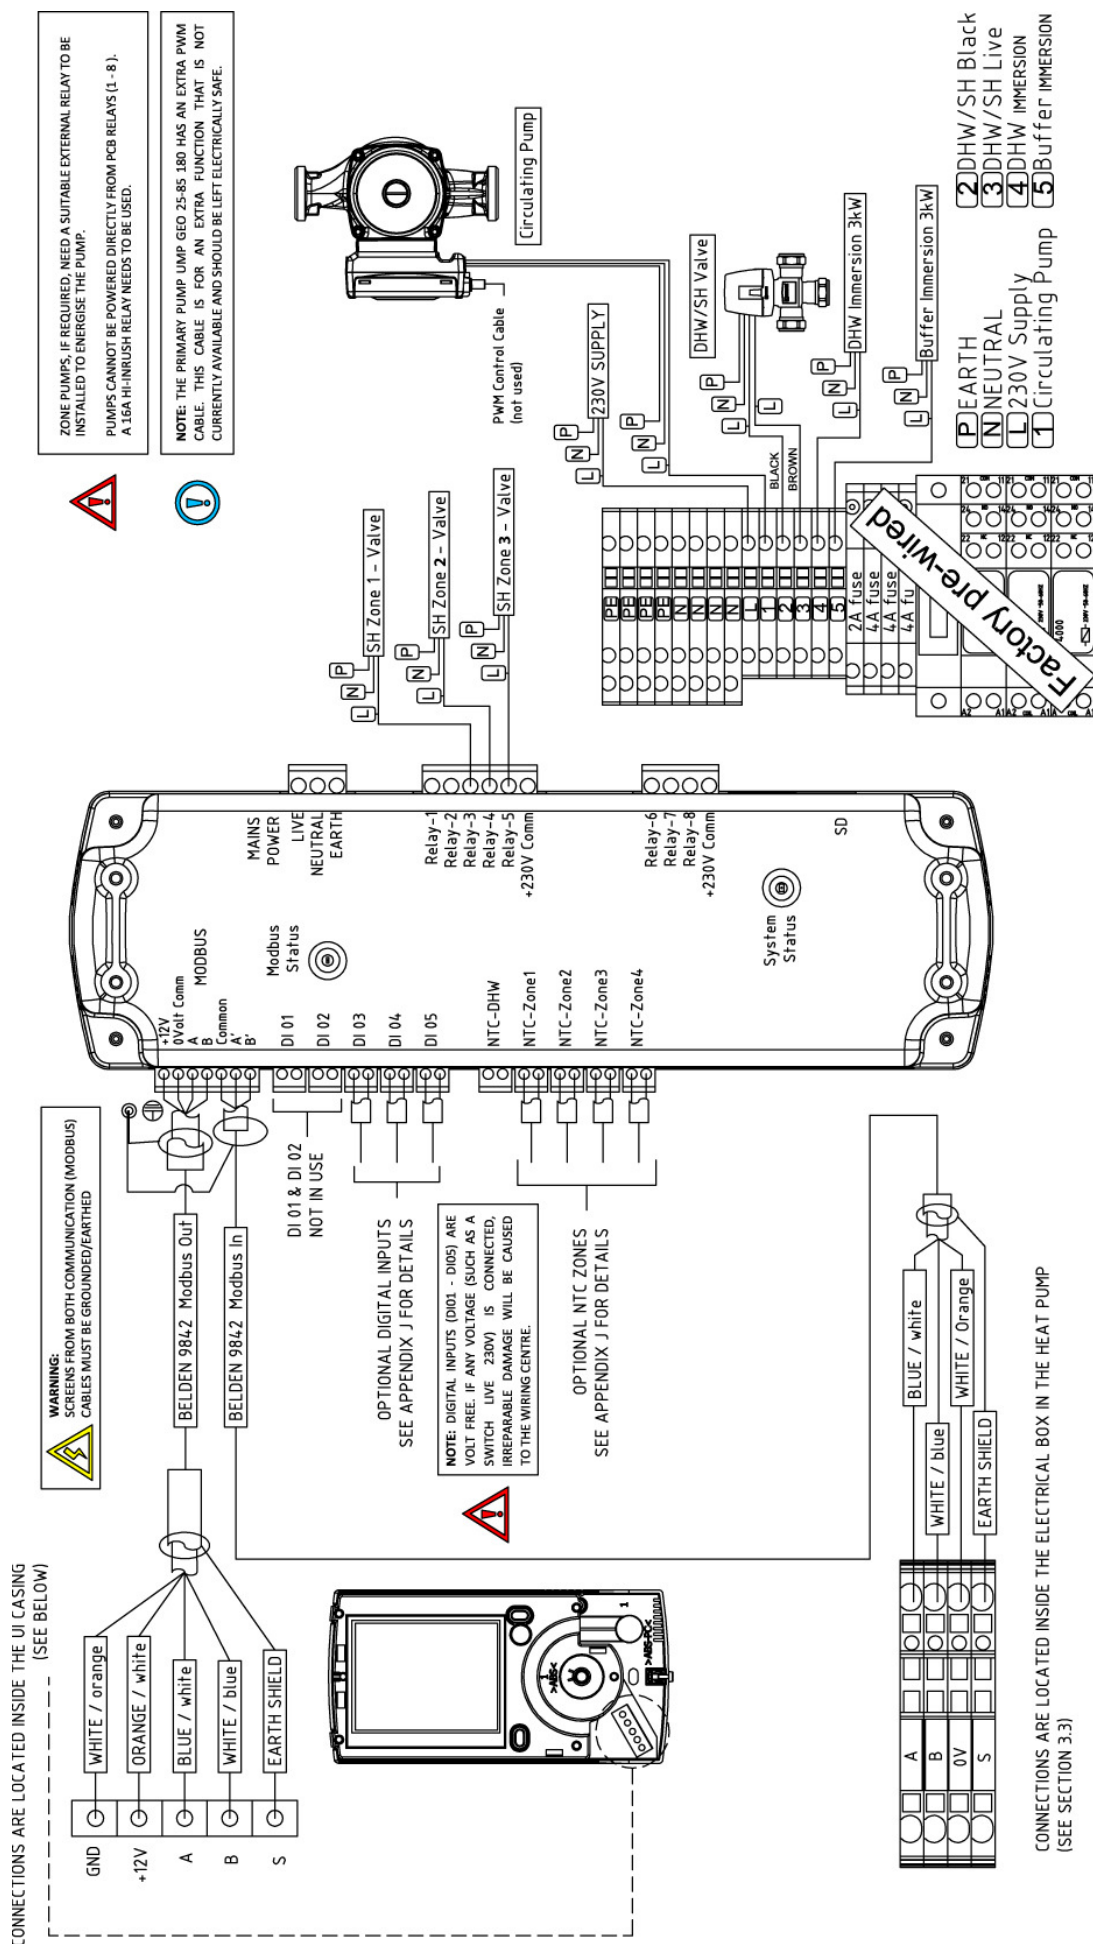


Figure 5: Wiring centre electrical configurations - with non A Class cylinder / no cylinder

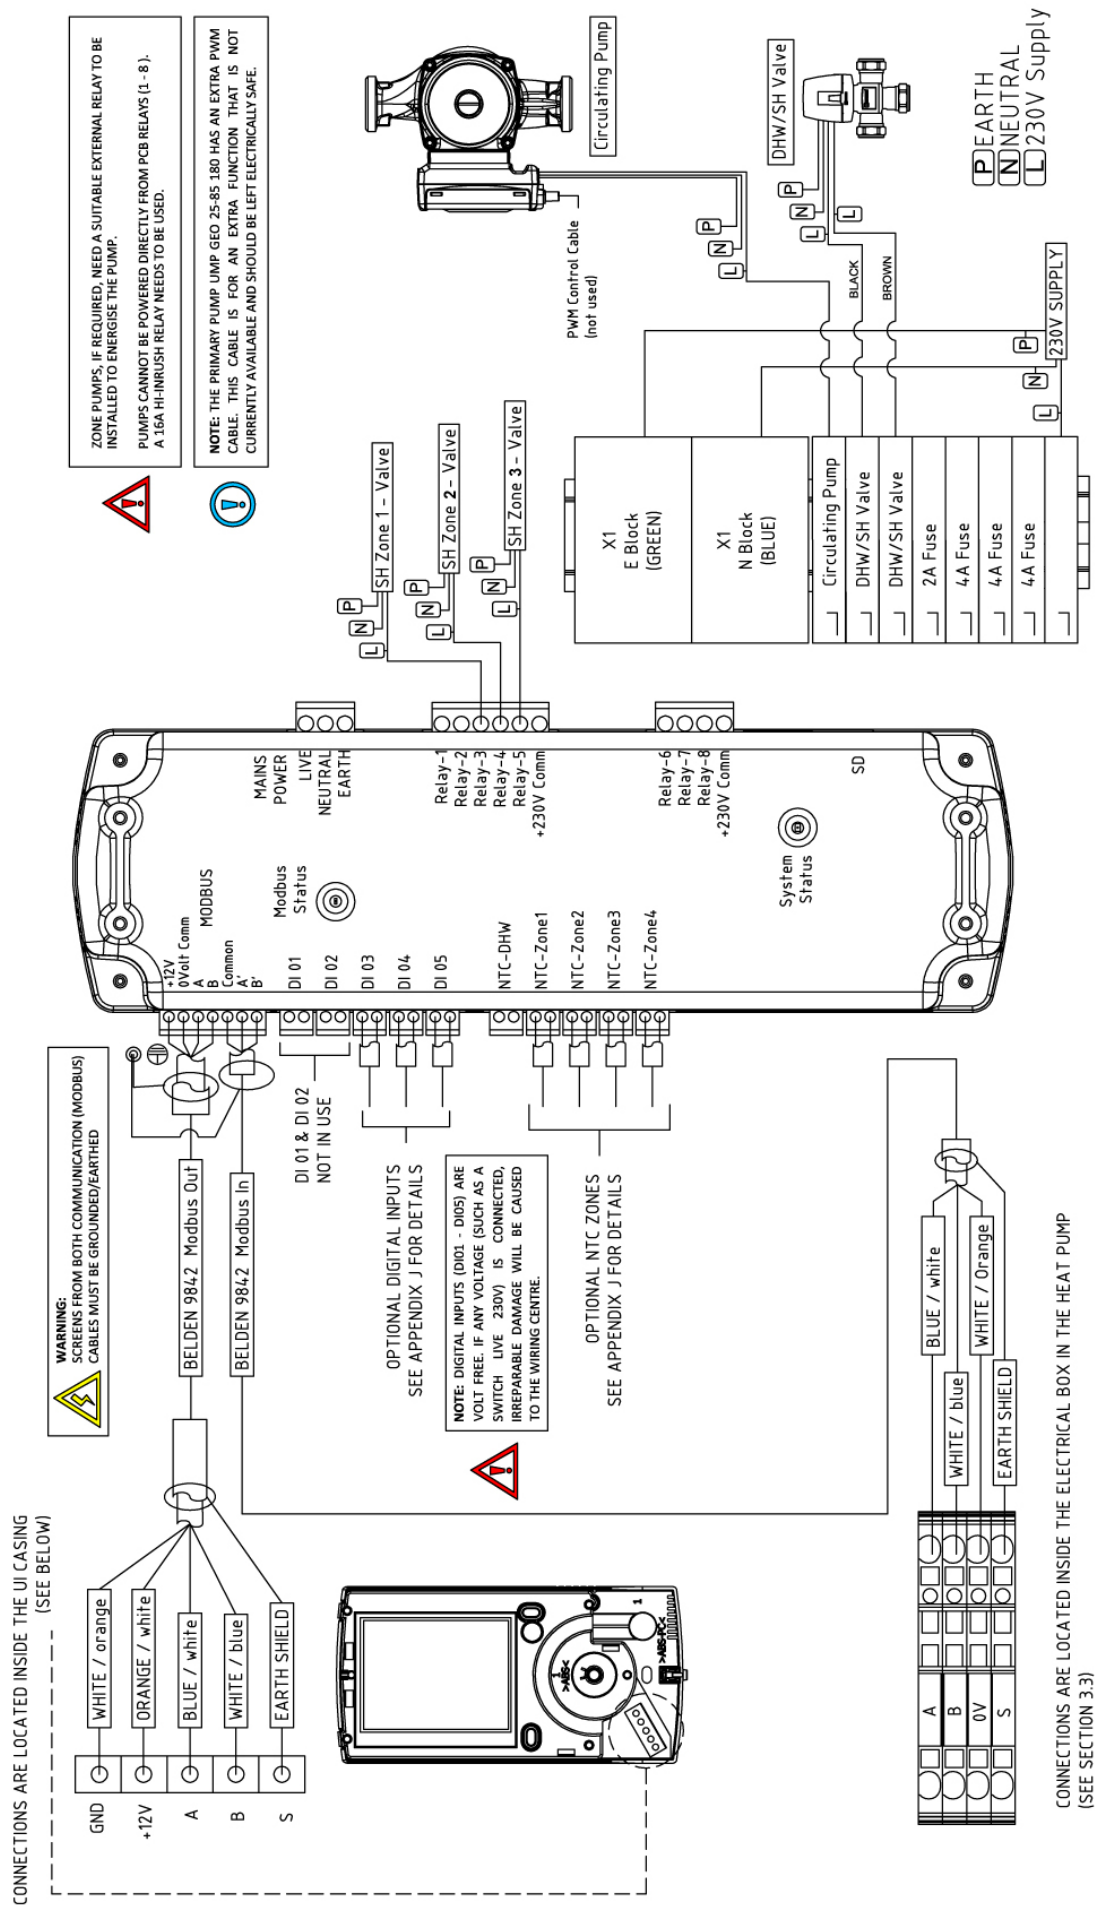


Figure 6: Wiring centre electrical configurations - with A Class cylinder



Warnings

- Before opening the heat pump, ensure all circuits are isolated.
- Ensure that the components in the electrical box do not get wet when the electrical box is opened.
- The main 230V power cable must be supplied via a suitable sized exterior isolator, lockable in the OFF position.

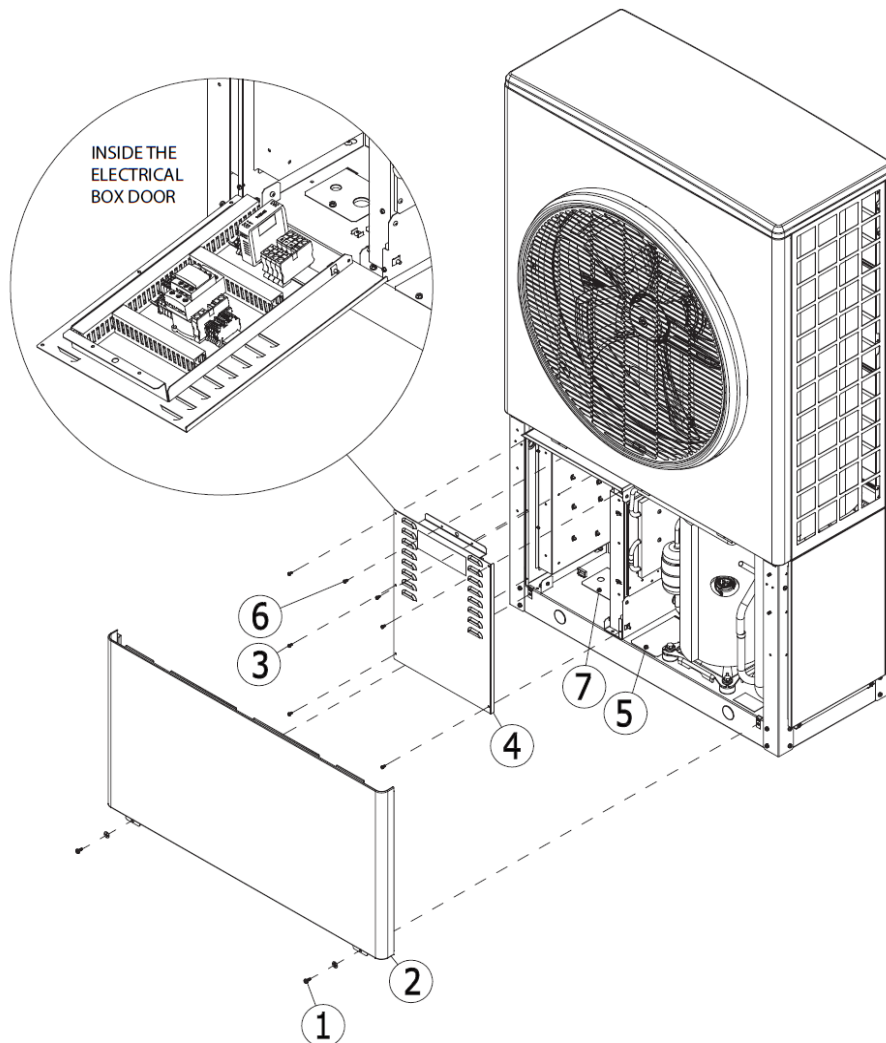


Figure 7: Opening the casing to fit electrical connections

3.3.1 ACCESS TO ELECTRICAL CONNECTIONS - OPENING THE HEAT PUMP

To open the heat pump, follow the procedure shown in figure 7;

1. Unscrew 2 screws (1) holding front bottom panel (2) using a PZ2 screwdriver
2. Pull the front bottom panel (2) down then out to remove
3. Unscrew 5 screws (3) holding the front cover (4) of the electrical box to open and then pull down
4. Remove 2 PZ2 screws (6) holding the door flap in place to access cable connections.

(Note: cable access cover (7) only used on some models. For model cable connection configurations for your heat pump model, please see figure 9(a) and 9(b)).

5. The cable access covers (5 and 7) can be opened by removing a screw to allow access to cables.

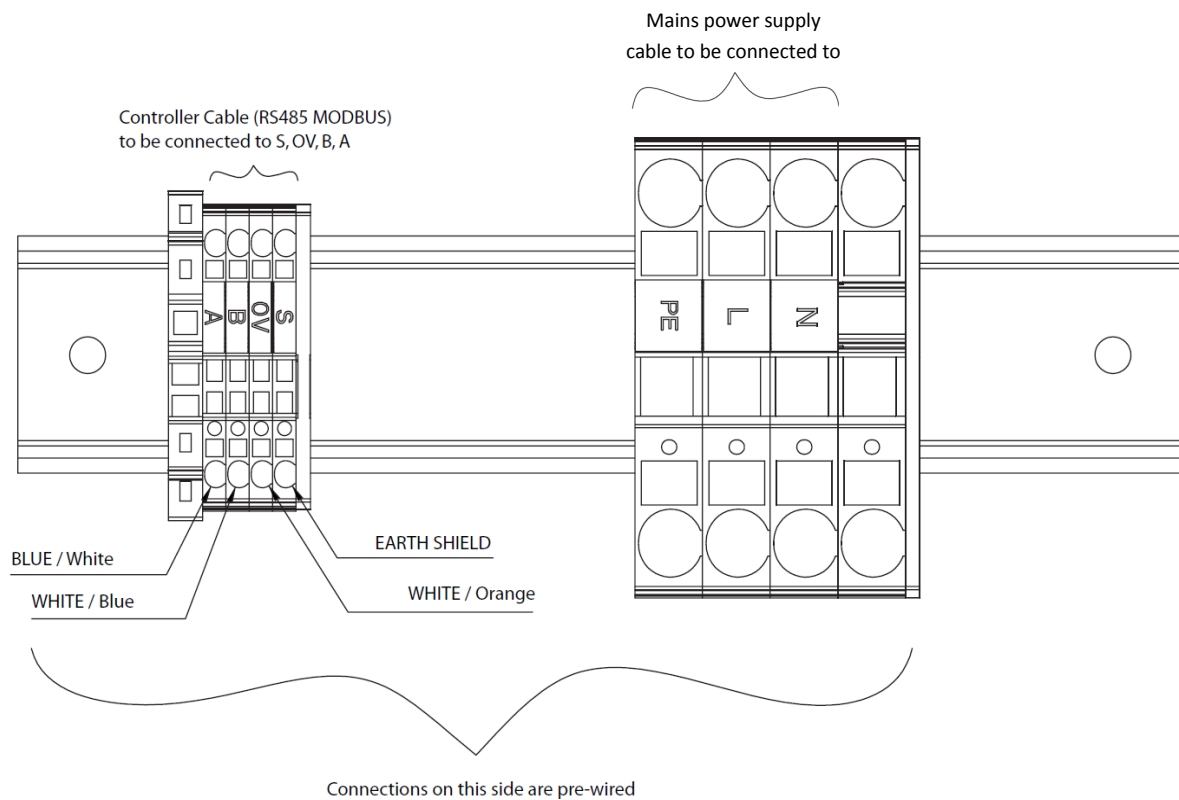


Figure 8: Heat pump electrical connections



NOTE: 'S' AS SHOWN IN FIGURE 8 ABOVE IS THE EARTH SHIELD AND MUST BE CONNECTED DURING INSTALLATION.



NOTE: ENSURE THAT CABLE ACCESS COVERS ARE CLOSED CORRECTLY WHEN NOT IN USE.



NOTE: FOLLOW STEPS IN REVERSE ORDER TO CLOSE THE HEAT PUMP. WHEN CLOSING THE HEAT PUMP FRONT PANEL, ENSURE THAT THE TOP AND BOTTOM PANELS ARE INTERLOCKED.

3.3.2 ELECTRICAL CONNECTIONS - POWER AND COMMUNICATION CABLE HEAT PUMP CONNECTIONS

The electrical connections to the heat pump may have one of two configurations, depending on the model. Please see diagrams 9(a) or (b) for your configuration.

For configuration 1, the cables are fed through the holes at the back of the heat pump and directly inside the electrical box through the base of the heat pump (see figure 9(a)).

For configuration 2, the cables are fed through the holes at the back of the heat pump, up through the holes in the base of the heat pump and then from outside the electrical box through the cable glands (see figure 9(b)).

- Allow sufficient cable length to ensure the connections are not strained when the cover is opened.
- Once cables have been routed through the cable glands, close the access cover.
- Connect power cable and controller cable as shown in figure 8. Do not strip the cables before pulling them through the glands in the access panel. Where stranded cable is being used, a ferrule must be fitted before inserting into the push connections.
- The controller (Modbus) cable is then connected from the heat pump to the wiring centre (see wiring diagrams in figures 5 & 6).

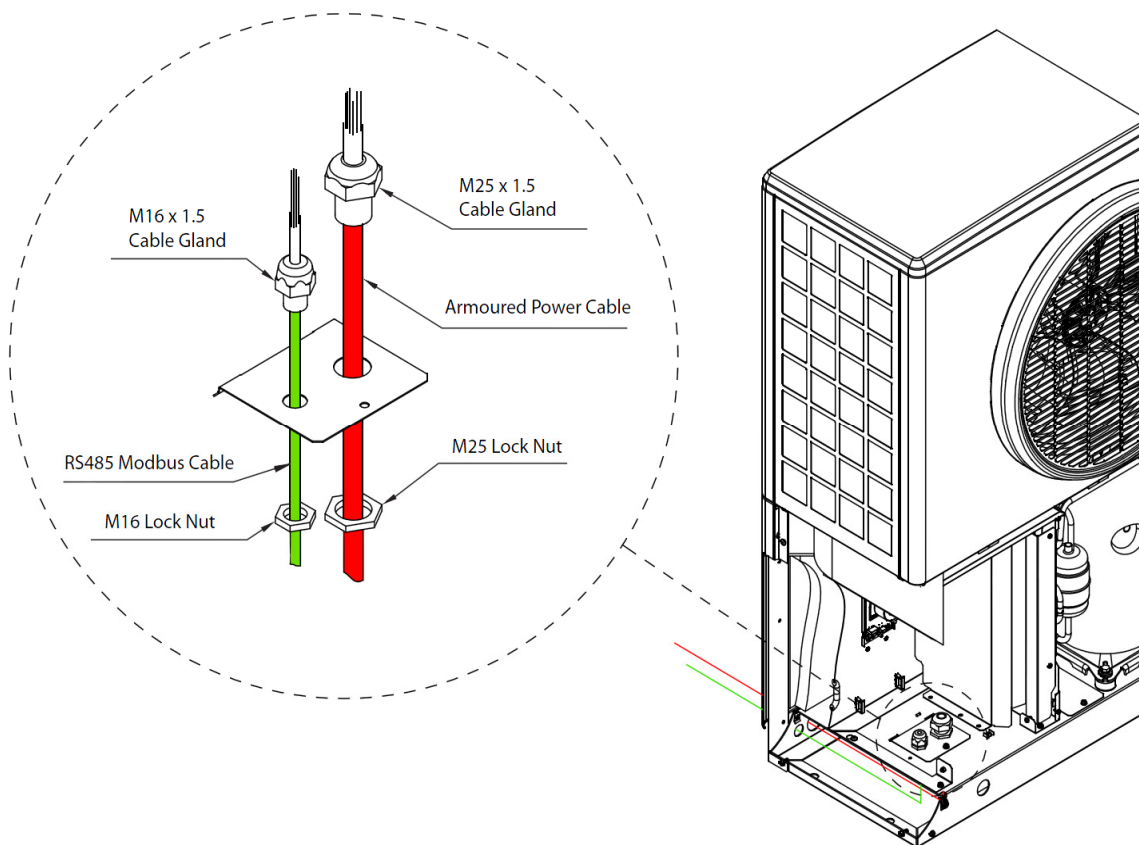


Figure 9(a): Heat pump electrical connections - configuration 1

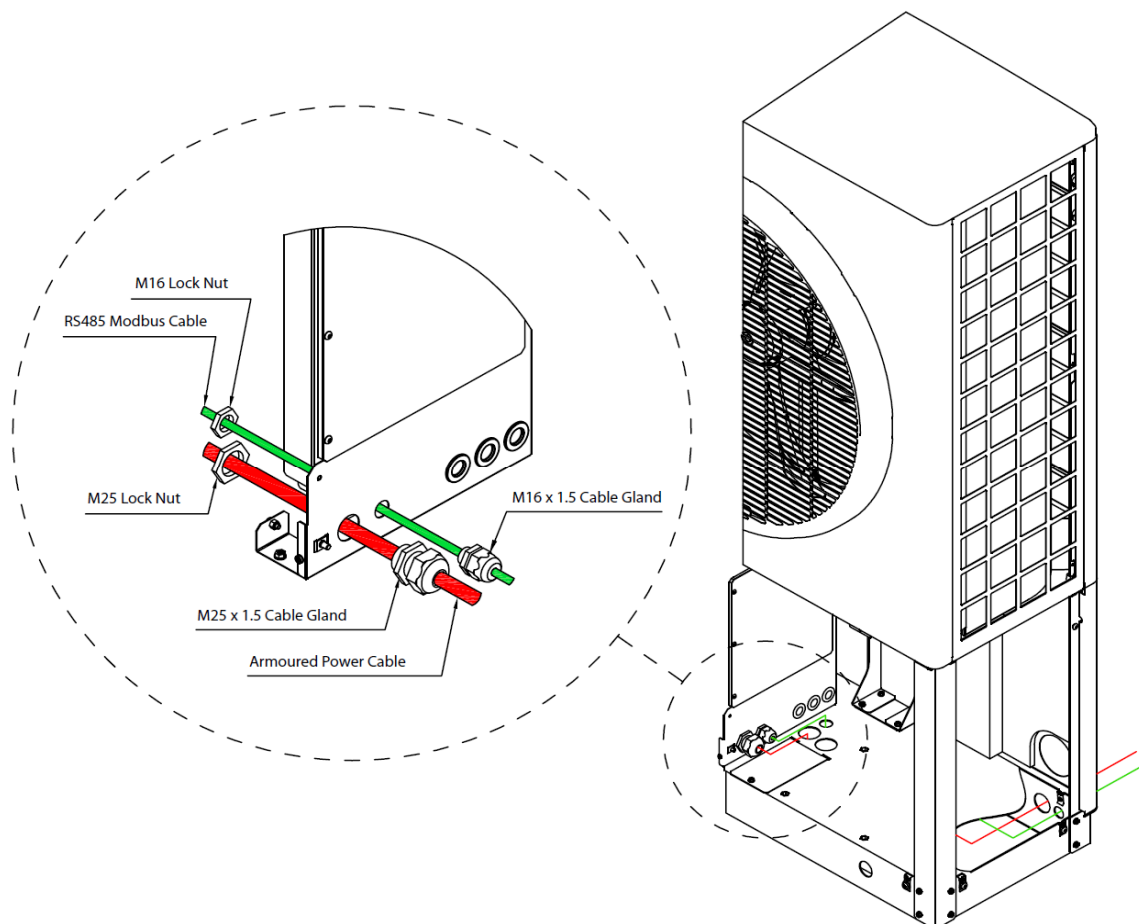


Figure 9(b): Heat pump electrical connections - configuration 2

3.3.3 MODBUS CABLE INFORMATION

	Belden Cable 9842	Typical Equivalent Cable
Nominal Characteristic Impedance	120Ω	120Ω
Nominal Conductor DC Resistance	24.0Ω /1000ft 78.7401 Ω/km*	78.80 Ω/km*
Nominal Capacitance Core to Core	12.8pF/ft 41.99pF/m	42pF/m

*Conversion factor for ft to m = 3.28 ft = 1m
 1km of Belden cable would have a resistance of 78.74 Ω/km
 1km of Equivalent cable has a resistance of 78.8 Ω/km

Table 2: Recommended cable specifications/electrical characteristics for Modbus cable

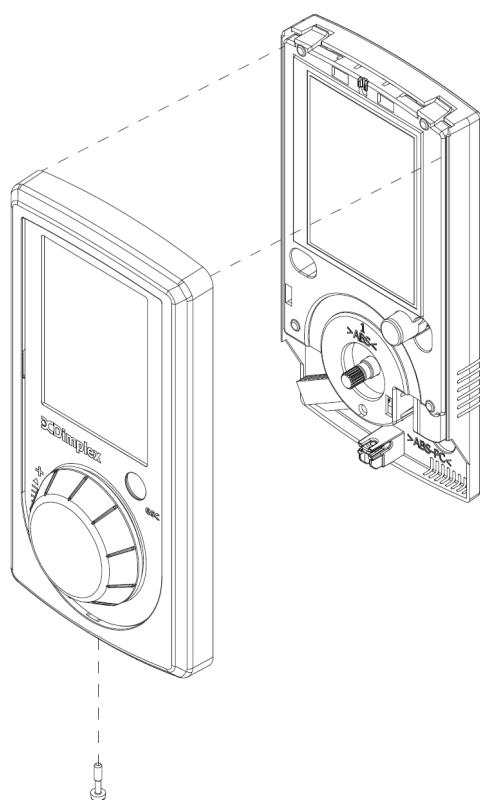


Figure 10: How to open the user interface

3.3.4 OPENING AND INSTALLING THE USER INTERFACE

It is recommended to connect the Modbus cable in daisy-chain series (as shown in figure 11) from the heat pump on to the wiring centre and then on to the UI. The jumpers will be in the correct factory setting for this wiring configuration by default. **If using the recommended configuration, the jumper position does not need to be changed.**

If it is deemed necessary to install the Modbus cable in a different order, please see *Appendix I*

The cover of the UI must be removed in order to move the jumper. To remove the cover, unscrew the screw at the bottom of the UI and lift the cover and rotary dial.

To replace the cover, position the rotary dial over the holding pin on the board, ensuring the two are lined up correctly. Replace the cover and bottom screw.

Ensure that rotary dial is tested and working once cover has been replaced.

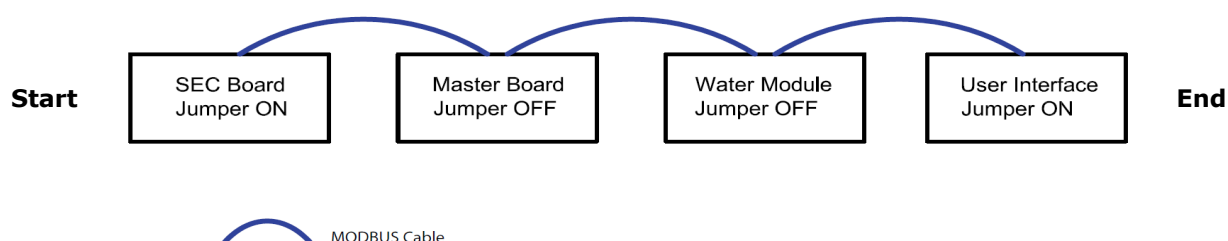


Figure 11: Recommended MODBUS cable configuration

4 Heat Pump Controller / Commissioning

4.1 Set To Work

When starting up the heat pump you must first ensure that;

- All covers are replaced.
- The heat pump isolator switch is switched on.
- The heat pump is connected to the mains power supply via a separate suitable circuit breaker and RCD protection.
- The wiring centre or DHW cylinder is connected to the mains power supply.
- The Modbus network is complete and the UI and the heat pump are connected to the wiring centre or DHW cylinder.

Once the connections have been made and the power supplies have been switched on, the system may take a couple of minutes to start up.

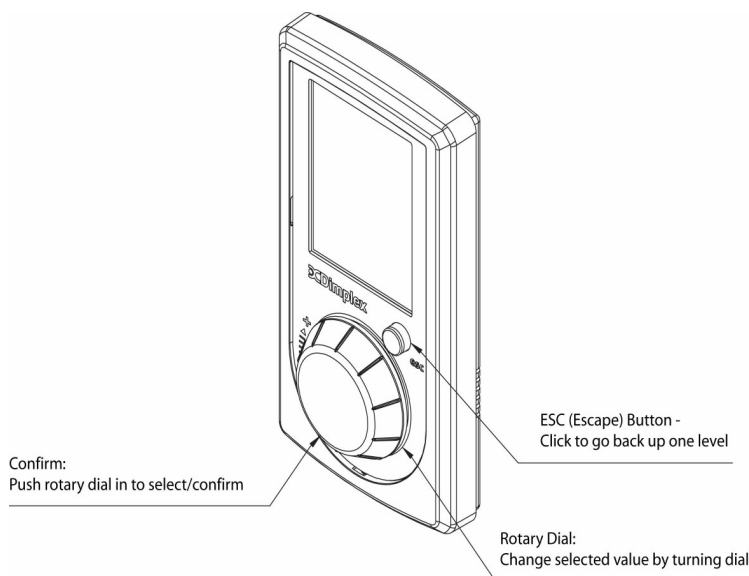


Figure 12: Using the User Interface

When switching on the heat pump for the first time, and after the start up sequence, you will be greeted by the home screen, shown in figure 13.

If the heat pump is already switched on but you wish to make changes to the settings, you may need to press Esc in order to go from the screensaver to the home screen.

To access the Installer Menu, you must select the information menu. Once you have entered the information menu, you must select 'Login', as shown in figure 14.

4.1.1 STARTING THE HEAT PUMP IN COLD WEATHER

When carrying out a commissioning and setting a heat pump to work in conditions where defrosting is required ($\leq 12^{\circ}\text{C}$) and/or the space heating return temperature is $\leq 18^{\circ}\text{C}$, start by heating the buffer tank. There is not currently a software function to close down the heating circuits, so to do this the rest of the heating circuit must be closed down manually to allow the buffer tank to heat up ($\geq 25^{\circ}\text{C}$).

Once this temperature has been achieved, individual heating circuits (i.e. zones) can be opened gradually. During this procedure, **DO NOT**:

- Allow excess volumes of cold water to return from the heating circuit
- Allow the heat pump return temperature to drop below 18°C

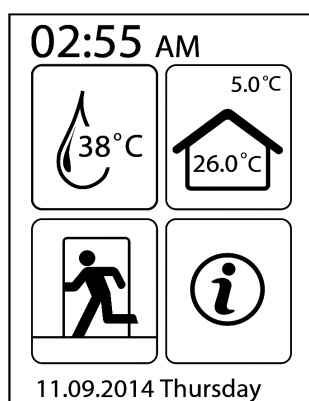


Figure 13: Home screen



DHW MENU ICON

Access to domestic hot water menu (shows current DHW temperature)



SPACE HEATING ICON

Access to space heating menu (shows current indoor and outside temperatures)



TEMPORARY MODES

Access to temporary modes menu



INFORMATION MENU

Access to information menu

4.1.2 BIVALENT MODE (ALTERNATIVE BACK-UP HEAT SOURCES)

If the heat pump cannot meet the heating load (if it is undersized for extreme conditions), the system must call on an alternative, back-up heat source. This bivalence feature is automatically triggered by the controller and allows a backup heater to help the heat pump in reaching its set point.

4.1.3 OPERATING MODES

There are three operating modes available; ON, OFF or TIMER. Please see the *A Class User Manual* for more information.



NOTE: YOU WILL NOT BE ABLE TO ACCESS ANY OTHER OPTIONS ON THE HOME SCREEN, EXCEPT THE INFORMATION MENU, UNTIL THE HEAT PUMP HAS BEEN FULLY COMMISSIONED.

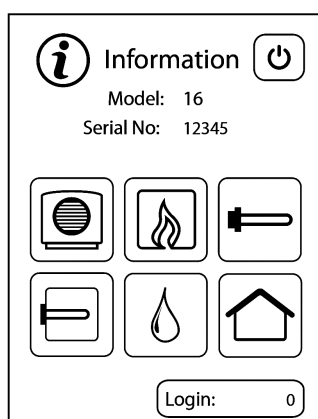


Figure 14: Information screen



Heat Pump



Bivalent Boiler



Domestic Hot Water



Space Heating



Backup Heater



Hot Water Immersion



NOTE: THE MODEL NO. DISPLAYED ON THE INFORMATION SCREEN WILL BE 8, 12 OR 16 DEPENDING ON YOUR HEAT PUMP MODEL. THE SERIAL NUMBER DISPLAYED WILL BE SPECIFIC TO YOUR HEAT PUMP.



NOTE: ACCESS TO FUNCTIONS BY UNAUTHORISED PERSONNEL NEGATES WARRANTY AND MAY CAUSE DAMAGE TO THE SYSTEM.

When using the *Login* function, input the installer access code (**22** - Installer) by turning the dial to scroll through numbers, then pressing in the dial to select as before. You will then need to input **55** (commissioning menu code) to bring up the installer menu.

When you enter the installer menu, select the *Language Selection* option, which will bring you to the *Start Guide* screen. Selecting *UK* will bring you back to the Installer Menu, which will now display the *Commissioning* option.

Installer menu

- Language Selection
- Commissioning
- Message log
- Output tests
- Operating data
- History

Figure 15: Installer menu once *language selection* is complete

4.2 Commissioning

Select 'Commissioning' to begin and follow the instructions on the system controller. The commissioning routine will take you through a number of checks and tests to complete the installation. When you finish using each submenu in the commissioning process, selecting 'Next' will take you back to the main Commissioning menu, where a new submenu will be available.

GENERAL / SCHEMATIC

In some cases, it may be necessary to carry out checks on individual components of the heating system before beginning the commissioning routine. Accessing General/Schematic menu allows you to set the date and time, and the level of access allowed. It is recommended that the *Standard* user access level is selected for most installations.

Selecting 'Next' will bring you to the Schematic menu, as shown in figure 17, Once you have selected a schematic zone diagram, a number of other options will become available in the main Installer menu. The schematic number refers to one of the plumbing schematics described in Appendix C. Please ensure that your plumbing reflects the diagram set up to ensure correct operation.

General settings

Time & Date

24Hour: OFF

Date: 02/10/2012

Time: 09:35 AM

User access level

Restricted Standard

Next

Figure 16: General menu

Schematic

Please select the pre set schematic code 1 to 8

No.	Code	
1	10200110	<input checked="" type="checkbox"/>
2	10200210	<input type="checkbox"/>
3	10200310	<input type="checkbox"/>
4	10200410	<input type="checkbox"/>
5	10220190	<input type="checkbox"/>
6	10220290	<input type="checkbox"/>
7	10220390	<input type="checkbox"/>
8	10220490	<input type="checkbox"/>

More Next

Figure 17: Schematic menu



NOTE: IF ANY CHANGES MUST BE MADE TO THE COMMISSIONING CONFIGURATION (E.G. SELECTING A DIFFERENT PROBE), IT IS STRONGLY ADVISED THAT A FACTORY RESET IS PERFORMED AND THAT THE HEAT PUMP IS RE-COMMISSIONED ENTIRELY. CHANGING INDIVIDUAL SETTINGS DURING THE COMMISSIONING PROCESS MAY CAUSE COMMANDS TO BE IGNORED OR CAUSE THE HEAT PUMP TO STOP WORKING CORRECTLY.

4.2.1 WATERSIDE CHECK

The 'Waterside Check' menu allows you to select whether temperature control is based on the flow or return temperature. This will apply to heating curves, as discussed in section 4.2.10.

It is generally always recommended to set the temperature control based on the return temperature, unless it is absolutely necessary to use flow temperature instead for a particular set up, as flow control may lead to unnecessary stopping and starting of the heat pump. Selecting 'Next' will bring you to the waterside checks menu (figure 18).

A number of waterside checks must be carried out as part of commissioning, and must be ticked as completed in the Waterside check menu:

Figure 18: Waterside Check

- The system must be flushed.
- The strainer must be fitted to the return pipe and checked to ensure that it is clean.
- The system must be pressurized (You must enter the system pressure).
- The system must be fully bled.
- The expansion vessel must be fitted
- Membrane pressure of the expansion vessel must be checked and adjusted if required.

When checks are completed and 'Next' is selected, the type of temperature measurement devices to be used in each heating zone must also be selected by scrolling across and pressing confirm. The following options are available;

- User Interface (usually in zone 1 – heating system controller)
- Temperature probe (option for temperature probe 1 to 3, for additional zones).
- Mechanical thermostat (option for mechanical stat 1 to 3, for additional zones).

Using a mechanical stat limits the level of heating control on the zone from the UI. Heating in zones using temperature probes can be fully controlled using the UI. Selecting 'Next' will bring you to the 'Temperature check'



NOTE: SOME OF THE CHECKS ARE FUNCTIONAL AND WILL REQUIRE PHYSICALLY STARTING PUMPS, VALVES, ETC. RATHER THAN INPUTTING INFORMATION ON THE UI ONLY



NOTE: IF YOU LEAVE THE COMMISSIONING MENU BEFORE YOU SUCCESSFULLY COMPLETE COMMISSIONING, ALL PREVIOUS INFORMATION ENTERED WILL BE SAVED AND COMPLETED MENUS WILL BE HIGHLIGHTED IN GREEN. YOU CAN THEN RETURN TO IT AT A LATER STAGE TO COMPLETE THE PROCESS.

4.2.2 TEMPERATURE CHECK

This screen displays the temperatures currently being read by all temperature probes. It is the duty of the installer to ensure that all sensors are installed and working correctly, and the boxes on this menu should not be ticked unless all displayed temperatures have been confirmed to be within an acceptable and expected range.

4.2.3 ELECTRICAL CONNECTIONS (SH)

This menu provides a list of electrical connections that should be made prior to commissioning for space heating. The list is based on the schematic zone diagram selected and also the type of temperature devices that will be used in each zone. Once you have confirmed all checks and select 'Next', you will return to the commissioning menu where you can now access the 'Water flow check' menu.

Figure 19: Temperature Check

Figure 20: Electrical Connection

4.2.4 WATER FLOW CHECK

Select 'Run Test' to start the circulation pump. Ensure that all valves are open to allow flow. The circulation pump will be tested first by running for 30 seconds. When the timer reaches zero, the pump will continue to run until flow is confirmed, which allows time for the installer to check that the pump is working.

Once you are confident that the pump is on and that there is water flow, click 'Continue' to confirm that the pump is working correctly. **Do not confirm that the pump is working in this menu unless you have physically checked it, as the UI requires your input and does not detect this automatically.**

Once this is successful, the compressor will run for 5 minutes. As the test runs, the screen will give you information on the status of the heat pump and the time remaining on the test. If you do not have flow or if there is a problem, you can stop the test. If you stop the test, there is a 5 minute delay before you can attempt to run the test again. It is not possible to bypass the test, as good water flow is critical to the operation of the heat pump.

If there is no flow at all, a high pressure fault will appear on the UI screen and the commissioning will be aborted. Once the test is completed, you will see one of three messages:

1. No flow detected
2. Flow too low
3. Flow detected

If you see message 1 or 2, this might be an indication of an air-lock, dirty strainer, flow restriction or pump too small for the required pipework. Please check for these issues and if present, rectify to ensure that there is sufficient flow then repeat the test. There will be a time delay before you can restart the test. When you see the screen shown in figure 21, with the pump highlighted in green, flow has been detected and the compressor 'flow check' test is complete. You will receive the status 'Waterside is OK' when the waterside checks are completed. Selecting 'Next' brings you to the Electrical Connections menu.

If carrying out start up in cold weather, commission the heat pump heating only the buffer. Once it reaches the required temperature open each zone slowly and in series, especially for under floor heating. If you have selected Schematic 1 or 3 (Space heating only or Bivalent space heating), move now to section 4.2.10 'Heating Curves' to complete the commissioning process.

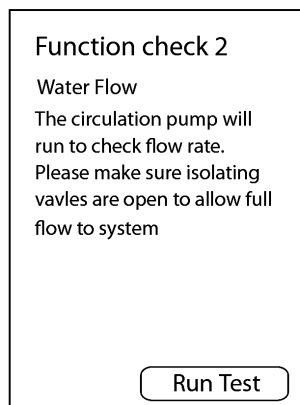


Figure 21: Water Flow Check

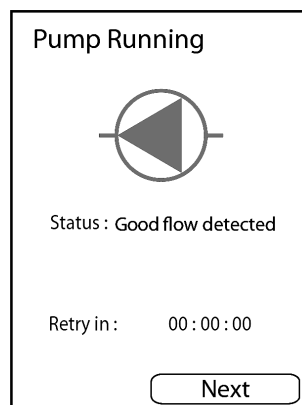


Figure 22: Successfully running test screen



NOTE: FOR SAFETY REASONS, IF THE HEAT PUMP PRESSURE EXCEEDS 38 BAR/TEMPERATURE EXCEEDS 60 °C, THE COMMISSIONING WILL BE ABORTED. UNDER THESE CONDITIONS, MEASURES SHOULD BE TAKEN TO ALLOW THE TEMPERATURE TO DROP BELOW 60 °C, I.E. A ZONE SHOULD BE OPENED.

4.2.5 DHW SETUP

Before commissioning the DHW, a number of checks must be carried out, as shown in figure 23. When you have ticked each box to confirm each DHW check, 'Next' will bring you back to the installer menu, where you can now select 'Electrical Connections (DHW)'.



NOTE: IT IS POSSIBLE TO USE SPACE HEATING WITHOUT COMPLETING THE DHW SETUP. THIS CAN BE DONE BY SELECTING 'N' ON THE DHW SETUP SCREEN WHERE IT ASKS IF THE CYLINDER IS CONNECTED (SEE FIGURE 23).

THIS MAY BE NECESSARY WHERE THE DHW IS NOT YET CONNECTED OR WHERE THE CYLINDER HAS NOT YET BEEN FILLED. WHEN THE CYLINDER IS READY, IT WILL BE NECESSARY TO RETURN TO THIS STEP OF THE COMMISSIONING AND SELECT 'Y' INSTEAD FOR "CYLINDER CONNECTED?" TO SET UP DOMESTIC HOT WATER.

4.2.6 ELECTRICAL CONNECTIONS (DHW)

This menu provides a list of electrical connections that should be made prior to commissioning the domestic hot water cylinder. You must check and confirm all connections in order to make the 'DHW Test' available in the installer menu. The numbers listed on the LHS of the screen refer to the following;

On Screen	On Controller	On Connection Block
S-DO-0Q2	Relay 2 (to DHW-SH valve)	Connection 2 on live block
S-DO-07	Relay 7 (Immersion DHW)	Connection 4 on live block
S-AI-01	NTC-DHW (DHW temperature probe)	-

Table 3: Electrical Connections screen information

DHW Setup

Cylinder connected?	Y	N
Is DHW cylinder full	Y	N
DHW Temp: ____°C	Y	N
A-Class Cylinder	Y	N
Expansion vessel	Y	N
Safety group (PRV)	Y	N

Next

Figure 23: DHW Set-up menu

Electrical connection

Please ensure the following connections have been made.

Domestic Hot Water

S-DO-02	DHW-SH valve	✓
S-DO-07	Immersion DHW	✓
S-AI-01	DHW Temp	●

Next

Figure 24: electrical connections

Valve check

Select SH to check the space heating valve is switching OK. Select DHW to check the valve is switching to DHW. Next will bring you to the DHW test

Next

Figure 25: Valve Check screen

4.2.7 DHW TEST

Before you run the DHW test, which consists of heating up the cylinder to maximum temperature from the heat pump, you will be asked to check that the valve (figure 26) is in the DHW position (A position), as shown on the screen in figure 25. Check that the red actuator marker changes to the correct position (the default position is B).

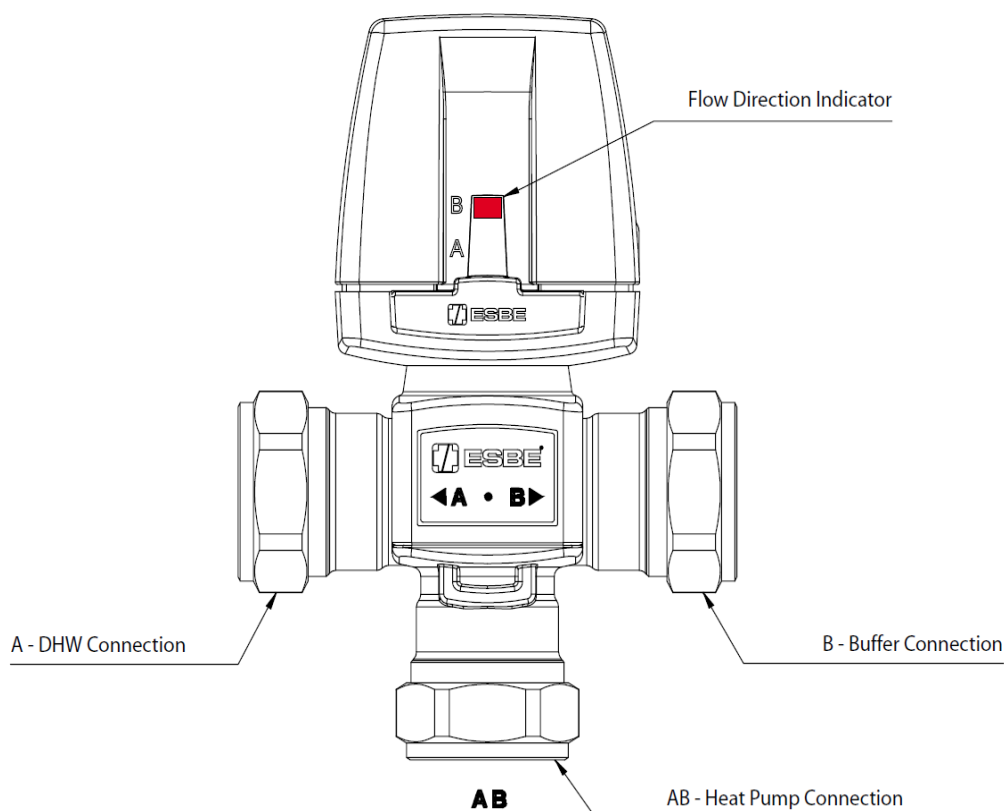


Figure 25: 3-Port Valve

When you have completed the valve check and select 'Next', you will see the DHW test screen, which informs that the test can take up to 90 minutes (based on a 300L cylinder). Selecting 'Run test' begins the DHW cycle and shows you the time remaining (see figure 27(a)).

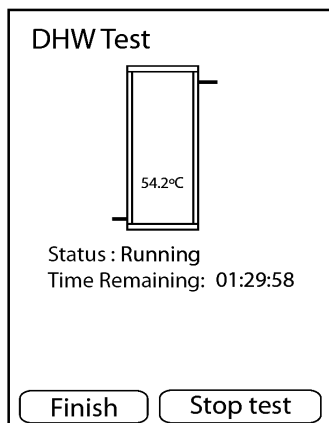


Figure 27(a): The test may be Postponed using the “Finish” button



NOTE: DURING THE DHW TEST, THE DEFROST FUNCTION WILL BE DISABLED. IF THE COIL STARTS FROSTING DUE TO EXTERNAL CONDITIONS, IT IS POSSIBLE TO POSTPONE THE DHW TEST BY SELECTING ‘FINISH’ ON THE DHW TEST SCREEN (SEE FIGURE 27(A)) WHILE THE TEST IS RUNNING. IF THE TEST IS POSTPONED, THE **DHW CAN STILL BE USED.**



NOTE: SELECTING ‘STOP TEST’ WILL CANCEL THE TEST COMPLETELY. IF THE DHW TEST HAS BEEN CANCELLED RATHER THAN POSTPONED, THE INFORMATION REGARDING THE IMMERSION DISPLAYED ON THE SET TEMPERATURE MENU FOR DHW WILL NOT BE CORRECT (THE IMMERSION WILL NOT BE USED UNTIL THE MAXIMUM TEMPERATURE ACHIEVABLE BY THE HEAT PUMP HAS BEEN REACHED).

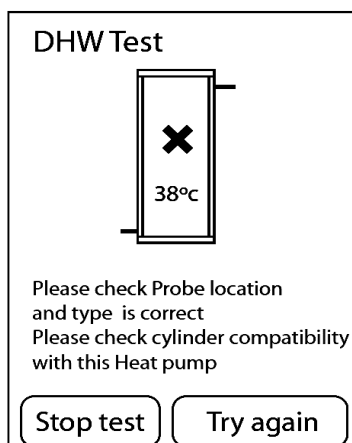


Figure 27(b): DHW Test Failed

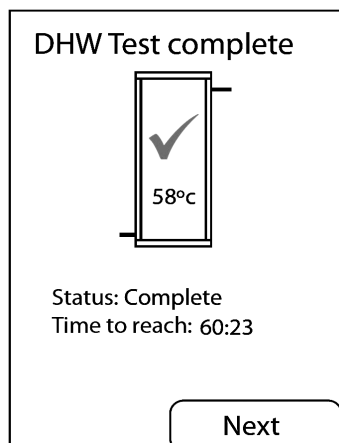


Figure 27(c): DHW Test completed

If the test fails, you will see the screen shown in figure 27(b), which provides information on why the test failed, and advice on checks to carry out.

If the test is complete and has been successful, you will see the screen shown in figure 27(c), which shows the maximum temperature that the cylinder can achieve.

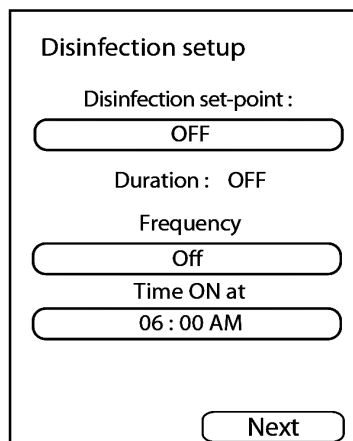


Figure 28: Disinfection Set-up

4.2.8 DISINFECTION (THERMAL)

Thermal disinfection is a function which keeps the level of legionella bacteria in the cylinder under acceptable levels. This is carried out by heating the hot water in the cylinder to a high temperature for a minimum set time.

The temperature and frequency of the disinfection cycle can be adjusted in this menu. If the temperature is set to above what the heat pump can achieve, text on the screen will appear which notifies that the immersion heater will be used at the end of the cycle to top up to the required disinfection temperature.

4.2.9 WEATHER COMPENSATION

The biggest factor in defining the heat demand required for a building is typically the weather. Which affects the required heat load for a building. Weather compensation works by adjusting the set point temperature of the heating system to reflect changes in the outside (external) temperature, allowing the heat pump to operate more efficiently.

Weather compensation is determined by the heat curve settings for the system. The pre-defined heating curves should only be modified by an installer to best match the heat emitters used.

4.2.10 HEATING CURVES

Each zone is associated to a pre-set heat curve. Selecting the zone and pressing 'Next' will allow you to assign a pre-set curve for typical heat emitters. The four pre-set heating curves are shown in table 4.

Each curve can be reviewed and modified to meet the requirements of the heating system by selecting 'Edit'. This will bring you to a default heating curve for the selected emitter. Selecting 'Next' will select the default heating curve.

The pre-defined curves have recommended temperature ranges for each heat emitter;

Heat Emitter Type	Max. Water Temp. at Low External Temp.		Min. Water Temp. at High External Temp.	
SmartRad	48°C	-10°C	35°C	10°C
Underfloor Heating	30°C	-10°C	25°C	12°C
Standard Radiator	55°C	-10°C	40°C	15°C
Custom (Flat Line)	55°C	-15°C	55°C	15°C

Table 4: Heating Curve Parameters

The values that generate the heating curve graph can be changed, by scrolling through the temperature value to adjust and setting it.

This is validated using the 'Set' button when complete (see figure 29).

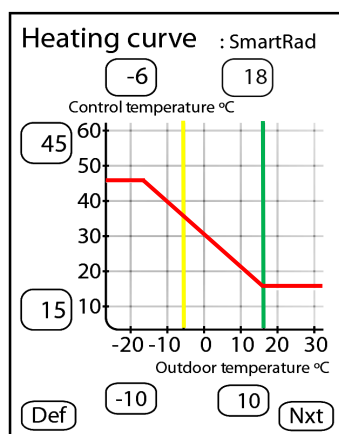


Figure 29: SmartRad Heating Curve

- The green line on the right indicates the maximum outdoor temperature at which space heating stops running (DHW is still adjusted independently).
- The yellow line on the left indicates the minimum outdoor temperature at which the bivalent heating system starts working and may need to be adjusted depending on the location/property.
- The red line indicates the temperature that the water will be heated to, based on the outdoor temperatures.
- The 'Default' option will reset the pre-defined values. Set will save entered values.




NOTE: IF THE HEAT PUMP IS IN HEATING "ON" MODE AND THE MAXIMUM OUTSIDE TEMPERATURE IS REACHED, THE HEAT PUMP WILL REVERT TO AND MAINTAIN THE SET BACK TEMPERATURE UNTIL THE HEATING IS TURNED OFF AND ON AGAIN. TO PREVENT THIS, IT IS RECOMMENDED TO SET YOUR SUMMER TEMPERATURE (SEE HEAT CURVES SECTION 4.2.10), AT A HIGHER VALUE (THE DEFAULT OUTSIDE AMBIENT SETTING IS 18°C).

COMFORT LEVEL

For end-users, the preferred method of modifying the heating system comfort level is by using the comfort level function rather than modifying the heat curve. Here, it is possible to raise or lower the water input temperature within a range of 9°C (-3 to +6) by accessing the comfort level.

For more information please see the A-Class User Manual.



NOTE: TO COMPLETE COMMISSIONING AND ALLOW THE HEAT PUMP TO OPERATE, YOU MUST SELECT THE 'SETUP COMPLETE' SUBMENU IN THE INSTALLER MENU, AS SHOWN IN FIGURE(S) 30/31. IF YOU DO NOT SEE THIS SCREEN, COMMISSIONING HAS NOT BEEN SUCCESSFUL AND THE HEAT PUMP WILL NOT OPERATE CORRECTLY.

Once all of these steps have been carried out successfully, you will see the screen shown in figure 31. Selecting 'Automatic' will activate all settings, where as selecting 'Standby' will enable the heat pump only to carry out frost protection (i.e. no heating is required but the heat pump is protected from freezing conditions).

The default setting for the heat pump is OFF. To turn on the heat pump, you must return to the home screen to access the user menu.

For further information on end user controller instructions please see 'A-Class Air Source Heat Pump User Guide' supplied in the Hydraulics Pack with this manual.

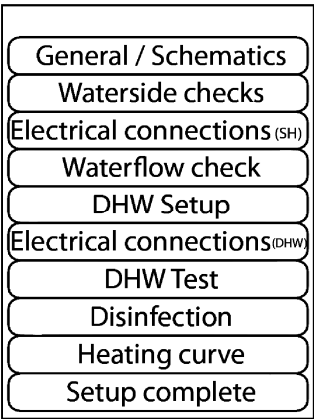


Figure 30: Installer menu

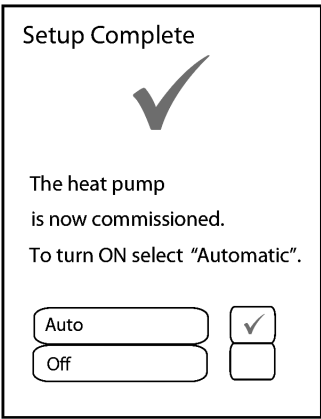


Figure 31: Commissioning complete

4.3 Additional Installer Menu Options

Once the commissioning process has been completed, additional menus will be available to the installer, as outlined in this section.

4.3.1 MESSAGE LOG

The message log menu provides a list of all errors that have taken place, including the date and time when they occurred. Selecting an individual error code will provide more information on the type of error that occurred if an SD card is present. Active error messages will show a ticked box.

Figure 31 shows an example of the messages shown in the 'message list' menu. When a new error occurs, it will appear at the top of the list. Up to 20 errors can be shown on the list at once, then, if another error occurs, the oldest error will be pushed off the list to make room for the new error. If the same error message is being displayed more than once, it may be necessary to check back through some of the older error messages in order to find the cause of the problem.



NOTE: IF A MAJOR FAULT OCCURS MANY TIMES, THE COMPRESSOR WILL GO INTO LOCK-OUT MODE TO PREVENT ANY FURTHER DAMAGE TO THE HEAT PUMP. IN ORDER TO RESOLVE THIS, THE POWER TO THE COMPRESSOR WILL HAVE TO BE TURNED OFF FOR AT LEAST 2 MINUTES AND TURNED ON AGAIN.

4.3.2 OUTPUT TESTS

The output tests menu allows you to turn ON/OFF tests on individual components of the system, as shown in figure 33, and can be accessed once *Electrical Connections (Space Heating)* are confirmed.

The relays which control the immersion and backup heater/buffer use an electric interlocking system, and therefore R7 and R8 must be used together in order for the backup heater to function. Testing these relays individually will not reflect this.

19.03.2014 15:51
Error Code: F86 Active: <input type="checkbox"/>
19.03.2014 15:51
Error Code: F86 Active: <input type="checkbox"/>
19.03.2014 15:51
Error Code: F86 Active: <input type="checkbox"/>
19.03.2014 15:51
Error Code: F86 Active: <input type="checkbox"/>
19.03.2014 15:51
Error Code: F86 Active: <input type="checkbox"/>
19.03.2014 15:51
Error Code: F86 Active: <input type="checkbox"/>
19.03.2014 15:51

Figure 32: Message Log screen

Output tests

Circulation Pump
ON
OFF

DHW-SH valve
ON
OFF

Zone 1 Pump/valve
ON
OFF

R7: Immersion
ON
OFF

R8: Backup Heater
ON
OFF

Fan
ON
OFF

Relay 7 Only = Immersion
Relay 7 & 8 = Backup/Buffer

Next

Figure 33: Output Tests screen

4.3.3 DEFROST

Before running a manual defrost cycle you must ensure the buffer has been isolated from the heating, as stated by the message on the UI. Selecting 'Start Defrost' begins the defrost cycle. The defrost screen will state the time remaining in the defrost cycle.

A heating water return temperature of $\geq 18^{\circ}\text{C}$ is required for proper defrosting of the evaporator.



NOTE: THIS FUNCTION MUST ONLY BE USED WITH GREAT CARE BY TRAINED INSTALLERS, AS THE CONDENSER PLATE HEAT EXCHANGER MAY POTENTIALLY FREEZE IF THE WATER FLOW TEMPERATURE IS TOO LOW. THIS FUNCTION HAS THE POTENTIAL TO FREEZE THE CONDENSER (F43-47 ERROR MESSAGES ARE DEFROST ERRORS).

4.3.4 OPERATING DATA

The operating data menu provides a list of all the system parameters, such as all temperatures, including each zone set and actual temperatures, flow rate, and heat pump status. If an SD card is present, this data will be recorded to every message listed.

4.3.5 HISTORY

The History menu shows the temporary and permanent run time history of the system. These values can be reset in order to record run times over a certain time period. Selecting 'Next' brings you to the permanent run time history which cannot be reset unless a software update is installed.

4.3.6 SERVICE MENU

The service menu can be accessed, in a similar manner to the installation menu, by inputting the installer menu code (22) and then using the 'Login' access code 998. **Access to this menu may be required for fault finding or servicing.**

5 System Health Check/Maintenance

These are checks that should be carried out regularly to ensure that your Dimplex product performs at its best.

Heat pump:

- ☐ Is the fan grille clear from debris? - Visual check
- ☐ Is the tray clear from debris and water flowing freely? - Visual check
- ☐ Is the condensate drain clear from debris?
- ☐ Is the evaporator coil clean and free from damage? E.g. flattened fins
- ☐ Are all of the outer panels secure?

Electrical:

- ☐ Is the power cable firmly fixed?
- ☐ Is the earth wire connection secure?
- ☐ Is the supply voltage correct?

Hydraulics:

- ☐ Is the system correctly pressurized?
- ☐ Are there any water leaks in the system? Is the required pressure holding?
- ☐ Is the strainer on the return pipe clear of debris? See section 3.2 for details on isolating and cleaning the strainer.



NOTE: IT IS RECOMMENDED THAT THE STRAINER IS CHECKED AND CLEANED 24 HOURS AFTER COMMISSIONING, AND EACH TIME THE SYSTEM IS MODIFIED OR HAS SERVICE WORK CARRIED OUT THEREAFTER.

Indoor settings:

- ☐ Are the set temperatures and heating times suitable for the occupants?
- ☐ Is the building warm enough for the occupants or does the heating curve need to be adjusted?

Appendices

- A - Technical Specifications
- B - Refrigeration Cycle diagram
- C - Schematic Zone Diagrams - Legend
- D - Schematics 1, 2, 3 & 4 : Space Heating Only
- E - Schematics 5, 6, 7 & 8 : Zone Space Heating & Domestic Hot Water
- F - Schematics 9, 10, 11 & 12 : Bivalent Space Heating
- G - Schematics 13, 14, 15 & 16 : Bivalent Zone Space Heating & Domestic Hot Water
- H - Wiring Centre Electrical Connections - with A-Class Cylinder
- I - Jumper Information for Alternative Wiring Configuration
- J - Controller Cable Connections
- K - Installer Menu Flow Chart
- Installer Hand-Over Form
- Certificate of Conformity

APPENDIX A: Technical Specifications – A Class Air-to-Water Heat Pump

TECHNICAL SPECIFICATIONS						
1	TYPE AND ORDER CODE	UNITS		A8M	A12M	A16M
2	DESIGN					
2.1	Degree of protection according to EN 029 for compact unit or heating element			IP 24		
2.2	Installation Location			Outside		
3	PERFORMANCE DATA					
3.1	Operating Temperature Limits			Min/Max		
	Heating Water Typical Temperature Range	°C		25/65		
	Outside Air Temperature Range	°C		-20/30		
3.2	Heating Water Temperature Difference @ Standard Rating Condition	A7 W35	K	5		
	<u>Heat Output / COP</u> These figures characterise the size and performance of the system according to EN 14511 with clean heat exchangers. Abbreviations have he following meaning, e.g. A2 W35: Outside temperature 2°C and heating water supply temperature 35°C. A2 W35 test takes into account defrosting as per EN 14511.	@ A7 W35	kW/---	6.30 / 4.42	12.30 / 4.72	12.30 / 4.72
		@ A-2 W35	kW/---	6.7 / 2.9	10.5 / 3.3	13.4 / 3.2
		@ A-7 W35	kW/---	7.0 / 2.9	12.0 / 3.0	13.2 / 3.0
		@ A7 W55	kW/---	6.2 / 3.1	12.5 / 3.2	12.5 / 3.2
		@ A-2 W55	kW/---	7.1 / 2.2	12.0 / 2.5	15.6 / 2.4
		@ A-7 W55	kW/---	7.1 / 2.1	12.0 / 2.2	15.3 / 2.2
@ A7 W65	kW/---	6.3 / 2.7	12.4 / 2.6	12.4 / 2.6		
3.3	Sound Power Level ¹	dB(A)		64	63.5	63.5
3.4	Sound Pressure Level @ 10m (Heat Pump positioned against wall)	dB(A)		41.5	38.5	38.5
3.5	Heating Water Flow Rate @ A7W35, nominal/minimum	m³/h		1.15 / 0.85	2.1 / 1.2	2.1 / 1.2
3.6	Condenser Pressure Drop @ nominal flow rate (A7W35)	kPa		3	4	4
3.7	Air Flow @ A7W35	m³/h		2600	3700	3700
3.8	Refrigerant; total filling weight	Type/kg		R410A / 1.75	R410A / 2.0	R410A / 2.0
3.9	Water Capacity of Stainless Steel Heat Exchanger	litre		0.85	1	1
3.10	Polyol Ester Oil in Compressor	litre		1.18		
4	DIMENSIONS, CONNECTIONS & WEIGHT					
4.1	Device Dimensions Without Connections	H x W x L (mm)		1260 x 932 x 401	1571 X 932 X 401	
4.2	Physical Volume	m³		0.5	0.59	
4.3	Device Connections to Heating System	inch		1" ext. thread		
4.4	Weight of the Transportable Unit (Excluding Packaging)	kg		110	130	
5	ELECTRICAL CONNECTIONS (HEAT PUMP)					
5.1	Nominal Voltage; Fuse Protection	V/A		230V / C32	230V / C 40	
5.2	Nominal Power Consumption / Nominal Current @ A7W35	kW/A		1.4 / 6.3	2.6 / 11	
5.3	Maximum Power Consumption / Maximum Current @ A-2W55	kW/A		4 / 19	6.9 / 30	8.1 / 35
5.4	Maximum Starting Current - Inverter Ramp Up			Low (2.5A)		
5.5	Power Factor A7W35 / (cos θ)	-		≥0.94	≥0.95	≥0.95
5.6	Electrical Supply Frequency	Hz		50	50	50
5.7	Power Input of Integral Fan @ A7W35 ²	W		50	60	60
6	OTHER DESIGN CHARACTERISTICS					
6.1	Defrosting	Automatic				
6.2	Type of Defrosting	Reverse Cycle				
6.3	Heating Water in Device Protected Against Freezing by Software	Yes				


¹According to EN 12102.

²Fan is variable speed, rated input relates to nominal input power.



APPENDIX C - Schematic Zone diagrams - Legend

No. on UI	Code	Heating type	No. of Zones	DHW	Appendix No.
1	10200110	Mono	1	No	D
2	10200210	Mono	2	No	D
3	10200310	Mono	3	No	D
4	10200410	Mono	4	No	D
5	10220190	Mono	1	Yes	E
6	10220290	Mono	2	Yes	E
7	10220390	Mono	3	Yes	E
8	10220490	Mono	4	Yes	E
9	10300110	Bivalent	1	No	F
10	10300210	Bivalent	2	No	F
11	10300310	Bivalent	3	No	F
12	10300410	Bivalent	4	No	F
13	10310190	Bivalent	1	Yes	G
14	10310290	Bivalent	2	Yes	G
15	10310390	Bivalent	3	Yes	G
16	10310490	Bivalent	4	Yes	G

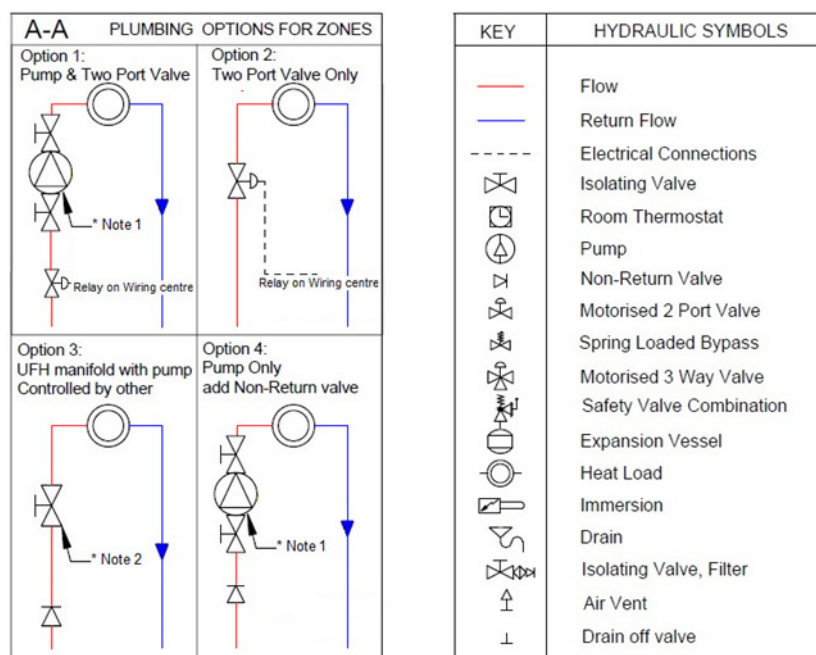


Note 1: If EC pump is installed, it must be through a suitable external relay (high inrush current, not supplied).


Note 2: Required for isolating the buffer during initial start-up

ITEM	DESCRIPTION	PART NO.	KIT A (SH & DHW)	KIT B (SH ONLY)
1	WIRING CENTRE	049186		
2	USER INTERFACE	1754600		
3	PUMP - UPM GEO 25-85-180			
4	SPRING LOADED BYPASS			
5	28MM X 1" SWIVEL INTABALL COMBI		050489	049193
6	28MM X 1" SWIVEL BALL VALVE			
7	PUMP VALVE GATE 1"1/2X28mm			
8	3 PORT VALVE - VZD263 2-P			

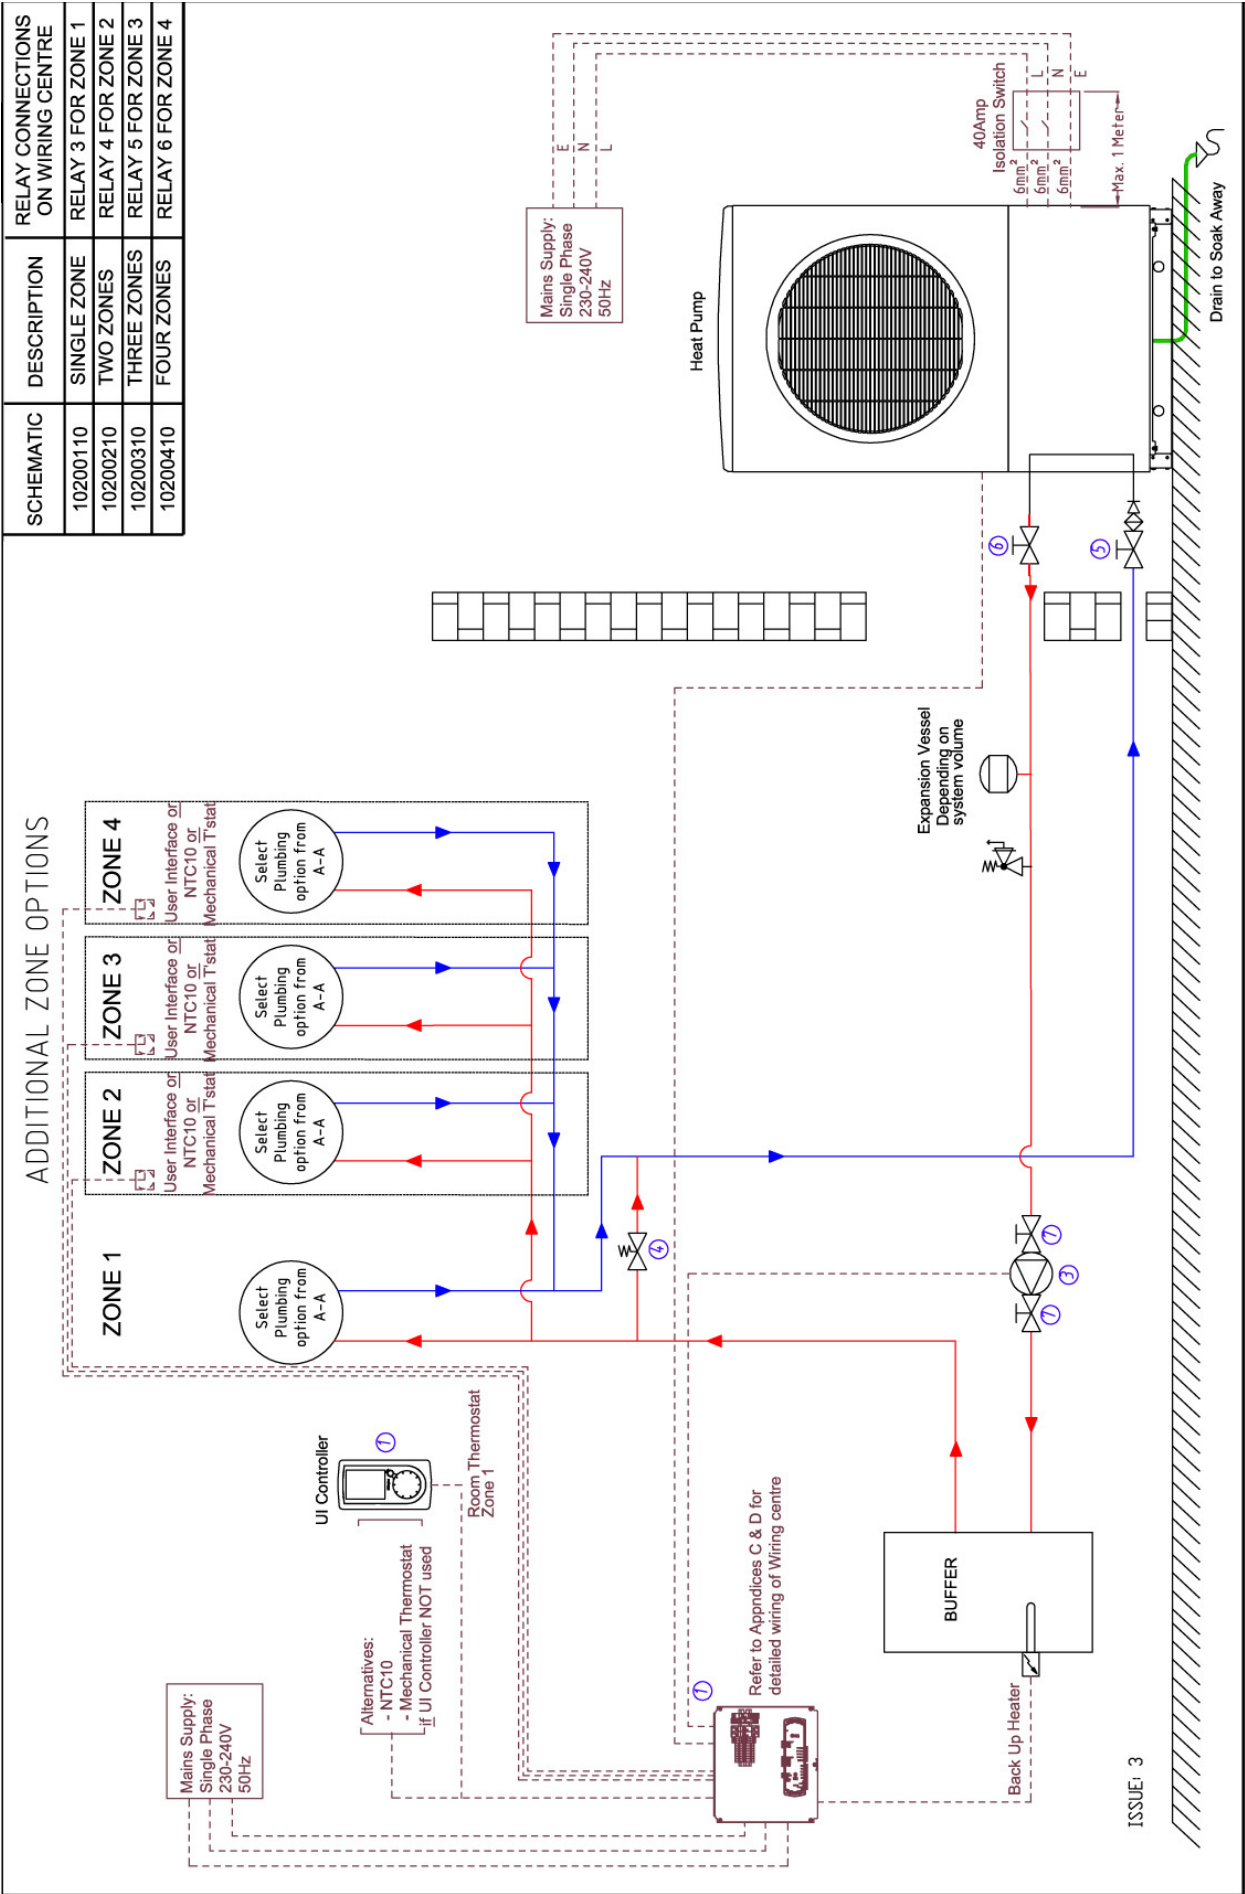
APPENDIX D - Schematics 1, 2, 3 & 4 - Space Heating Only



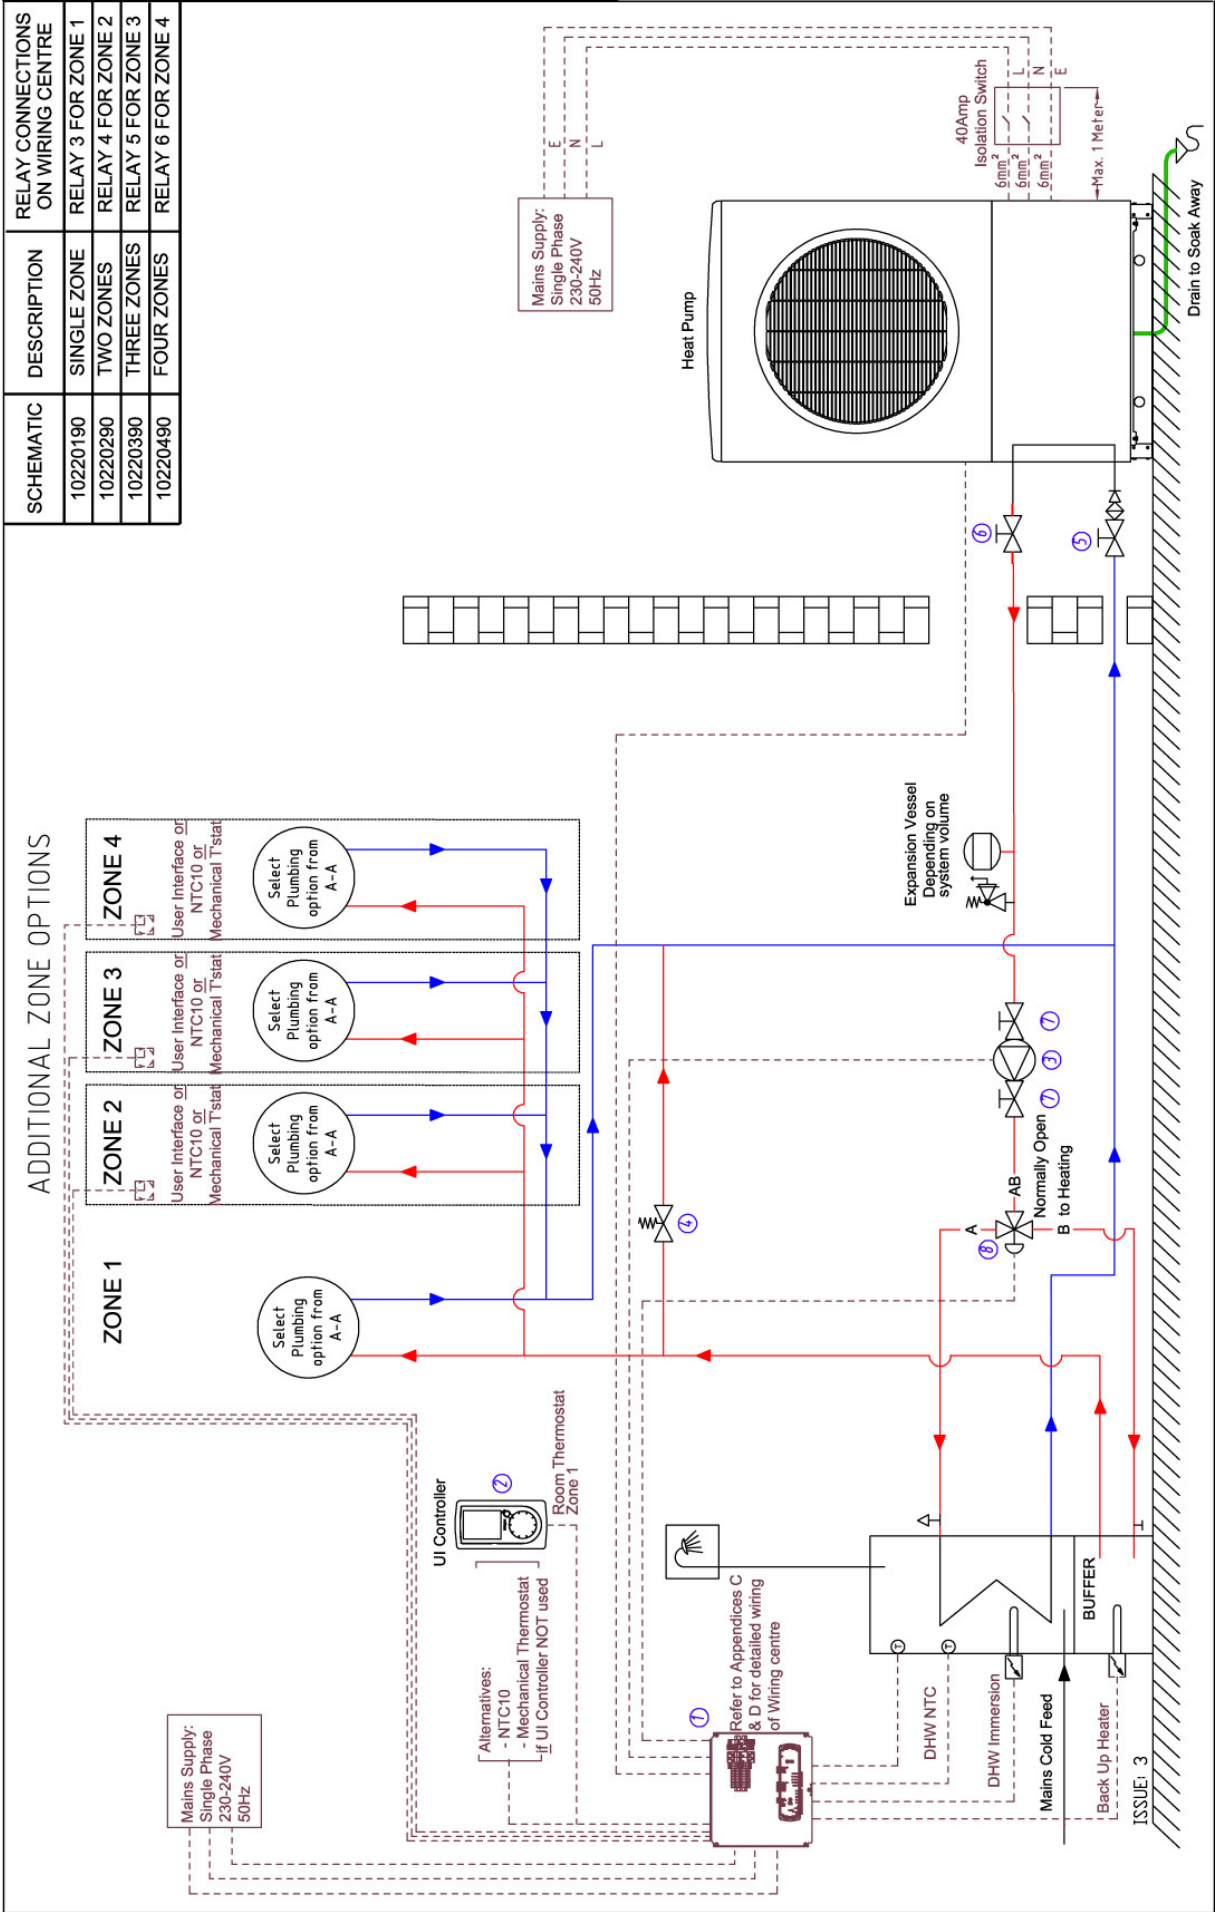
APPENDIX E - Schematics 5, 6, 7 & 8 - Zone space heating & DHW



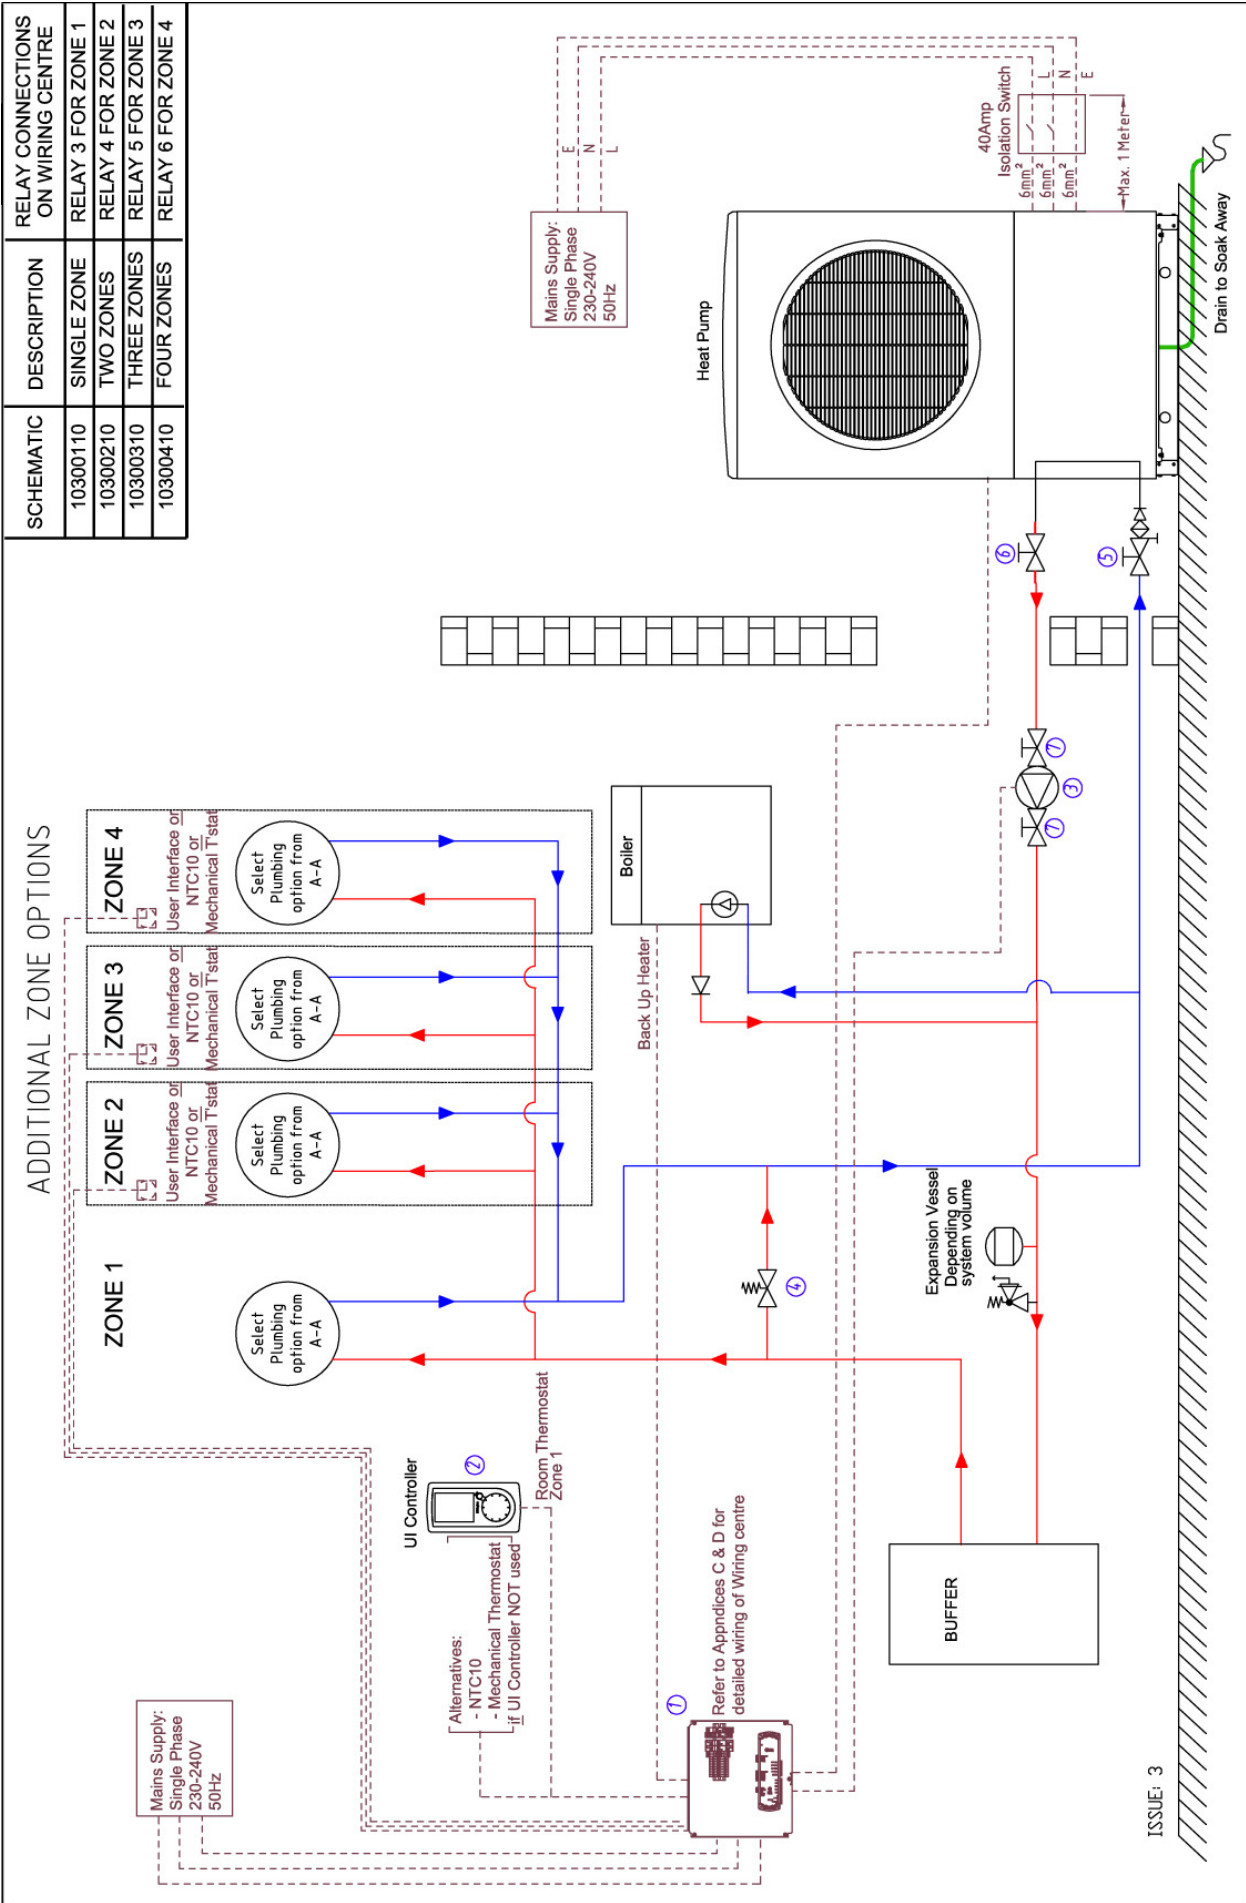
APPENDIX F - Schematics 9, 10, 11 & 12 - Bivalent Space Heating




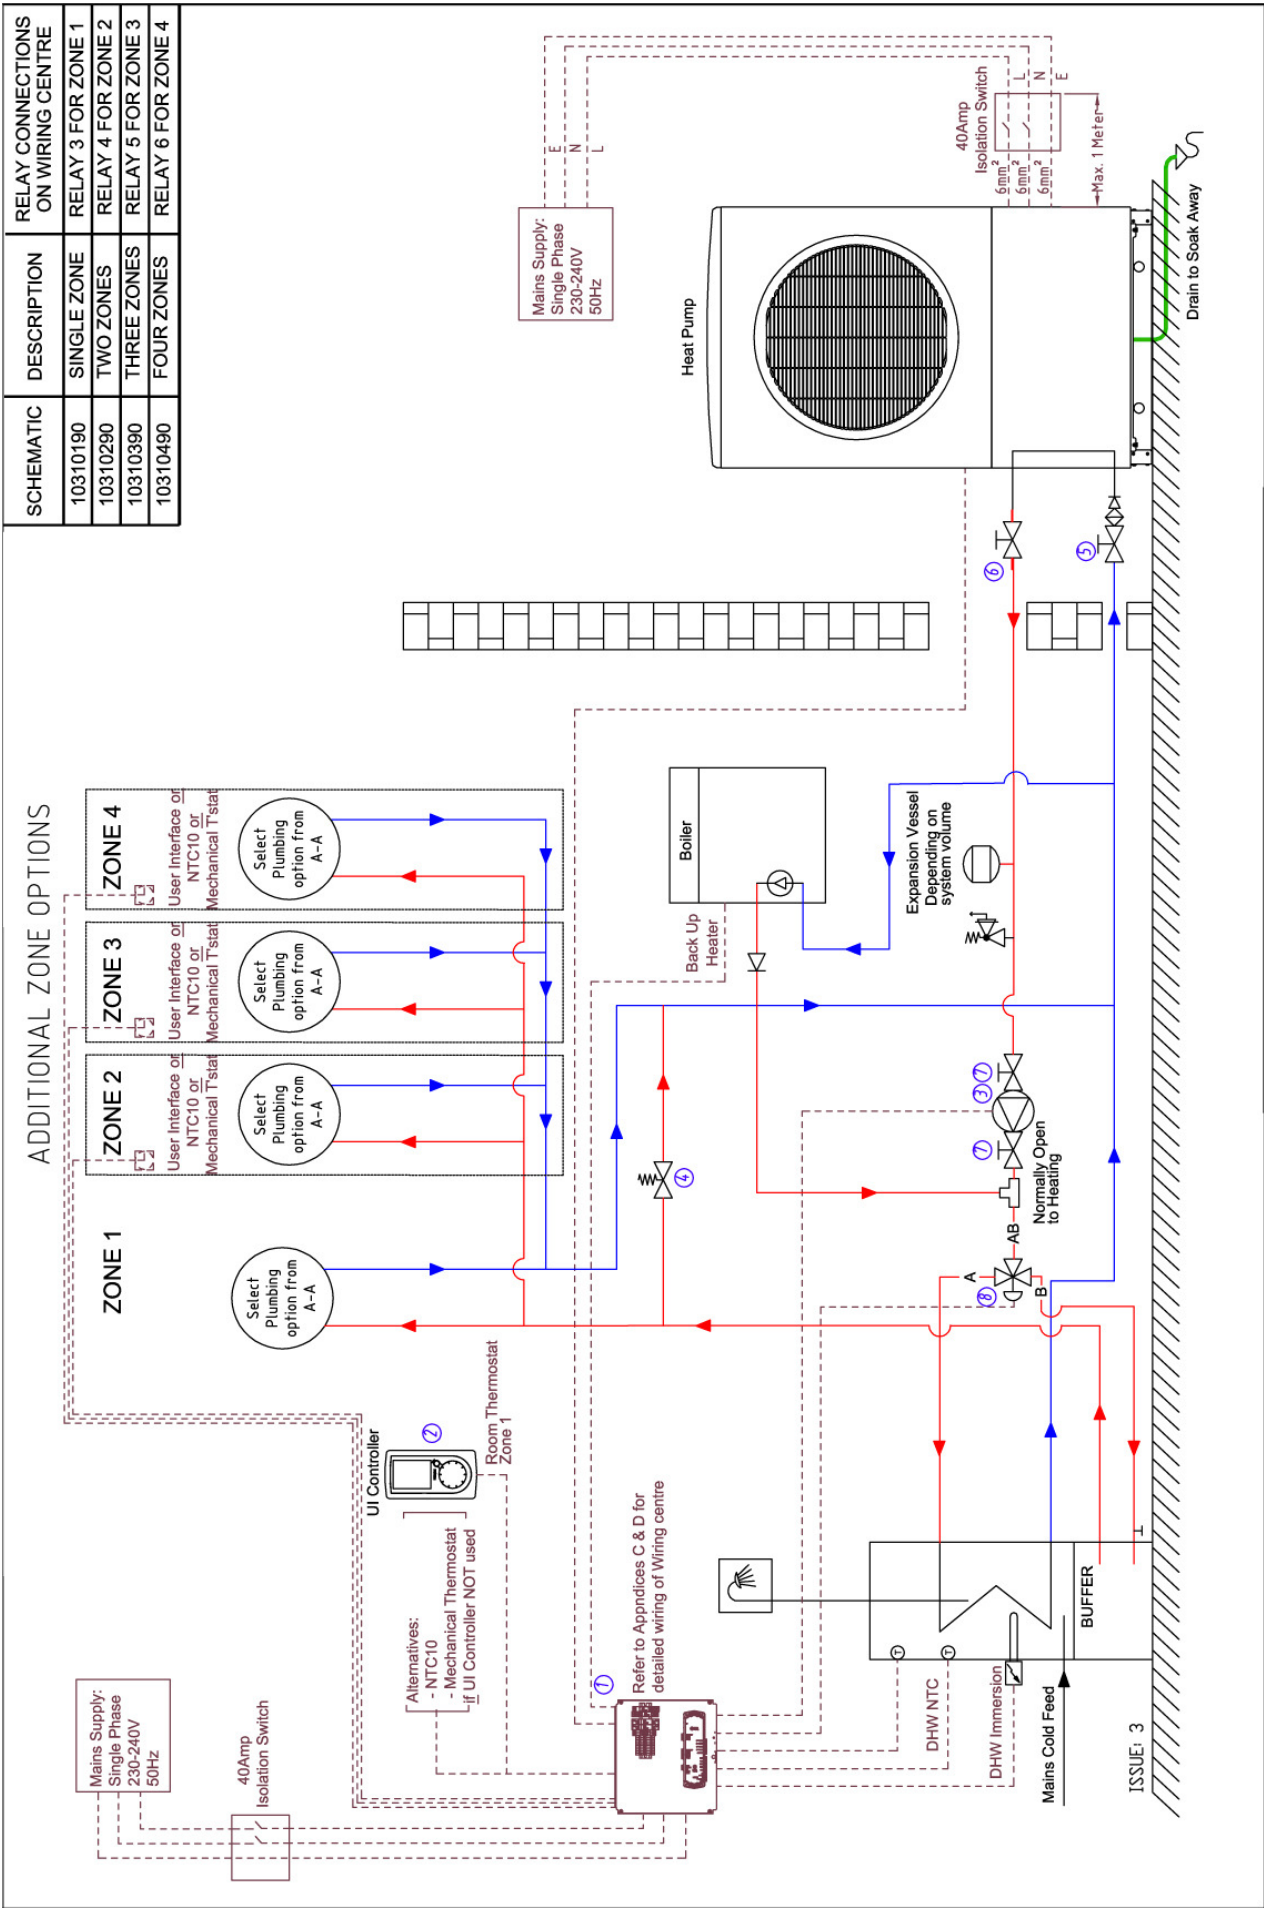
APPENDIX G - Schematics 13, 14, 15 & 16 - Bivalent zone Space Heating & DHW



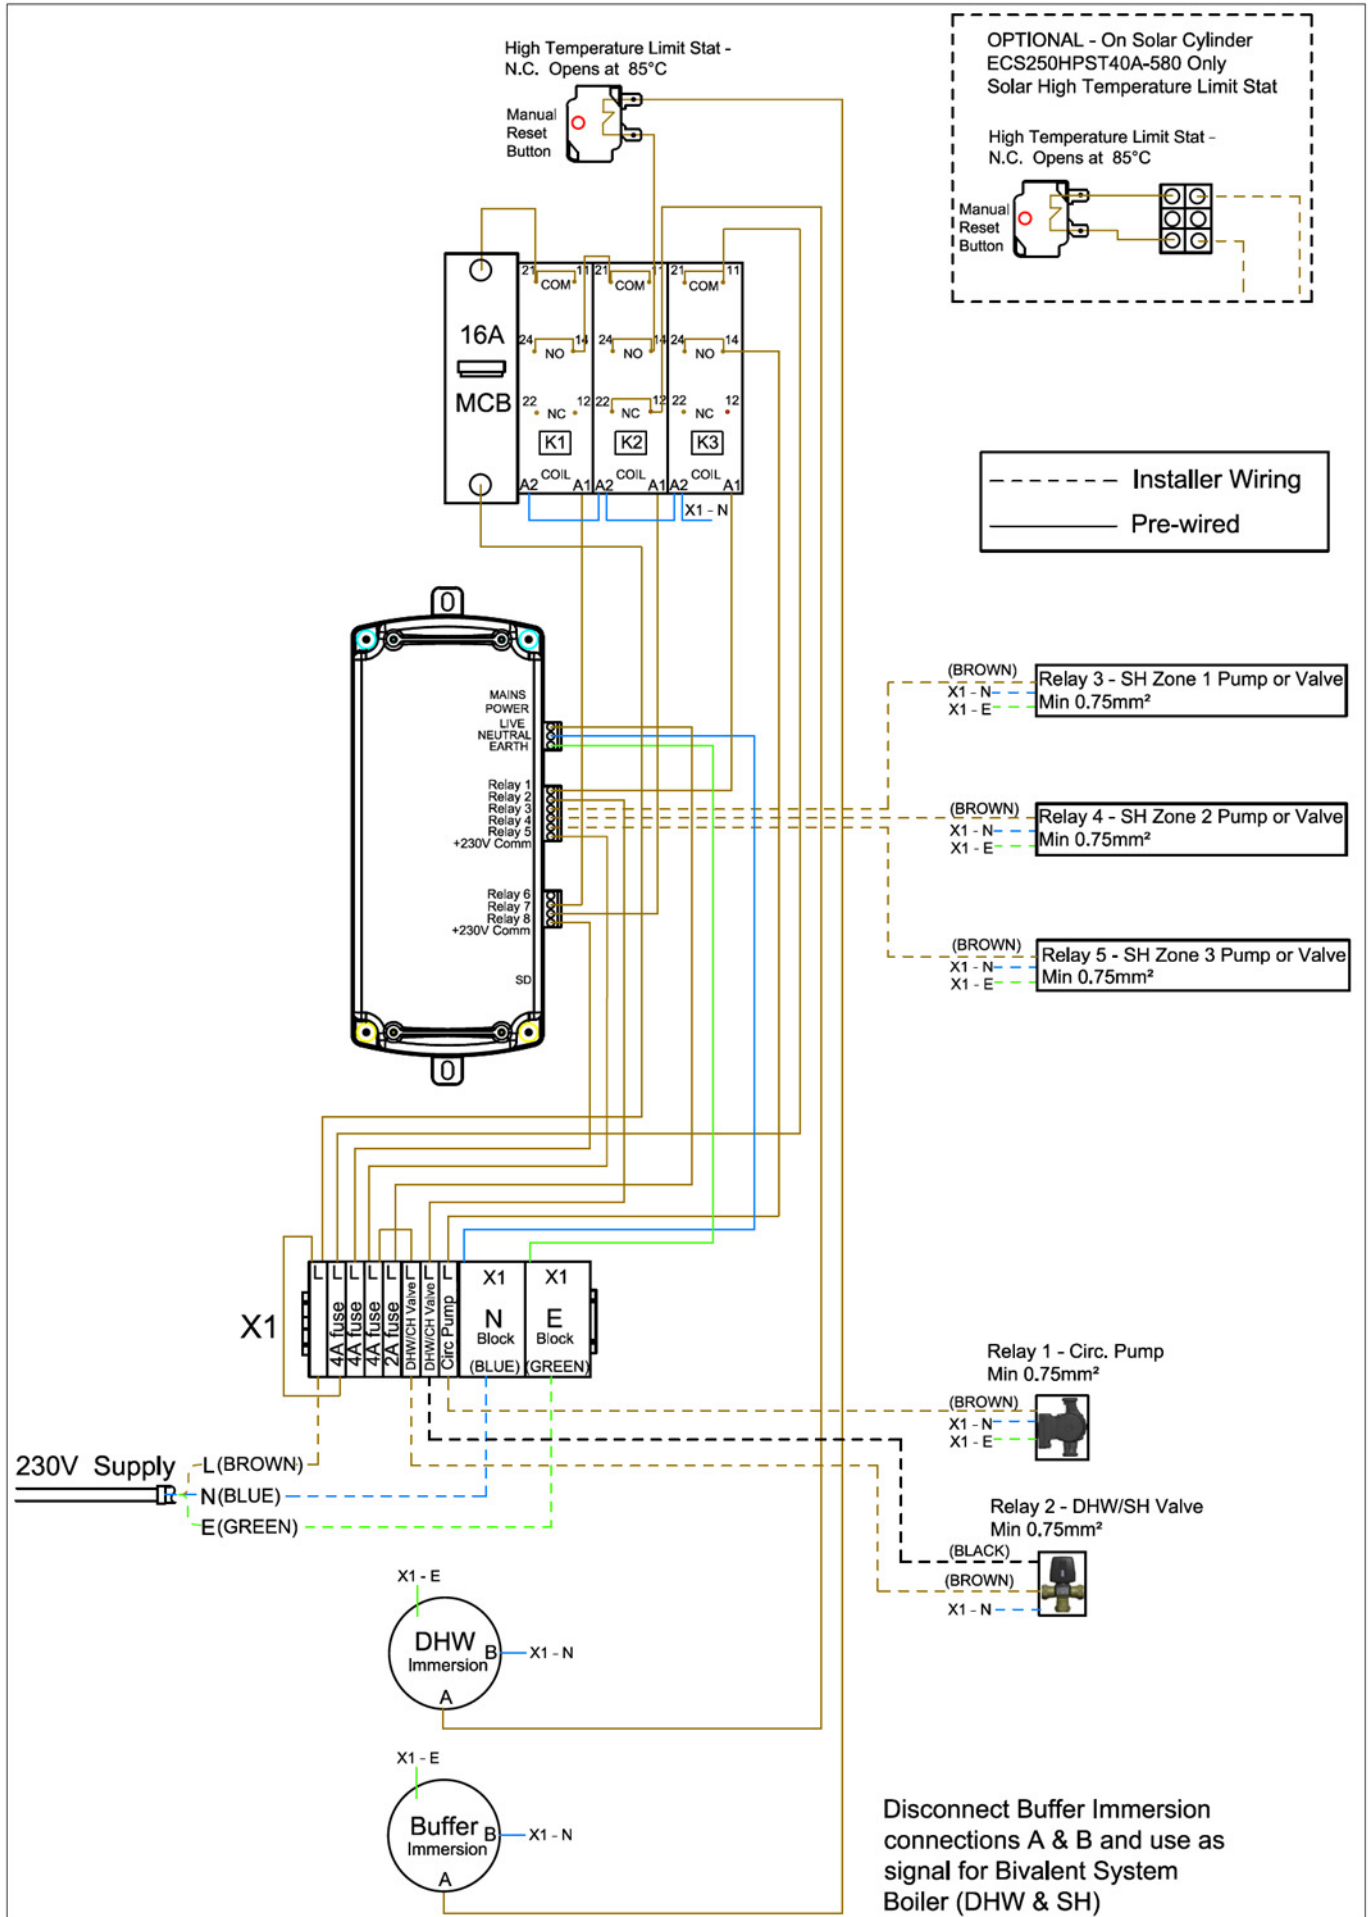APPENDIX H - Wiring centre electrical connections – with A Class cylinder




APPENDIX I - Jumper Information for Alternative Wiring Configuration

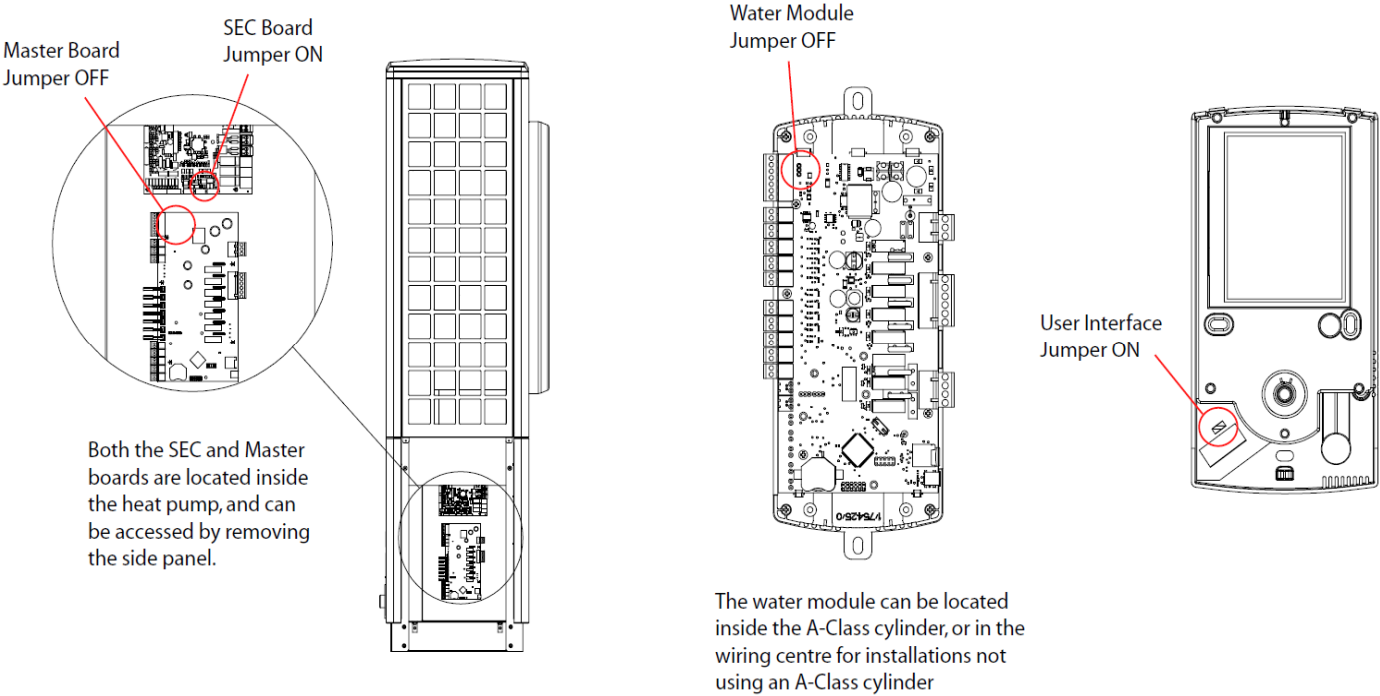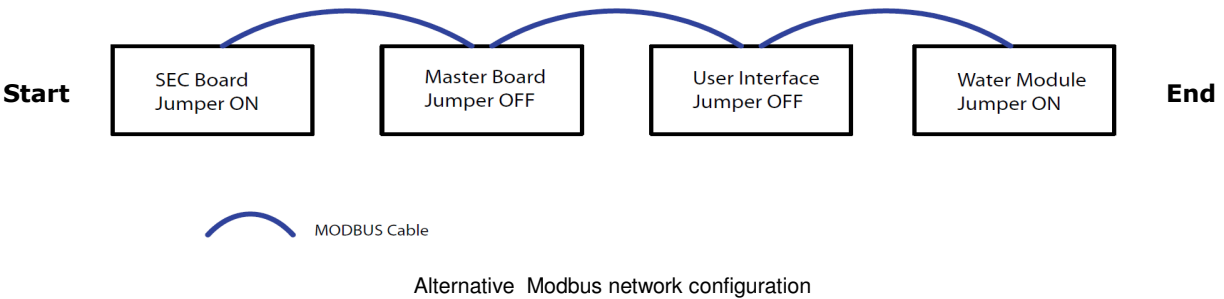

Locations of jumpers that should be in the ON/OFF position for the **recommended configuration**



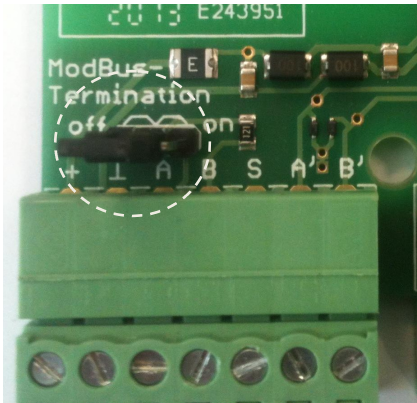Jumper in ON position on SEC board




Jumper in the OFF position on water module




Jumper in the ON position on user interface (UI)

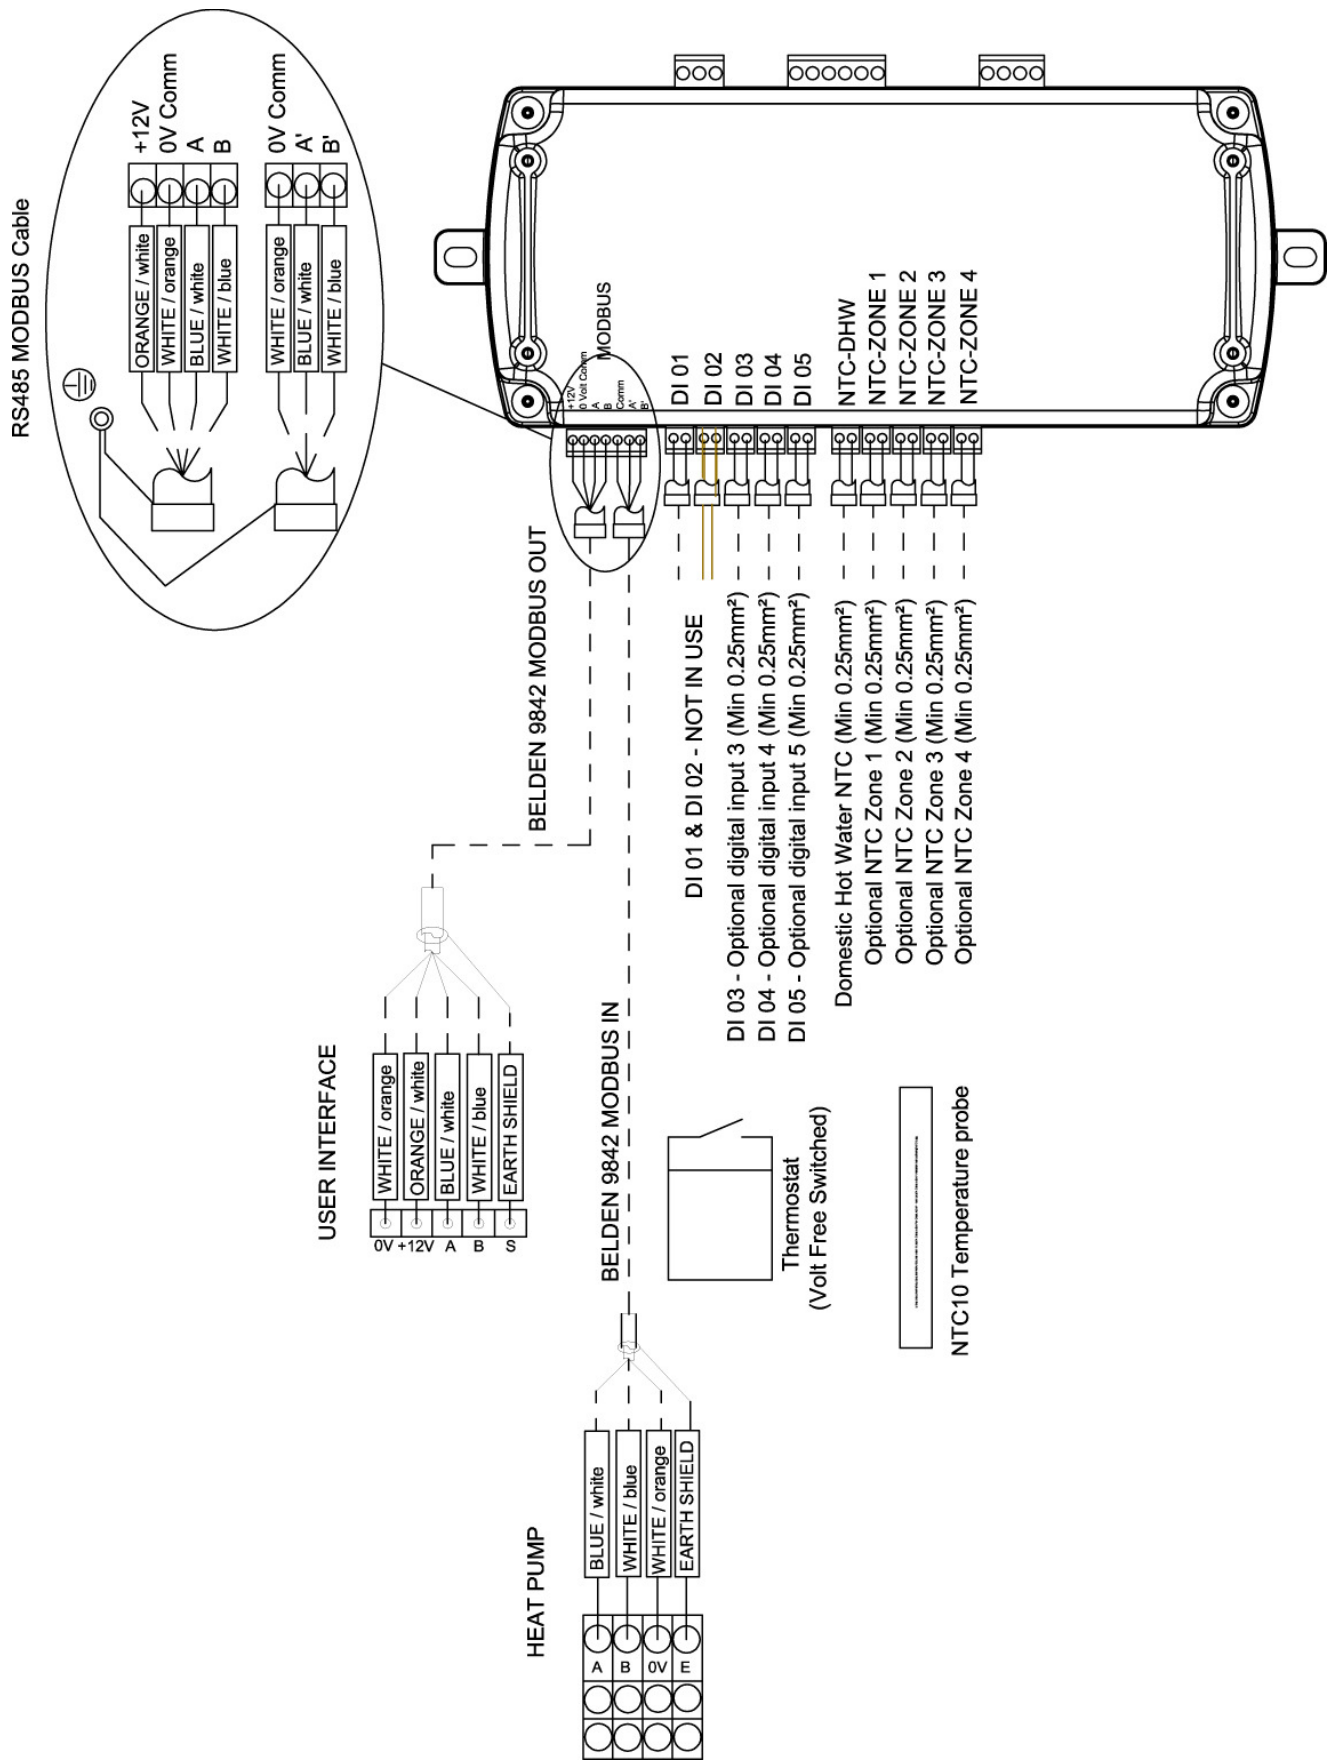APPENDIX J - Controller cable connections



APPENDIX K - Installer Menu Flow Chart

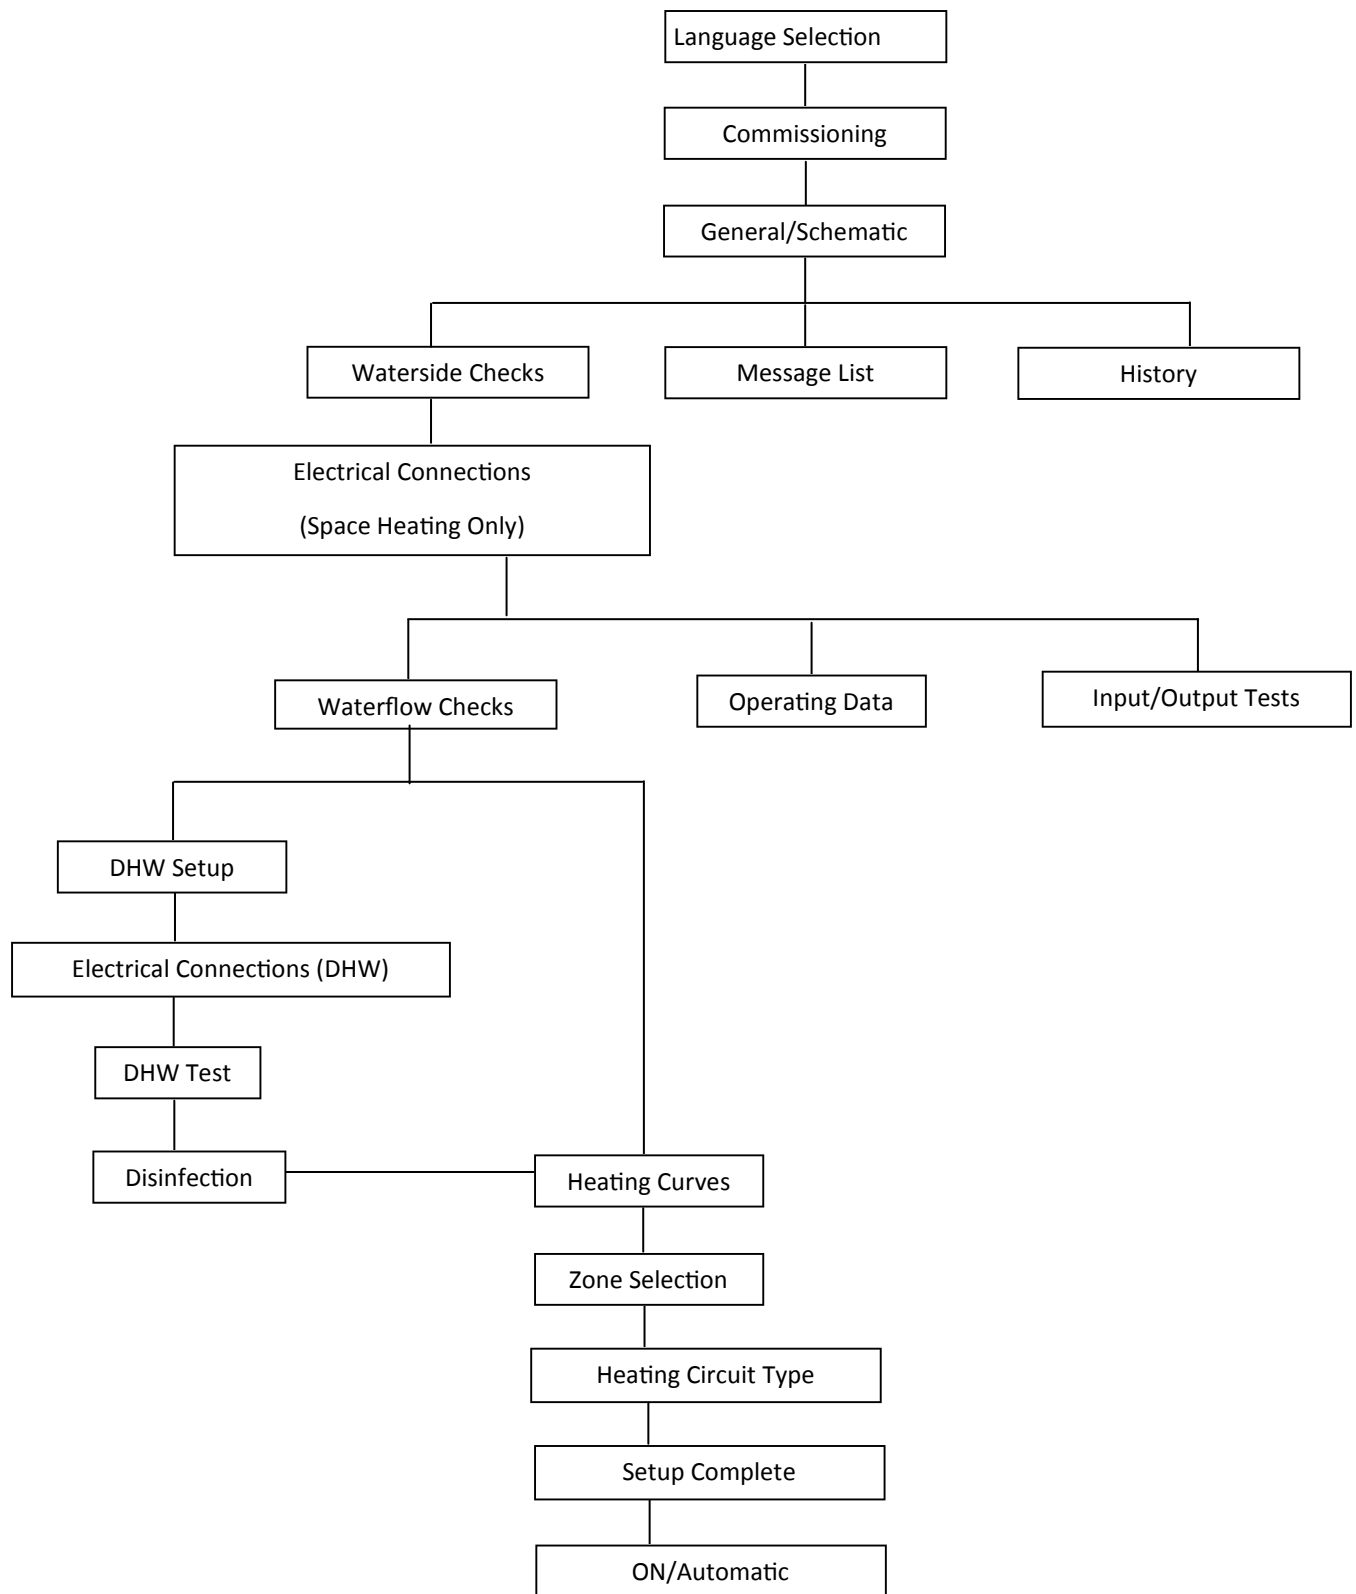

Installer menu flow chart

Each submenu will appear once the upper level menu has been completed. Availability of menus will depend on the schematic zone diagram selected (as shown in Appendix B).

Installer Hand-Over Form

Installer Name & Address:			
Installer Contact Phone Number;		Installer Contact Email Address:	
MCS Installer Number:			
Date of Installation / Commissioning:			
Heat Pump Model:		HP Serial Number (from nameplate):	
Cylinder Model / Serial Number:			
Accessories Installed:			
Schematic number used for commissioning:			
Details of Zone Control and Heat Emitters Installed:			
Any other relevant information:			

Note: this installation manual needs to be left with the end user.



EC Declaration of Conformity

**GDC Group Limited,
Millbrook House, Grange Drive,
Hedge End, Southampton,
Hants, SO302DF,
United Kingdom**

Manufacturer:

GDC Group,
Greenbank Industrial Estate,
Rampart Road,
Newry,
Co. Down,
BT34 2QU

Hereby certified that the following device(s) complies/comply with the applicable EU directives. This certification loses its validity if the device(s) is/are modified.

Description: Heat Pump

Type: Air – to – Water

Model: A16M

Model: A12M

Model: A8M

EC Directives:

Low voltage directive 2006/95/EC

EMC directive 2004/108/EC

Pressure equipment directive 97/23/EC

Applied Standards:

EN 60335-1:2002+A11+A1+A12+corr.+A2:2006; EN60335-1/A13:2008; EN60335-2-40:2003+A11+A12+A1+corr.+A2:2009

EN55014-1:2006; EN55014-2:1997+A1:2001

EN61000-3-2:2006; EN61000-3-3:1995+A1:2001+A2:2005

EN378-1:2008; EN378-2:2008+A1:2009; EN378-3:2008; EN378-4:2008

EN 14511-1:2007; EN14511-2:2007; EN14511-3:2007+EN14511-3:2007/AC:2008;

EN14511-4:2007

Conformity assessment procedure according to pressure equipment directive:

Module A

CE mark added:

2013

EC declaration of conformity issued on:

25th September 2014

Ireland, 25.09.14

Technical Director

Martin Betz: _____

Issue: 1.03