
Model: DXAD100 - Dimplex Multifunction Electronic Ultrasonic Aroma Diffuser

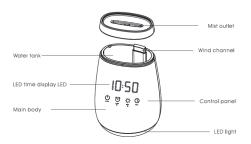

# IMPORTANT SAFFTY INFORMATION:

WARNING: Microorganisms can grow in the water reservoir and be blown in the air causing serious health risks when the water is not renewed and the tank is not cleaned regularly and properly.

Unplug the appliance before filling and cleaning.

CAUTION: Clean and empty the water tank every third day. Empty the tank and clean it with fresh tap water or cleaning agents if directed by the manufacturer. Remove any scale, deposits, or film that has formed on the sides of the tank or on interior surfaces, and wipe all surfaces dry.

Be aware that high humidity levels may encourage the growth of biological organisms in the environment.

Do not permit the area around the aroma diffuser to become damp or wet. If dampness occurs, use the aroma diffuser intermittently. Do not allow absorbent materials, such as carpeting, drapes, or tablecloths, to become damp.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Empty and clean the aroma diffuser before and after storage, never leave water in the reservoir when the appliance is not in use.

Do not immerse this product or its power adaptor / cable in water.

## IMPORTANT NOTES BEFORE USE:

- 1.Place the aroma diffuser on a flat surface, about 60cm away above the floor and 10cm away from walls.
- DO NOT place the aroma diffuser on wooden furniture which can be damaged by water.
   Route the power cable carefully to prevent any accidents like tripping or knocking over the
- product.

  4. Use the measuring cup to pour water into the water tank. DO NOT fill the water above the
- 4. Use the measuring cup to pour water into the water tank. DO NOT fill the water above the MAX level mark in the tank. NB – The diffuser will not work if it is filled beyond the MAX level mark.
- 5. DO NOT use de-ionised water as this will damage the product.
- 6. Please use filtered water to extend the life of the product.
- 7. Use the diffuser in an open space to allow the mist to freely circulate.
- 8. Avoid adding too many drops of oil.
- 9. This diffuser requires regular water top up when in use otherwise it switches off automatically.
- 10. Do not use the product close to appliances which may be sensitive to moisture or aromatherapy/ essential oil ingress to avoid unnecessary risk of damage.
- 11. Please make sure that the aroma diffuser is off and disconnected from the electrical outlet before filling or when cleaning the water tank.
- 12. Empty the water tank and wipe clean and dry when the diffuser is not in use. VERY IMPORTANT
- 13. DO NOT open the unit under any circumstance. Shock hazard!
- 14. DO NOT use this product if you have respiratory problems which may be adversely effected by higher moisture levels in the air.
- 15. Do not use aromatherapy or essential oils in this product if you are not sure that they are safe and will not cause you to suffer from respiratory issues or skin allergies, if in doubt consult a physician.

## Specification:

### TECHNICAL DATA

Product name: Dimplex Ultrasonic Aroma Diffuser

• Model No: DXAD100

Input voltage: AC:100-240V,50/60Hz
Water tank capacity: 100mL

Rated power: 12W

• Dimension: 116x112x162mm

Net weight: 0.43kg
Coverage Area: 15 m²

### ULTRASONIC AROMA DIFFUSER

This decorative and unique ultrasonic aroma diffuser and humidifier generates a subtle, calming and relaxing mist which can be scented by adding aromatherapy / essentials oils.

and relaxing mist which can be scented by adding aromatherapy / essentials oils.

Aroma Diffuser function—Add your favorite aromatherapy or essential oil to gently fragrance the ambient air within your room. The advanced ultrasonic technology used, produces vibrations at high frequency turning the water into mist, creating a soothing and therapeutic atmosphere. Humidifier—Moisturises and refreshes the air we breathe.

**loniser**—Produces 'happy' negative ions which are considered to lift your mood, strengthen the immune system and relieve stress. Negative ions have several other claimed benefits for the respiratory system and general well-being.

Colour changing light—For added ambience, turn on the base light which can be set to a fixed colour or to continuously cycle through a spectrum of colours.

LED 24Hr Clock—Operates as a 24Hr clock with a clear LED time display above the touch control panel.

Alarm Clock— Can be set to alarm and switch the product on automatically at the set time. Runback Timer—Can be set to operate for 30/60/120/180 minute periods. The Aroma Diffuser will automatically switch off when the selected time runs out.

Automatic Switch Off-when the water runs out the aroma diffuser will automatically switch off.

## **ACCESSORIES**







Measuring cup

## SETTING UP - OPERATING INSTRUCTIONS

NB - Do not attempt to pour water into the tank through the top opening



1. Lift off the cover.



2. Use the measuring cup to add the water into the water tank. DO NOT fill the water beyond the MAX level mark in the tank. Diffuser will not work if filled beyond the MAX level mark



3. Add 3-5 drops of essential oil (optional).



## 4. Replace the top cover

### 5. Connect the power adaptor.





#### 6. Settings

POWER O: Touch this button to turn on and off the unit.

ALARM CLOCK®: Touch the button to turn on and off the function. Long press® to enter setting mode (the LED time display will flicker). Touch to set the Minutes and touch® to set the Hours. After you set the expected time, long press® to confirm and complete alarm clock setting. When the clock reaches the time you set, the alarm will sound for 60 seconds and the diffuser will begin to work with the LED light on. If there is no water in the tank the product will automatically enter into standby mode.

LIGHT . Touch this button to set the light model. Touch the button repeatedly to select desired lighting mode or to turn lighting off. The setting order is: Auto changing colour / red / green / blue / OFF.

RUNBACK TIMER O: Touch this button to set the desired operating time. Touch the button repeatedly to change the operating timer setting or to turn it off. The timer setting (minutes) order is: 30 / 60 / 120 / 180 / OFF.

24HR CLOCK DISPLAY ②: Long press ③to enter 24Hr time setting mode (the LED time display will flicker). Touch ♣ to set the Minutes and touch ⊚to set the Hours. After you set the correct time, long press ③ to confirm and complete the time setting.

#### NB - After you are finished using the appliance - OR - At least every 3 days

7. Turn the product off, disconnect the power supply and lift off the top cover



8. Drain and rinse the water tank thoroughly to remove any sediment and dirt. Wipe it clean and dry with a soft clean cloth or paper towel.



When you have finished using the appliance / do not intend to use it again for a prolonged period of time please store the product and power supply safely away for future use.

**Note:** The backup battery is used solely to maintain the 24Hr clock time when the product is disconnected from the mains, the diffuser function will not operate under this battery power, the product must be connected to its live power supply in order to operate normally.

To activate the backup battery please pull out the insulated film strip located at the back of the product (see diagram on the right) to maintain the 24Hr clock time when the product is disconnected from the mains. By removing the insulation tab you will activate the backup battery for the clock function. To save battery life we advise that you should keep the tab and refit it when the product is going to be unplugged for a long period of time. If you are going to continuously use this product we recommend that you leave this strip in place to conserve the battery until it may be needed. (Battery is not replaceable or covered by guarantee).



#### USEFUL INFORMATION ON THE USE AND HANDLING OF ESSENTIAL OILS.

Please kindly follow closely the recommendations listed below for the proper use of essential oil to avoid causing malfunction/ damage to the product or cause harm to the users.

- \* Use 100% natural essential oil.
- \* Put 3~5 drops of essential oil into 100ml of water. Do not exceed the suggested amount. Clean the water tank thoroughly after each use to remove residue. DO NOT IMMERSE THE PRODUCT IN WATER
- \* Do not directly apply undiluted oil on to your skin or swallow it.
- \* Do not allow the oil to come into contact with your skin, if it does wash it off immediately with water. Should you ingest / swallow any you should seek medical help immediately.
- \* The water tank and the tank cover are made of oil-proof materials. Other parts may be dissolved / damaged by some oil components. Take care not to spill them outside the water tank.
- \* Some kinds of aroma oil are not very soluble in water and tend to remain in the water tank. Therefore, clean the water tank regularly.
- \* Clean the water tank for every oil change. If the oil previously used is not completely removed, the aroma mixture may release an offensive odour or may form a residue on the water or the tank surface.
- \* Ensure the oil does not get into your eyes. Should it happen, wash your eyes immediately with water. Consult a doctor, should irritation persist.
- \* If you feel unwell while using the product, turn off the device immediately.
- \* Pregnant women, elderly people, young children or people with chronic diseases may be more sensitive to the scent. If they feel unwell, stop using immediately.
- \* Store essential oil in a dark cool place with the cap tightly closed and out of reach of children and pets.
- \* Observe the expiration date of the essential oil, within one year after first opening (within six months for citrus).







**Recycling:** For electrical products sold within the European Community. At the end of the electrical products useful life it should not be disposed of with household waste. Please recycle where facilities exist.

Check with your Local Authority or retailer for recycling advice in your country.

### After Sales Service and Extended Guarantee

Your product is guaranteed for 1 year from the date of purchase. The 1 year guarantee is extended for an additional 2 years when you register the product with Dimplex, within 28 days of purchase. If you do not register the product with Dimplex within 28 days, your product will remain guaranteed for 1 year only.

Within the extended guarantee period we undertake to repair or exchange this product free of charge providing:

- a) Proof of purchase such as a sales receipt should be provided, showing that the appliance was bought within the 36-months prior to registering the defect/fault.
- b) The appliance was correctly installed and operated in accordance with the manufacturer's instructions and used solely for domestic purposes.
- c) The defect/ fault was not as a result of accident, misuse, unauthorised modification or inexpert repair and is not solely because the backup battery (battery back up not covered by guarantee) no longer works when the product is disconnected from the mains.

Your rights under this guarantee are additional to your statutory rights, which in turn are not affected by this guarantee.

To validate your extended guarantee register with us online at http://register.dimplex.co.uk N.B. Each qualifying product needs to be registered with Dimplex individually.

Please note that the extended guarantee is only available in the UK and Ireland

If after following these steps your product still does not operate you should return it to your point of purchase.

Please do not return a faulty product to us as this may result in loss or damage and delay in providing you with a satisfactory service.