

CERAMIC LOG FUEL EFFECT INSTALLER AND OWNER GUIDE

THIS GUIDE IS FOR FITTING THE CERAMIC

LOG FUEL EFFECT TO THE

MODEL 944 & 944 RC

IMPORTANT

THIS GUIDE MUST BE PLACED INSIDE OR ATTACHED TO THE INSTALLER AND OWNER GUIDE SUPPLIED WITH THE STOVE. IT MUST BE LEFT WITH THE OWNER.

THIS GUIDE MUST BE READ IN CONJUNCTION WITH THE INSTALLER AND OWNER GUIDE SUPPLIED WITH THE STOVE.

INSTALLER AND OWNER GUIDE

All rights reserved. No part of this publication may be reproduced in any material form (including photocopying), stored in any medium by electronic means (including in any retrieval system or database) or transmitted, in any form or by any means, whether electronic, mechanical, recording or otherwise, without the prior written permission of the copyright owner.

Applications for the copyright owner's permission to reproduce any part of this publication should be made, giving details of the proposed use, to the following address: The Marketing Communications Manager, GDC Group Ltd., Millbrook House, Grange Drive, Hedge End, Southampton, SO30 2DF. UK.

Warning: Any person who does any unauthorised act in relation to a copyright work may be liable to criminal prosecution and civil claims for damages.

Valor, GDC Group Ltd., Millbrook House,
Grange Drive, Hedge End, Southampton,
SO30 2DF. UK

www.valor.co.uk

Because our policy is one of constant development and improvement, details may vary slightly from those given in this publication

INSTALLER AND OWNER GUIDE

SAFETY

This product uses fuel effect pieces containing Refractory Ceramic Fibres (RCF), which are man-made vitreous silicate fibres. Excessive exposure to these materials may cause irritation to eyes, skin and respiratory tract. Consequently, it is important to take care when handling these articles to ensure that the release of dust is kept to a minimum. To ensure that the release of fibres from these RCF articles is kept to a minimum, during installation and servicing we recommend that you use a HEPA filtered vacuum to remove any dust and soot accumulated in and around the stove before and after working on the stove. When replacing these articles we recommend that the replaced items are not broken up, but are sealed within a heavy duty polythene bag, clearly labelled as RCF waste. RCF waste is classed as a stable, non-reactive hazardous waste and may be disposed at a landfill licenced to accept such waste. Protective clothing is not required when handling these articles, but we recommend you follow the normal hygiene rules of not smoking, eating or drinking in the work area and always wash your hands before eating or drinking.

This appliance does not contain any component manufactured from asbestos or asbestos related products.

FITTING THE CERAMIC LOG FUEL EFFECT

The ceramic fuel effect may cause staining / discolouration to decorative surfaces. It is therefore advisable to protect decorative surfaces.

The detail painted on the ceramic fuel effect may be slightly different to that shown.

1. Place the ceramic base in the burner compartment. The bottom rear face of the base should rest on the angled ledges at the back of the burner compartment.

The bottom front recess edges on the base should locate against the back of the burner fixing brackets (See figure 1) so that the ceramic base is not covering the burner and it is secured from any further movement forward.

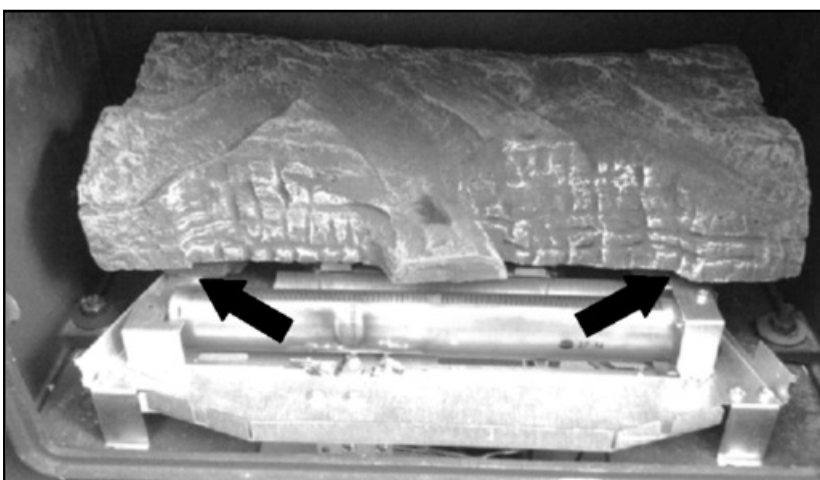


Figure 1. Ceramic base location

INSTALLER AND OWNER GUIDE

2. Place the front ceramic log in position as shown in figure 2a. The front ceramic log should touch the front of the burner module (See figure 2b).

Note: It is important that the front ceramic log is positioned correctly and do not cover the burner ports in any way.

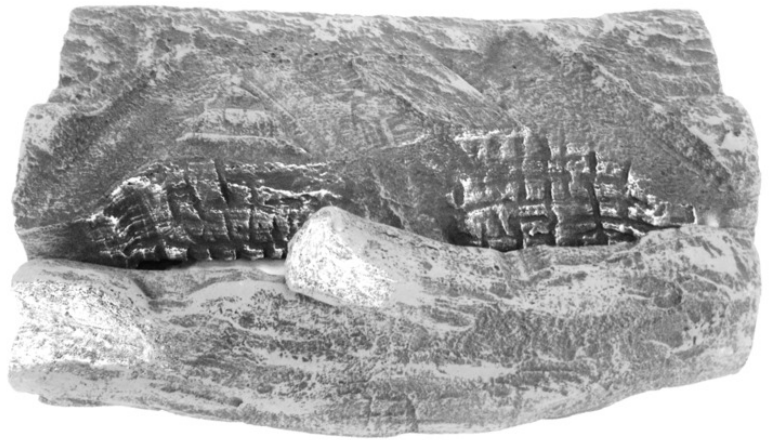


Figure 2a. Front log location



Figure 2b. Front log location on burner module

3. Place log '1' in the centre of the rear matrix so that the flat section of the log rests in the recess of the rear matrix as shown in figure 3.

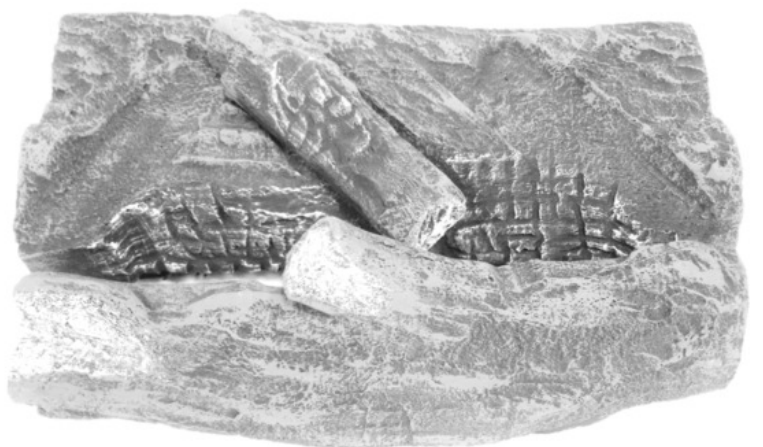


Figure 3. Placement of log '1'

INSTALLER AND OWNER GUIDE

4. Place log '2' to the right of log '1' so that it is resting in the recess of the front log, ensuring there is a gap between log '1' and log '2' as shown in figure 4.



Figure 4. Placement of log '2'

5. Place log '3' to the right of log '2' as shown in figure 5 so that it is seated in the recess of the rear matrix.



Figure 5. Placement of log '3'

6. Place log '4' so that it is seated in the recess on the left side of the rear matrix as shown in figure 6.



Figure 6. Placement of log '4'

INSTALLER AND OWNER GUIDE

7. Place log '5' in the recess of the front log, as well as resting on the recess of log '1' as shown in figure 7.



Figure 7. Placement of log '5'