


Apollo Electronic Radiant Panel Heater

APL100 (1000W)

 IP24

Issue 3 January 2015

THESE INSTRUCTIONS SHOULD BE READ CAREFULLY AND RETAINED FOR FUTURE REFERENCE

IMPORTANT SAFETY ADVICE

- When using electrical appliances, basic precautions should always be followed to reduce the risk of fire, electrical shock, and injury to persons, including the following:
- **WARNING THE SURFACES OF THIS HEATER CAN BE HOT**
Momentary contact with any part of the heater should not cause injury. However, aged or infirm persons or young children should not be left unsupervised in the vicinity of the heater unless a suitable guard is fitted
- **IMPORTANT** – If this heater is installed in a room containing a bath or shower, it should be so installed that switches and other controls cannot be touched by a person using a bath or shower – to comply with this requirement see ‘Lock the Control Cover’ section on page 2.
- If you use this heater in conjunction with an external thermal control, a programme controller, a timer or any other device which switches the heat on automatically, observe all safety warnings **AT ALL TIMES** since a fire risk exists when the heater is accidentally covered or displaced
- The installation of this product should be carried out by an electrician or competent person and be in strict accordance with the current IEE Wiring Regulations and relevant Building Regulations
- This heater must not be mounted within 150mm of curtains and other combustible materials or 100mm from a shelf or overhang
- NEVER cover or obstruct the front panel in any way
- DO NOT cover the heater – Do not place material or garments on the heater or obstruct the air circulation around the heater
- Before connecting the heater check that the supply voltage is the same as that stated on the heater
- The heater must be installed in accordance with these instructions
- The heater must be mounted using the wall bracket supplied. The heater should only be operated in the upright position
- The heater should be positioned in accordance to the clearances stated in these instructions
- DO NOT locate this heater immediately beneath a fixed socket outlet

General



The compact Apollo radiant panel heaters is designed to provide comfortable radiant heat, with the added benefit of two rails for drying towels, in both domestic and commercial applications.

Wall Mounting / Installation

The heater should be positioned observing the minimum clearances stated around the heater.

The wall bracket supplied with the heater must be used

1. Remove wall mounting bracket from back of heater by de pressing the two spring latches at the top of the heater (see Fig.1)
2. Fix wall bracket securely to wall via the three or four holes in the bracket with the appropriate fixings for the wall type (see Fig.2)
3. Present heater to wall bracket and engage the two lower slots first. Then line up and push in the top two slots until the spring latches click in to place

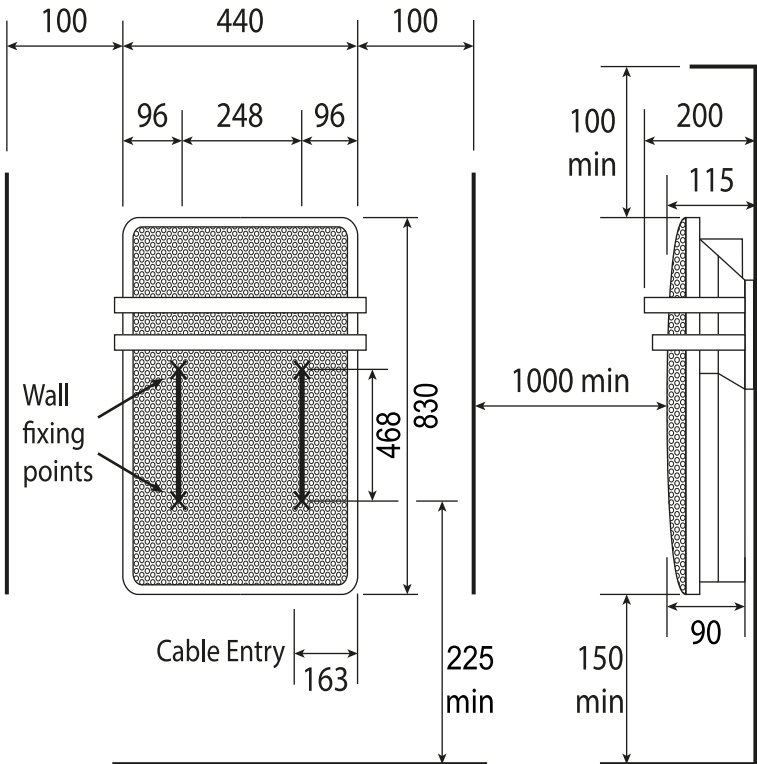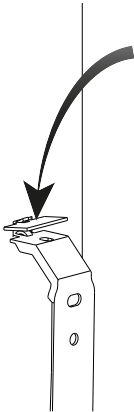

Weight: 7.7 (kg)

NB: Always allow a minimum clearance of 1000mm in front of the heater

Electrical

The wires in the mains lead are coloured in accordance with the following code:

GREEN & YELLOW	EARTH
BLUE	NEUTRAL
BROWN	LIVE
PILOT WIRE	BLACK

The heater is fitted with a length of flexible cable for connection to the fixed wiring of the premises through a suitable connection box positioned adjacent to the heater.

The supply circuit to each heater must incorporate a double pole isolating switch having a contact separation of at least 3mm.


Pilot Wire Connection

The BLACK control wire is designed to carry a signal from slot in or wall mounted Dimplex programmers. If, however a programmer is not being used, the pilot wire should be isolated in accordance with the current IEE Wiring Regulations.

Do **NOT** connect the BLACK pilot wire to earth.

Any 240V insulated cable may be used to link pilot wires around the ring main. A low signal current is used. Suitable connections would be either an additional single core wire marked or colour coded appropriately or use a 4 core cable throughout the ring main. Please refer to the relevant programmer installation and operating instructions for further details on pilot wire connection.

Operation

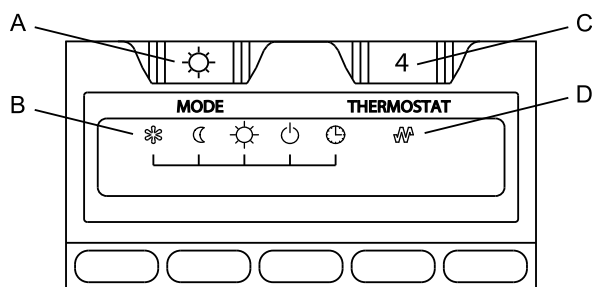

A - Function Selector
C - Thermostat

B - Function Display
D - Thermostat Indicator

Mode Selection Dial (A)

Use this rotary dial to select the function you require

Symbol	Function	Description
	Frost Protection	Heater will switch on to provide frost protection if the room drops below 5°C
	Economy (set back)	Heater will maintain a lower temperature level for background heating (comfort less 3.5°C)
	Comfort	Heater will maintain the temperature set on the thermostat dial
	Off	Heater will not function
	Programme	Heater will be controlled by a programming device

Note: If the programme function is selected but no programming device is being used, the heater will function in comfort mode.

The following Dimplex programmers are available:

MBS Slot in Receiving Cassette – Part No. RX9913

MBS Slot in Programming Cassette (Single Zone) – Part no. RX9912

Pilot Wire Programming Cassette (Single Zone) – Part no. RX9911

Function Display (B)

Neon indicators adjacent to the function selector will light to show the mode selected.

Setting the Comfort Temperature (C)

Use the thermostat dial (C) to select your desired room temperature. The markings on the dial are in approximately 3.5°C increments. The settings are numbered 1-10 (MAX). The quickest way to find your comfort setting is to turn the thermostat dial to the maximum setting. When your ideal comfort level is achieved, turn the thermostat dial down until the thermostat switches off (the neon light will go out) Leave at this setting and the heater will automatically maintain the desired temperature.

Thermostat Light (D)

The neon indicator below the thermostat will light when the heater is operating.

Background (set back)

The economy setting is preset at – 3.5°C this is the amount the room temperature will be allowed to drop when you switch the function selector from comfort to economy.

Reverting to comfort mode will automatically cause the temperature to rise to the setting on the main thermostat.

Advice on Using your Heater

- For greatest economy switch the heater to economy (setback) if you leave the room for long periods of time or before going to bed.
- Do not set the comfort level too high. Even small reductions on the thermostat setting can save a lot of energy.
- If you go away for a long period of time select the frost protection setting on the function dial or reduce the thermostat setting to a lower level.


Locking the Thermostat Setting (C)

If necessary you can lock the thermostat dial to a single setting or range.

To lock the settings, use a small pair of narrow nosed pliers to pull out the locking pins at the rear of the thermostat dial.

The following settings can be obtained:

- Single setting – Set thermostat dial to desired setting (eg no.6). Locate one pin directly opposite the setting required.
- Minimum setting – Set thermostat dial to desired setting (eg no.6). Locate one pin opposite the setting required and one hole to the left. (The thermostat will now be adjustable from 6-9 only).
- Maximum setting – Set thermostat dial to desired setting (eg no.6). Locate one pin opposite the setting required and one hole to the right. (The thermostat dial will now be adjustable from 1-6 only).
- Minimum - maximum setting – (eg no.2-4) Locate both pins and space apart until desired range is found.

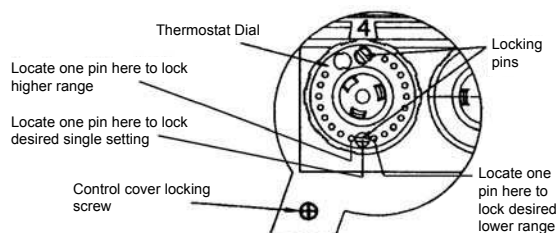

To Lock the Control Cover

A screw is provided to permanently lock the cover in position. It is located on the back of the control box, under the thermostat dial. Remove this and screw through the notch below the lifting tab into the plastic housing. (see also Fig.4 above)

Safety

A thermal cut-out will switch off the heater if, for any reason, it overheats. Should the cut-out operate, switch off the mains supply and allow the heater to cool. Once the heater has cooled sufficiently remove the obstruction and switch on the mains supply.

Cleaning

Before cleaning your heater, switch off the heater and allow it to cool. Disconnect the electricity supply to the appliance. The outside can be cleaned by wiping it over with a soft damp cloth and then dried. Do not use abrasive cleaning powders or furniture polish, as this can damage the surface finish. To release the heater from the wall bracket for cleaning or redecoration, depress latch on both brackets and hinge the product forward.

After Sales Service

Your product is guaranteed for two years from the date of purchase. Within this period, we undertake to repair or exchange this product free of charge provided it has been installed and operated in accordance with these instructions.

Your rights under this guarantee are additional to your statutory rights, which in turn are not affected by this guarantee.

Should you require after sales information or assistance with this product please go to www.dimplex.co.uk where you will find our self help guide by clicking on "After Sales" or ring our helpdesk on 0844 879 3588 (UK) or 01 842 4833 (R.O.I.).

Spare parts are also available on the website www.dimplex.co.uk Please do not return a faulty product to us in the first instance.

Please retain your receipt as proof of purchase.

This appliance complies with European Safety Standard EN 60335-2-30, and European Standards EN 55014, EN 60555-2 and EN60555-3 for Electromagnetic Compatibility. These standards cover the requirements of the EEC Directives 73/23 and 89/336.

Dimplex, a division of GDC Group Limited
Millbrook House
Grange Drive
Hedge End
Southampton
SO30 2DF

UK Customer Help Line (8am-6pm Mon-Fri; 8:30am-1pm Sat.)
Customer Services: Tel: 0844 879 3588
Fax: 0844 879 3581
E-mail: customer.services@dimplex.co.uk
Web-site: www.dimplex.co.uk
Republic of Ireland Tel: 01 842 4833